

Osaki

UNRIVALED POWER AND COMPLETE CONTROL.

OTAMIC MASSAGE GUN



INSIDE THE PACKAGE

4 Heads



Flat head



Ball head



Bullet head



Fork head



Charger



Massage gun

VARIETY OF MASSAGE HEADS



Flat Head:

is a mid-intensity massage that localize the massage and can be used mid to large muscles.



Ball Head:

is a mildest massage option, designed to massage the large muscles groups.



Bullet Head:

is a highly concentrated massage intended to be applied to pressure points, pinpoint tight muscles and ligaments around the joints.



Fork Head:

is a concentrated massage designed to target the near the spine.

DISCLAIMER

OPERATION

To initiate the use of the massage tool, switch the button located on the bottom of battery handle to the ON position.

Then located back of the massage tool press the center button and light will appear and the massage head will be activated.

Press the button again to increase the strength of the massage. There multiple settings for the intensity.

To stop the massage press and hold down the button until the massage tool turns off. The light on the massage tool should be off to indicate the massage tool is in the OFF setting.

When charging the battery, the battery light will flash. Once the unit is fully charged the light will stay solid.



SAFETY ADVICE

Read all safety advices and instructions.

Non-observance of safety advices and instructions may cause electric shock, fire and / or bad injuries.

KEEP ALL SAFETY NOTICES AND INSTRUCTIONS FOR FUTURE REFERENCE!



WARNING!

DANGER TO LIFE AND RISK OF ACCIDENT FOR INFANTS AND CHILDREN!

Never leave children unsupervised with the packaging materials.

The packaging material poses a suffocation hazard. Children frequently underestimate the dangers.

Please always keep the product out of the reach of children.

DISCLAIMER



CAUTION!

This product is not a toy for children! Children are not aware of the dangers associated with handling electrical products.

This product can be used by children aged from 18 years and above and persons with reduced physical, sensory or mental capacities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the product in a safe way and understand the hazards involved. Children should not clean or perform user maintenance unsupervised.



CAUTION

The product has a heated surface. People who are insensitive to heat must be careful when using it.



WARNING!

Avoid the hazard of life by electric shock:

- Do not insert needles or pointed objects into the product.
- Never immerse the product into water or any liquid.

- Never touch the product, or the mains power adaptor with wet hands or use it in very humid environments.
- Only use the provided mains power adaptor as described in Technical Data section.
- Make sure that the details on the rating label are in conformity with your mains voltage.
- In the event of malfunctions, remove the mains power adaptor from the mains socket.
- Do not open the product or attempt to repair it yourself.

DEFECTIVE PRODUCTS SHOULD ONLY BE REPAIRED BY QUALIFIED PERSONAL.

- Always remove the mains power adaptor from the mains socket after each use and before clean the product.
- Keep the power cord away from hot surfaces, sharp edges and mechanical forces.
- Never let the power cord become a trip hazard, that no one can get tangled in it or tread on it.
- Allow the product to cool down before moving it to a different location.

DISCLAIMER



WARNING! HAZARD OF FIRE!

- Do not operate the product close to or below curtains, wall cupboards or other inflammable materials.
- Do not use the product on swollen, burnt, inflamed, diseased or injured regions of the skin/ body. If in doubt, obtain medical advice before using the product.
- Never use the product if you have injuries or pain in the neck.

STORAGE

- Let the product completely cool down before storage.
- Do not place other objects on top of the product.
- If the product is not used for a certain period of time, store the product in a clean and dry location.

DISPOSAL

The packaging is made entirely of recyclable materials, which you may dispose of at local recycling facilities.



Observe the marking of the packaging materials for waste separation, which are marked with abbreviations (a) and letter (b) with following meaning: 1-7: plastics / 20-22: paper and fibreboard / 80-98: composite materials.



The product and packaging materials are recyclable, dispose them separately for better waste treatment. The Triman logo is valid in France only.



Contact your local refuse disposal authority for more details of how to dispose of your worn-out product.

To help protect the environment, please dispose of the product properly when it has reached the end of its useful life and not in the household waste. Information on collection points and their opening hours can be obtained from your local authority.

WARRANTY

The product has been manufactured to strict quality guidelines and meticulously examined before delivery.

Osaki