



### ⚠ WARNING

Always read and follow the manufacturer's instructions, labels, and warnings before use. Failure to do so can result in serious injury or death. The purpose of the Beam-Lock Beam Anchor Wear Pads are to extend the product service life and facilitate the smooth operation of the Beam Anchor when sliding along beams. Inspect before each use. See Beam-Lock Beam Anchor user manual, MANC27, for inspection requirements. Remove from service if inspection is failed. Contact FallTech for compatibility concerns.

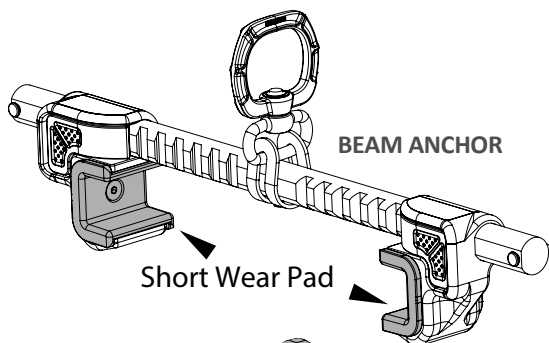

**ITEM # 7542A**  
**Replacement**  
**Short Wear Pad**


\* Includes 2 wear pads & 2 screws.

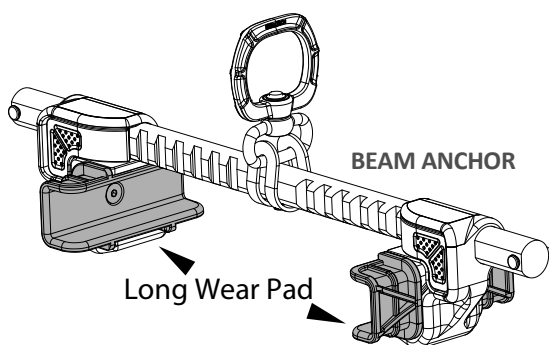

**ITEM # 7542B**  
**Replacement**  
**Long Wear Pads.**

\* Includes 2 wear pads & 2 screws.


Beam Anchor shown  
without Wear Pads.

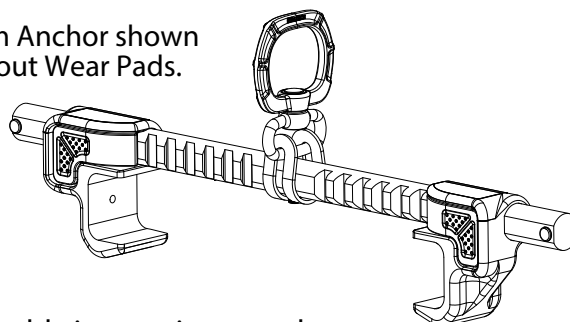

Assembly instructions are the same  
for both Long and Short Wear Pads.


#### STEP 1

Slide Wear Pads onto  
Beam Anchor.

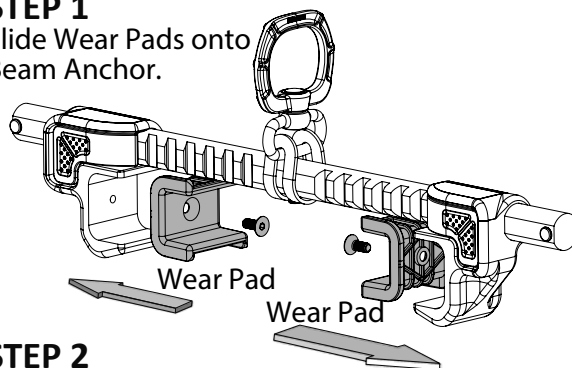

#### STEP 2

Insert and tighten  
Wear Pad Screws.

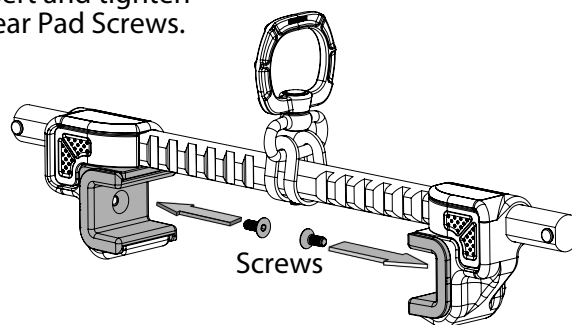

#### STEP 3

Final assembly.

