




For using RM-C1.




Before operating your RM-C1, please read this manual thoroughly and keep it for future reference.

### ■ Features

- Supports the CANON handy video camera with the LANC remote control.


### ■ Parts Names and Functions/Outsideview and Dimensions

- ① (LANC Connector 1/2/3) 3 ×  $\phi$  2.5 Mini-mini Jack  
Connect to the LANC connector of the camera. Able to connect to up to three cameras. Even if the camera is connected to any 1-3 connector, all cameras function the same at the same time.
- ② (Connector 4 : LANC 1 series output) 1 ×  $\phi$  2.5 Mini-mini Jack  
Used for connection to other LANC remote controller, which can control only the camera connected to the LANC connector 1. The remote controller which can connect to this connector is RM-C1.
- ③ (ACCESS)1/2/3 LED Camera Connection Indication LED  
Lights up on the connection to a camera with the LANC connector 1/2/3 each. When it becomes the tape near end or the low battery during recording, the LED goes on and off.
- ④ REC Button REC Start/Stop switch
- ⑤ LOCK ON/OFF REC button lock switch  
When the LOCK switch is ON, the REC button does not function.
- ⑥ ZOOM W/T Knob W = zoom to Wide angle / T = zoom to Tele  
Turning the knob to zoom the camera zoom lens. The zooming speed varies according to the rotating angle of the knob.
- ⑦ LO/HI Switch Zoom speed select switch HI =High speed /LO =Low speed
- ⑧ FOCUS N/F Knob N = Near / F = Far  
Adjust the focus of the camera lens.
- ⑨ IRIS C/O Knob C = CLOSE / O = OPEN  
Adjust the iris of the camera lens.
- ⑩ IRIS NORMAL/REVERSE and WHITE BALANCE SET/LOCK Select Switch  
(up)SET : WHITE BALANCE SET button  can adjust the WHITE BALANCE.  
IRIS C/Orotatory direction of the IRIS C/O knob is the reverse direction.  
(mid)LOCK/REVERSE : WHITE BALANCE button cannot function.(locked)  
IRIS C/Orotatory direction of the IRIS C/O knob is the reverse direction.  
(down)IRIS NORMAL : WHITE BALANCE button cannot function.(locked)  
IRIS C/Orotatory direction of the IRIS C/O iris knob is a normal direction.
- ⑪  WHITE BALANCE SET Button  
When the WHITE BALANCE SET/LOCK Select Switch is set to the SET position and press this button, the WHITE BALANCE adjustment of the camera is enabled and it adjusts the WHITE BALANCE automatically.
- ⑫ MENU Button When the MENU button is pressed, the MENU is displayed on the viewfinder screen.
- ⑬  Joystick The joystick moves the cursol up, down, left and right on the screen. Pressing this button set the menu item or value.
- ⑭ 1/2/3/4/5/6 Assign Button  
Each of the 1/2/3/4/5/6 memories can stored the preset functions.  
When each button is pressed,each preset function works.

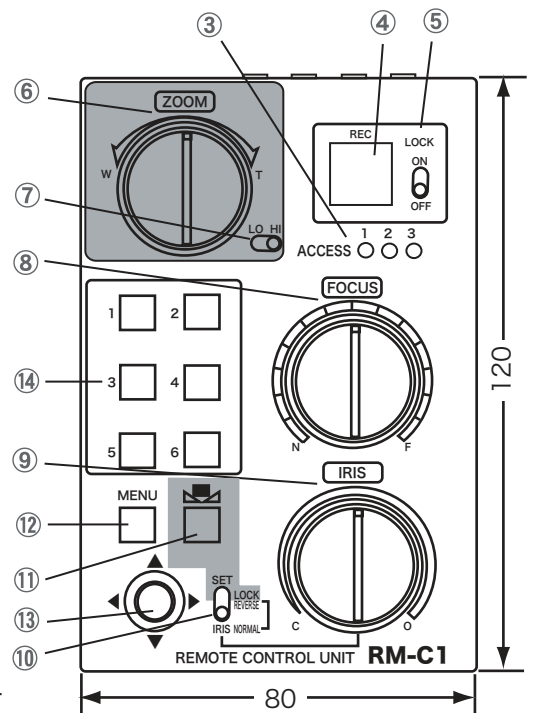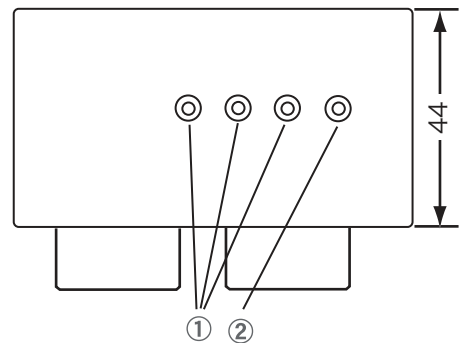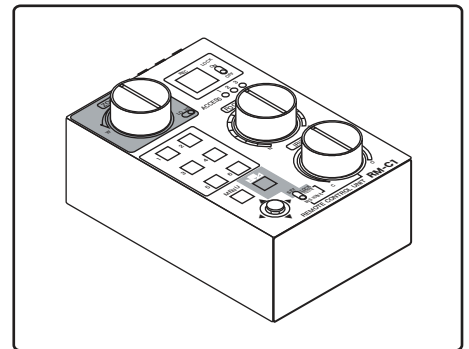


Attention: This product performs the remote control such as camera lenses by each operation, but it may not support some of functions of the camera to use. Because this product does not have a function to display answerback about the operating conditions of each apparatus, please confirm the operating conditions of each apparatus to watch the state or the indication of them.

 $\phi$  2.5 Mini-mini-jack




$\phi$  2.5 Mini-mini-plug1

 


## ■ Connection/Use

- ◎ Connect and use three cameras.  
The three camera can be controlled the same at the same time.

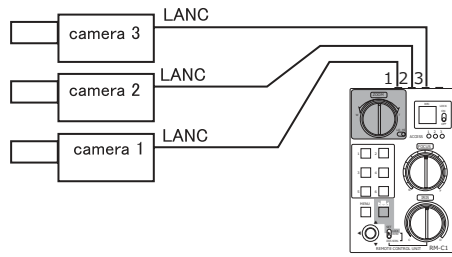

- ◎ Each of the three camera is controlled with the RM-C1 each, and the one RM-C1 controls all of the three cameras the same at the same time.

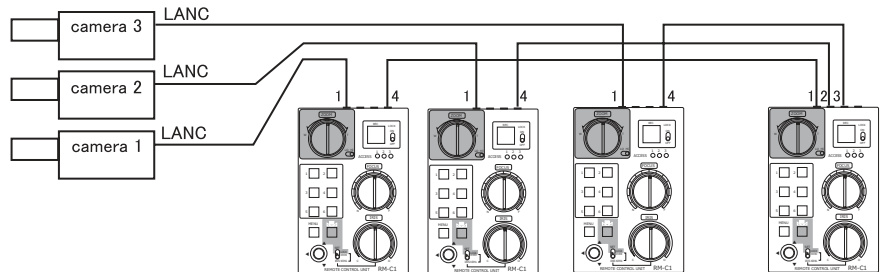


## ■ Specifications

Input/Output/Functions	
For the cameras with the LANC connector. Up to three cameras can be connected and controlled.	
LANC Connector 1/2/3	3 × $\phi$ 2.5 3P Mini-mini Jack : for connection to LANC camera
LANC Connector 4	1 × $\phi$ 2.5 3P Mini-mini Jack : for connection to LANC remote control RM-C1
REC Switch	Push Switch : REC ON(Start)/OFF(Stop)
LOCK ON/OFF Switch	Toggle Switch : LOCK ON(REC )/OFF(Stop)
ZOOM knob W/T	WIDE – TELE Zooming speed is variable according to the angle of rotation of the knob.
FOCUS Knob N/F	NEAR – FAR A change in the focus distance depends on the speed of rotating speed of the knob.
IRIS Knob C/O	CLOSE/OPEN Adjusts the IRIS.
IRIS Switch	Toggle Switch : AUTO iris adjustment/MANUAL adjustment
WHITE BALANCE Switch	Push Switch : Pressing this switch enables the auto white balance function of the camera.
MENU Switch	Push Switch : Pressing this switch displays the MENU on the viewfinder screen.
General	
Screw hole for Clamp Bracket	For fixing the Clamp Bracket STF-10(optional)
Dimensions(WxHxD)	approx. 80 x 120 x 44 mm (main body)
Weight	approx. 0.28 kg (main body)
Operating Temperature	0 °C ~ 40 °C
Storage Temperature	-20 °C ~ 60 °C
Accessories	
2.5 Mini-mini plug Cable/Operating Instructions	

**NOTE** Features, design and specifications are subject to change without notice.

## ■ Option

Clamp Bracket	STF-10	(approx. 0.45 kg) For fixing to the pan handle of the tripod
$\phi$ 2.5 Mini-mini plug Extention Cable		
Rack Mount Bracket	HS-REM1	For RM-C1 , able to mount up to 5 pieces max.

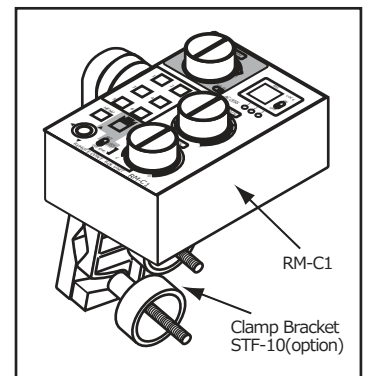

ACEBIL accepts no liability whatever for incidental damages arising out of the use or inability to use the product, including, but not limited to, damage to the camera, etc., corruption or loss of data, lost business revenue or suspension of business operations.  
ACEBIL accepts no liability whatever for damages arising from improper use not conforming to the instructions in the instruction manuals.