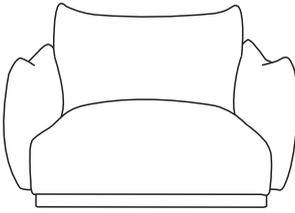
 
 



ITEM NAME/NOM D'ITEM: SEKIL ACCENT CHAIR
ITEM#/NO. ITEM:110475

PARTS LIST/LISTE DES PIÈCES


(1)	(2)	(3)
 <p style="text-align: center;">x1</p>	 <p style="text-align: center;">x4</p>	<p>A.  M6x15mm x12</p> <p>B.  4mm x1</p>

ASSEMBLY INSTRUCTIONS/INSTRUCTIONS D'ASSEMBLAGE


I

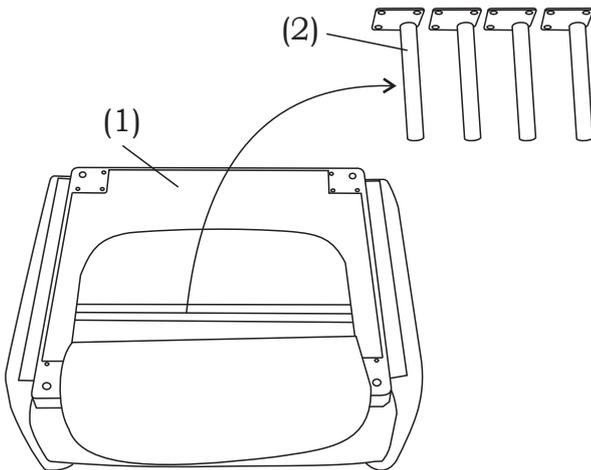


II

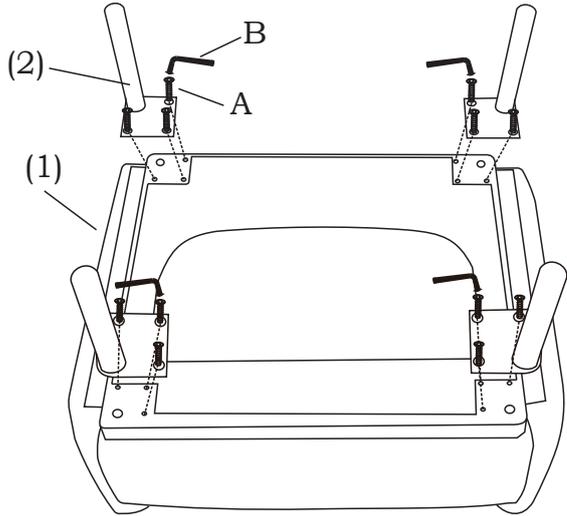

III

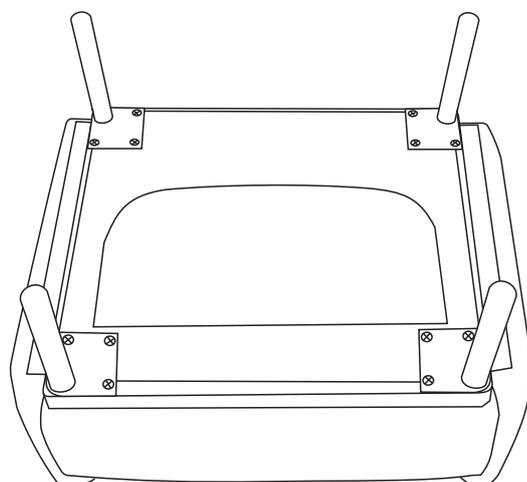

IV

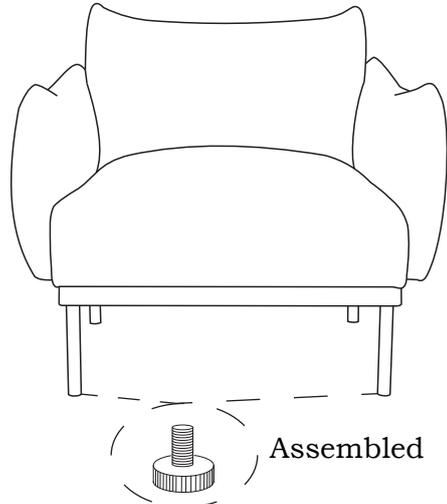

Assembled

Please use the attached adjustable footglides to level the chair on an uneven surface.

For missing parts or damaged parts, please call /
 Pour pièce manquante ou endommagée, veuillez appeler:

USA, Canada and Mexico: (866)-798-6663

AI-V1-G004-250716