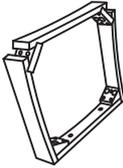
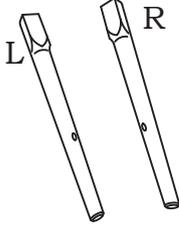




ITEM NAME / NOM D'ITEM : TUZKA DINING CHAIR
ITEM # / NO. ITEM : 110513

PARTS LIST / LISTE DES PIÈCES

(1)	(2)	(3)	(4)	(5)
				
X1	X1	X2	X2	X1
(6)				
A.  M6 x 80mm	X4	E. 	M6	X10
B.  M6 x 60mm	X4	F. 	M4x32mm	X5
C.  M6 x 35mm	X2	G. 	M4x38mm	X4
D. 	X10	H. 	M4 x 110mm	X1


ASSEMBLY INSTRUCTIONS / INSTRUCTIONS D'ASSEMBLAGE

Do not FULLY TIGHTEN the screws or nuts for any step until all are in place.

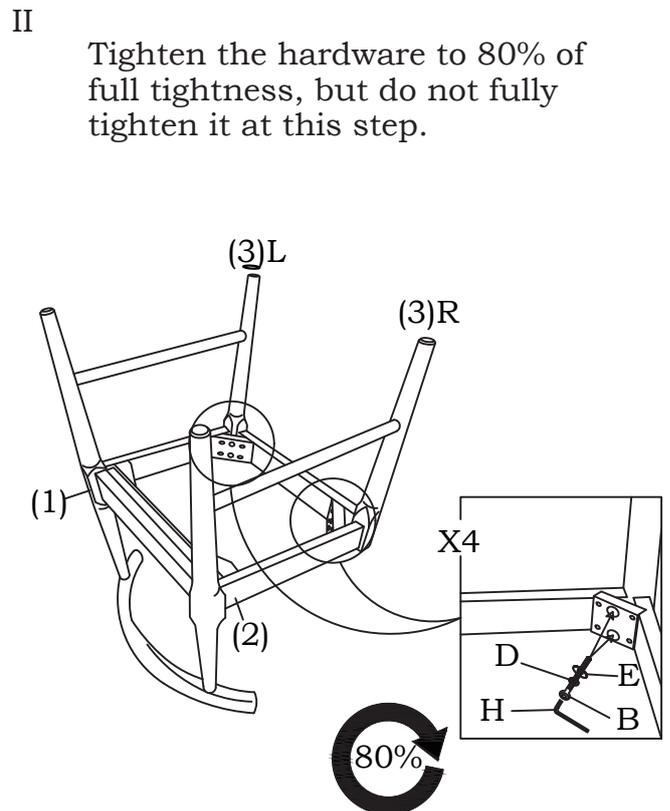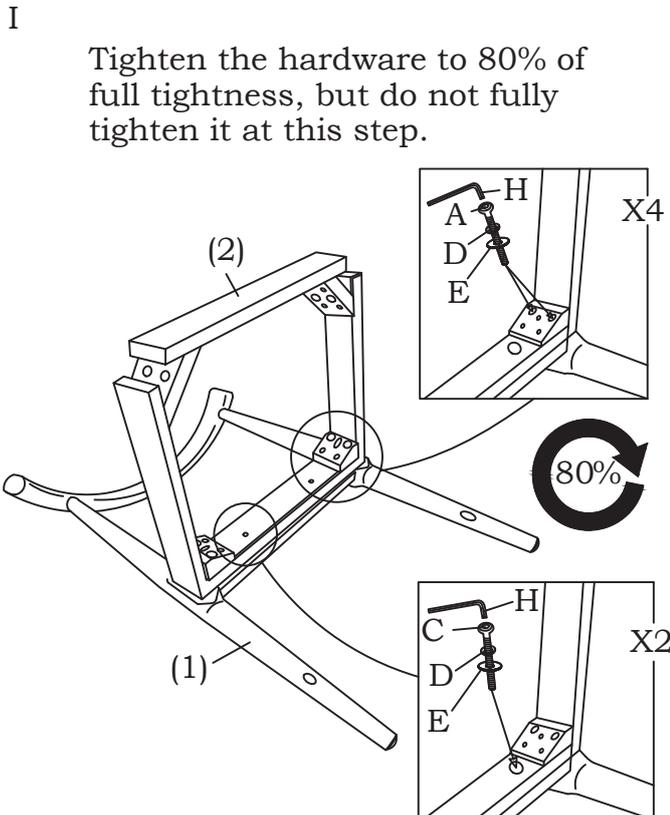


III

Flip the chair on the flat floor to level it before tightening the bolts.

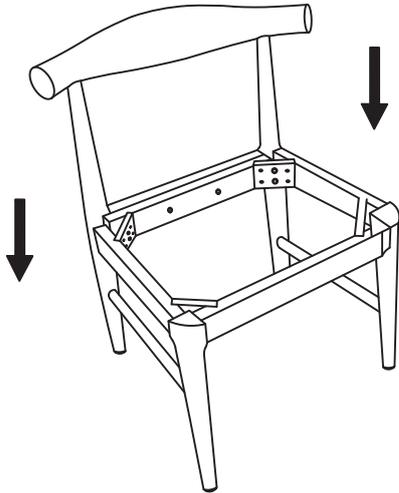


IV

Ensure that all hardware is tightened completely for this step.

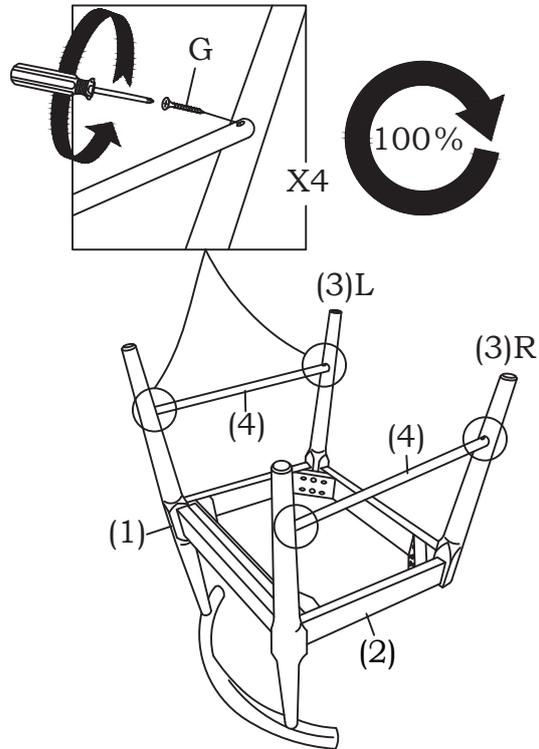

V

Ensure that all hardware is tightened completely for this step.

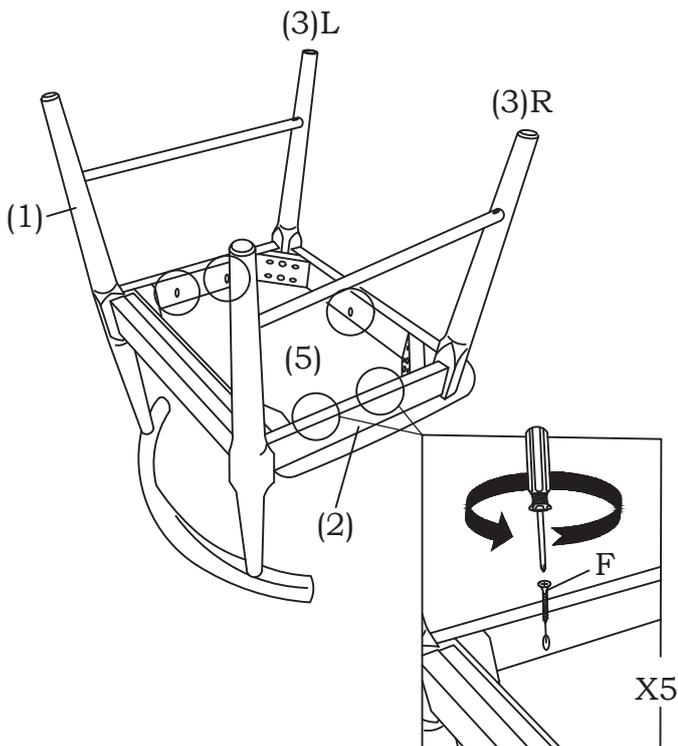

VI

