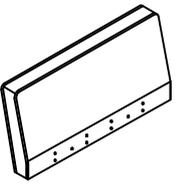
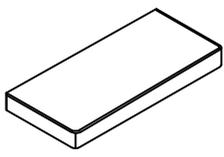
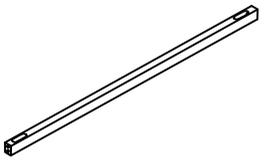


**ITEM NAME/NOM D'ITEM: ENCANTO LOVESEAT**  
**ITEM#/NO. ITEM: 110659**



## PARTS LIST/LISTE DES PIÈCES

(1)	(2)	(3)	(4)
			
x1	x1	x2	x2



A.  JCBC BOLT M6x50mm	x4	H.  WOOD DOWEL M8x30mm	x4
B.  JCBB BOLT M8x40mm	x10	I.  WOOD DOWEL M10x30mm	x2
C.  M6 SPRING WASHER	x4	J.  WOOD DOWEL M12x30mm	x2
D.  M8 FLAT WASHER	x10	K.  M4 ALLEN KEY	x1
E.  M8 SPRING WASHER	x10	L.  M5 ALLEN KEY	x1
F.  WOOD SCREW M4x38mm	x 4		

## ASSEMBLY INSTRUCTIONS/INSTRUCTIONS D'ASSEMBLAGE


Do not FULLY TIGHTEN the screws or nuts for any step until all are in place.

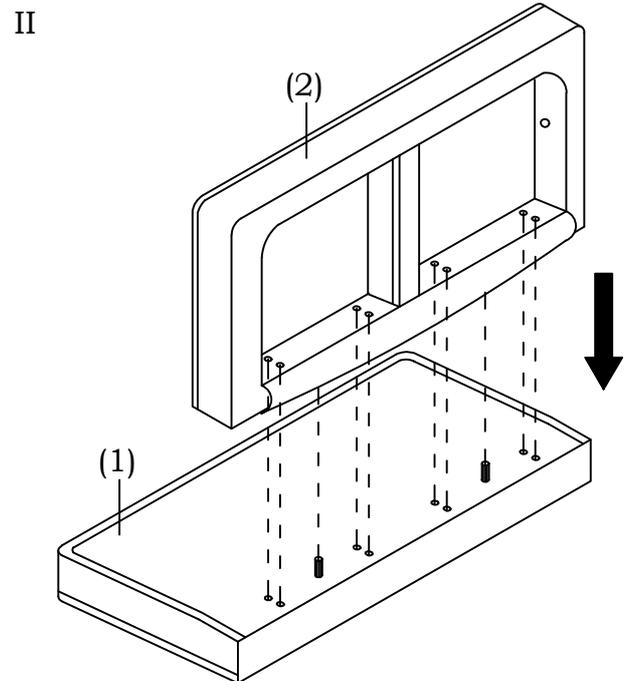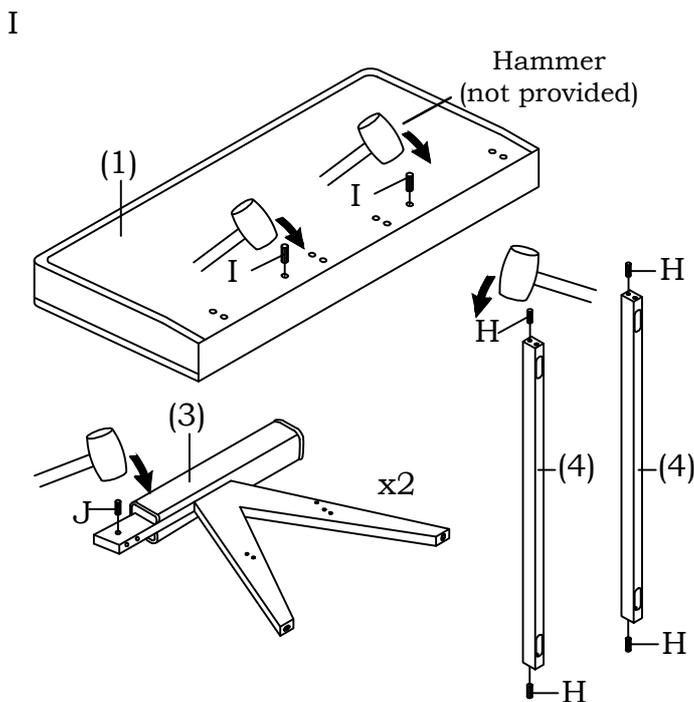

III

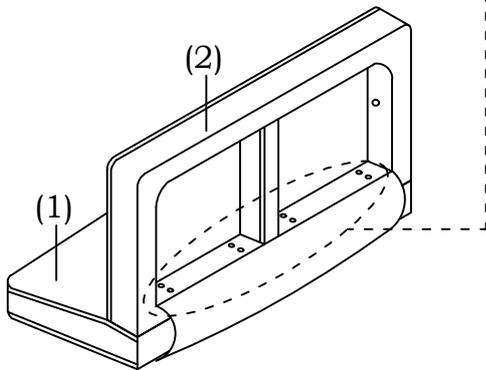
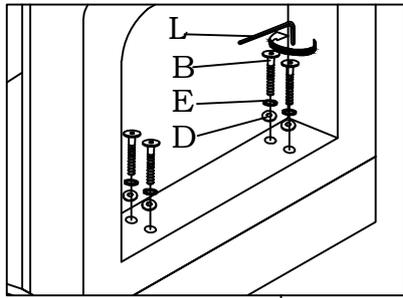


IV

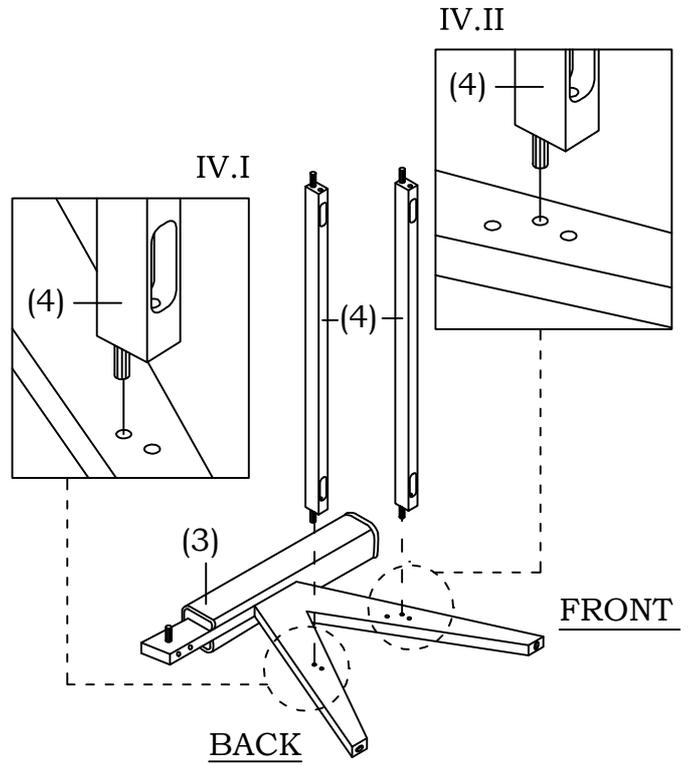


V


60% TIGHTEN

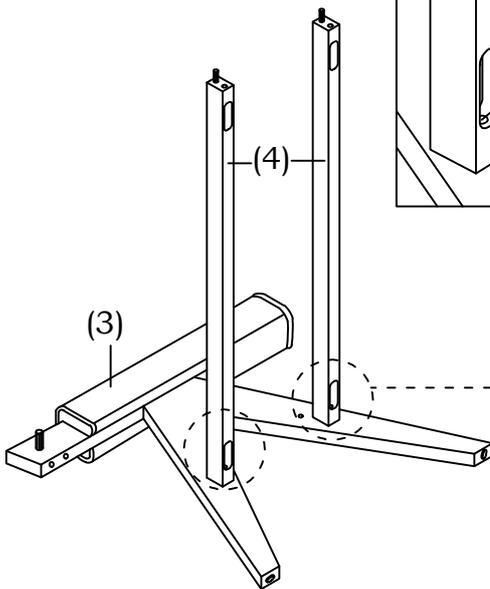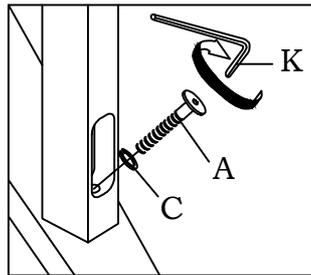

VI

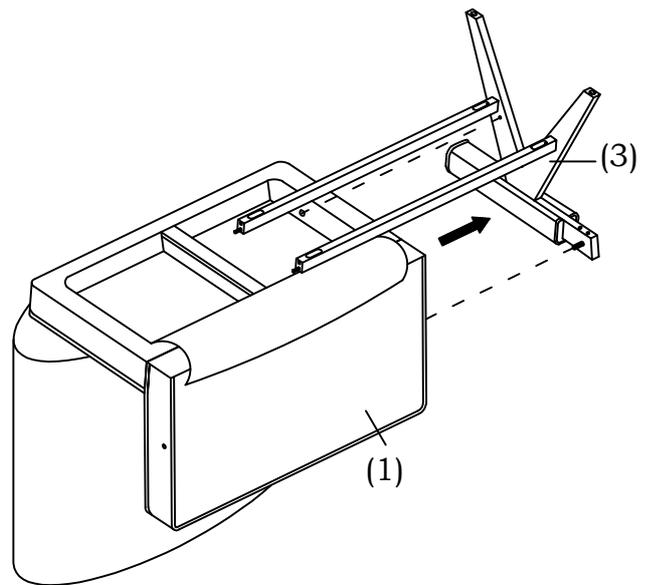


VII

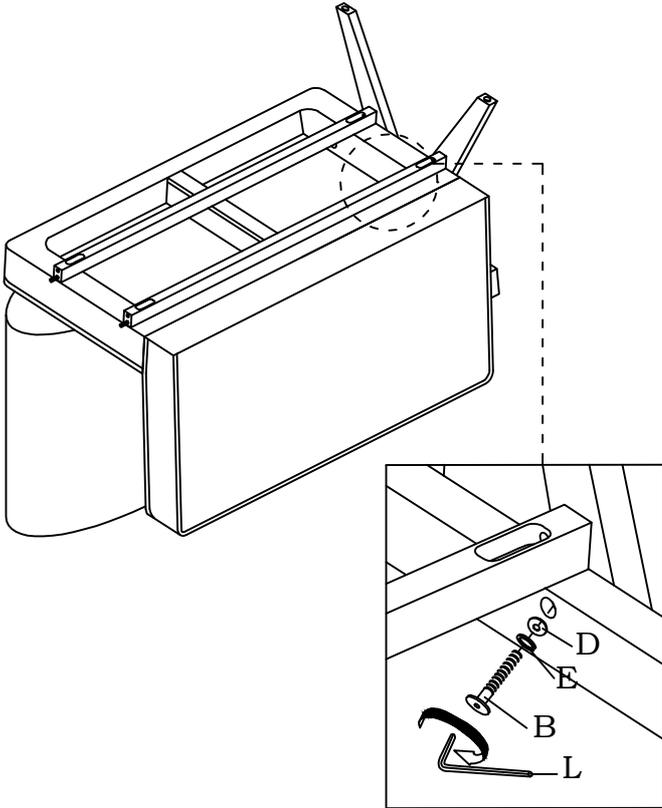


60% TIGHTEN

VIII

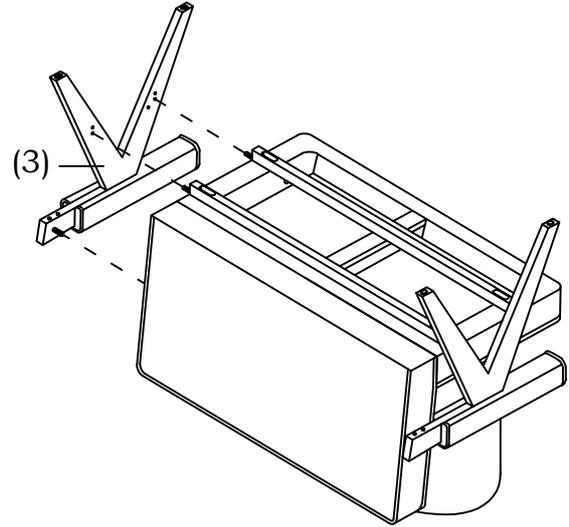


IX

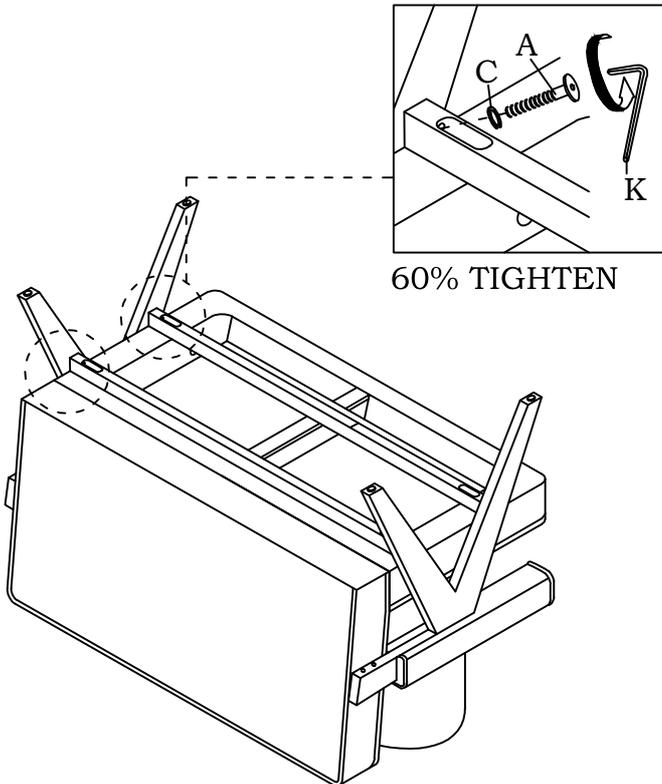

60% TIGHTEN


X

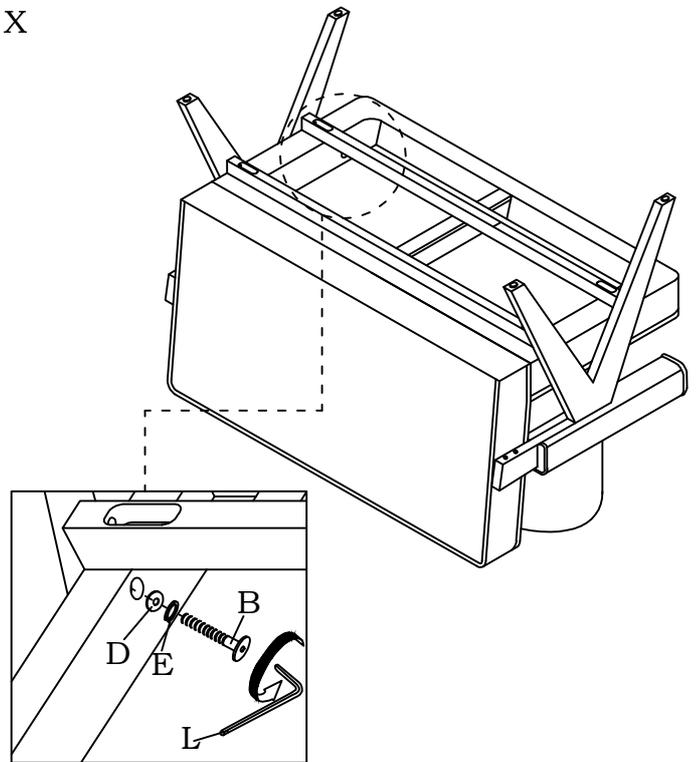


60% TIGHTEN

XI



Place the chair on a flat surface and adjust the alignment and balance of the legs. Then, please tighten the bolts from steps 5, 7, 9, and 10..

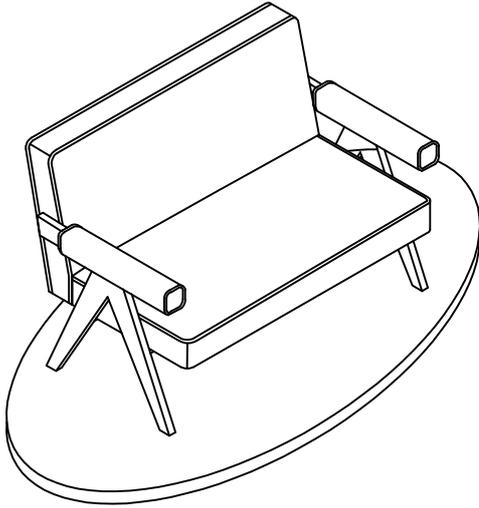

XII

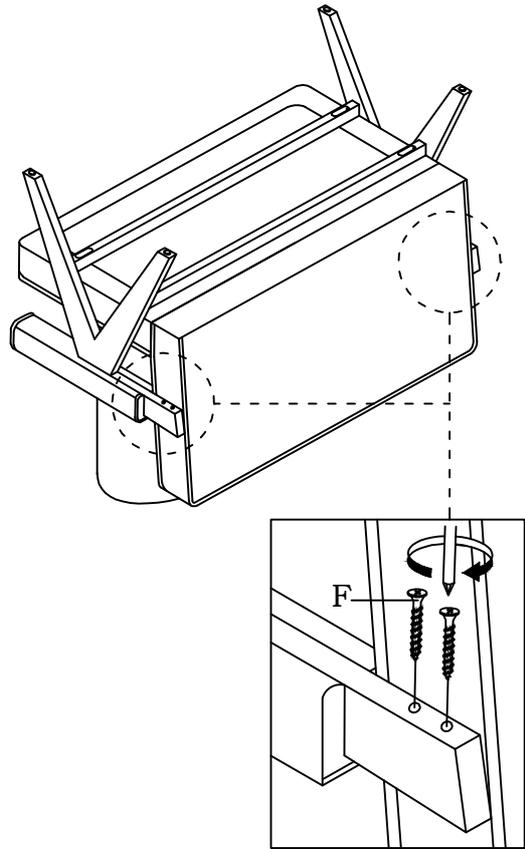

XIII

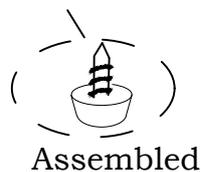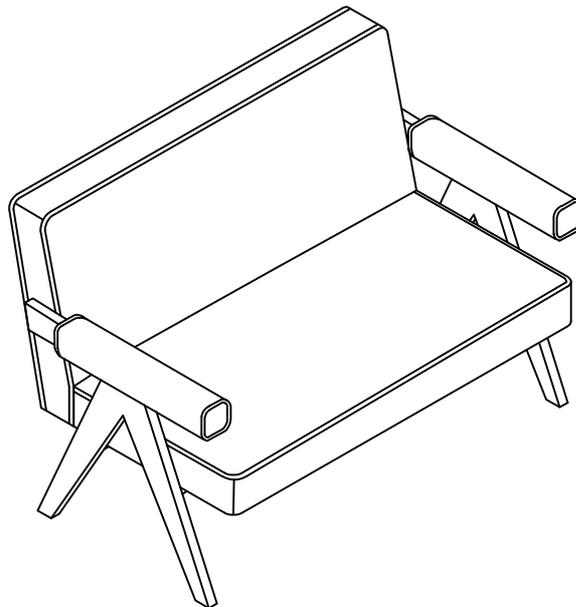

For missing parts or damaged parts, please call /  
Pour pièce manquante ou endommagée, veuillez appeler:

USA, Canada and Mexico : (866)798-6663

AI-V1-B009-250717