 
 
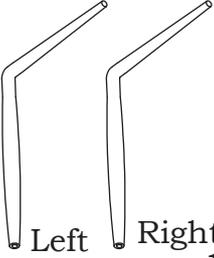
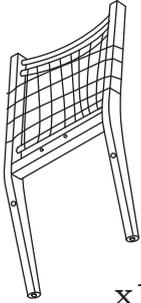


ITEM NAME/NOM D'ITEM: WEZLY DINING CHAIR

ITEM #/NO. ITEM: 110689,110690


PARTS LIST/LISTE DES PIÈCES

(1)	(2)	(3)	(4)	(5)	(6)
					<p>A.  M6x70mm x8</p> <p>B.  M6x35mm x4</p> <p>C.  M6 x12</p> <p>D.  M6 x10</p> <p>E.  38mm x12</p> <p>F.  M8 X 30mm x2</p> <p>G.  M14.5 x2</p> <p>H.  M6 x1</p>
x1	x1	Left Right x1	x1	x2	


ASSEMBLY INSTRUCTIONS/INSTRUCTIONS D'ASSEMBLAGE

Do not FULLY TIGHTEN the screws or nuts for any step until all are in place.


I

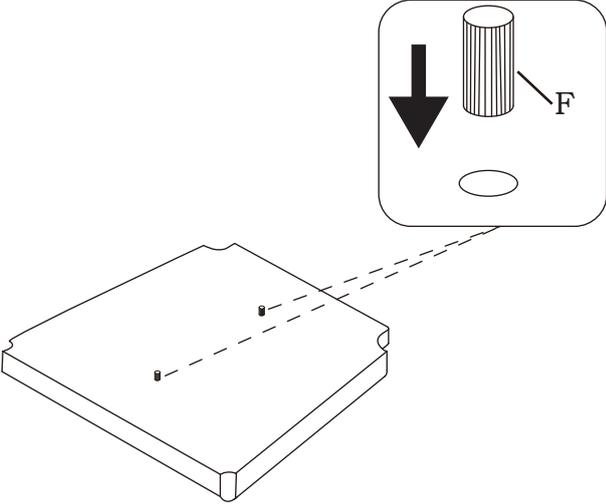


II

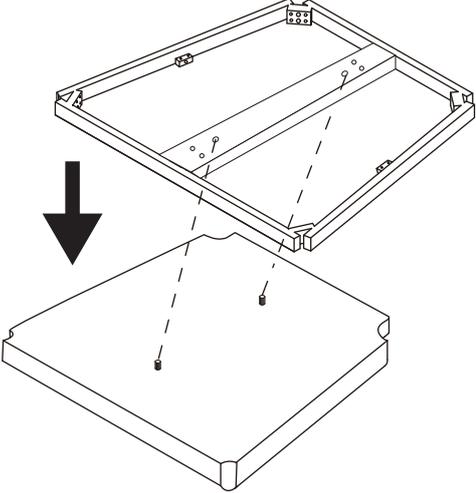


III

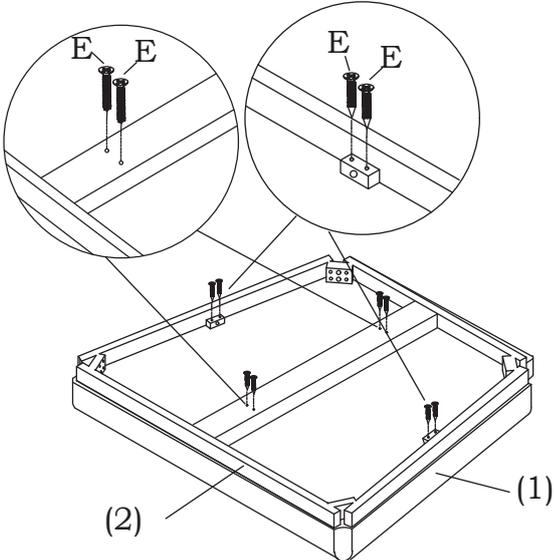


IV

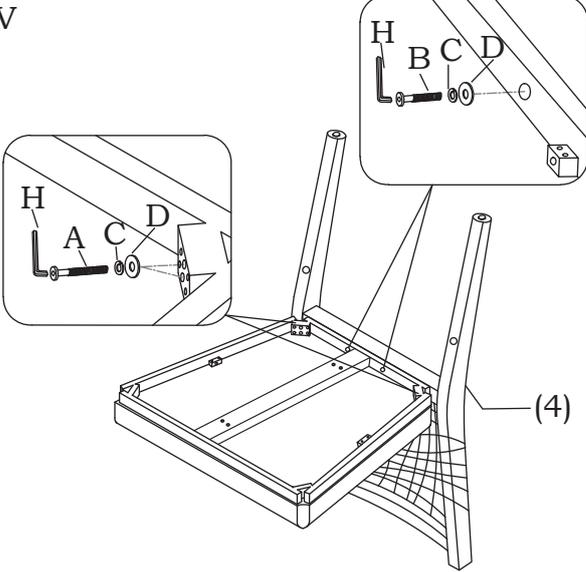


V

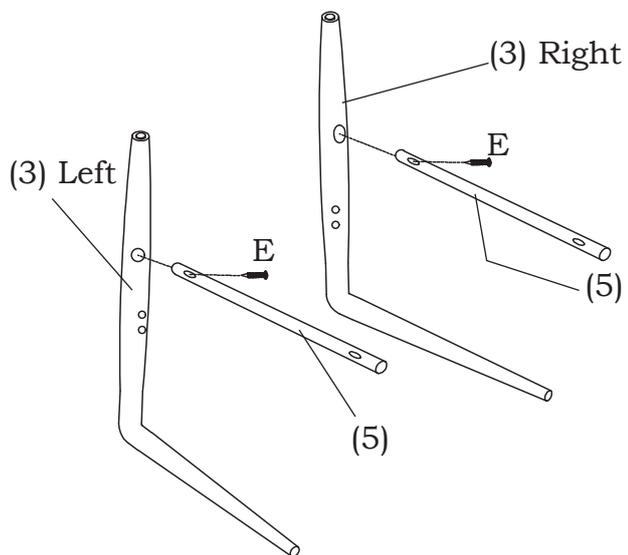


VI

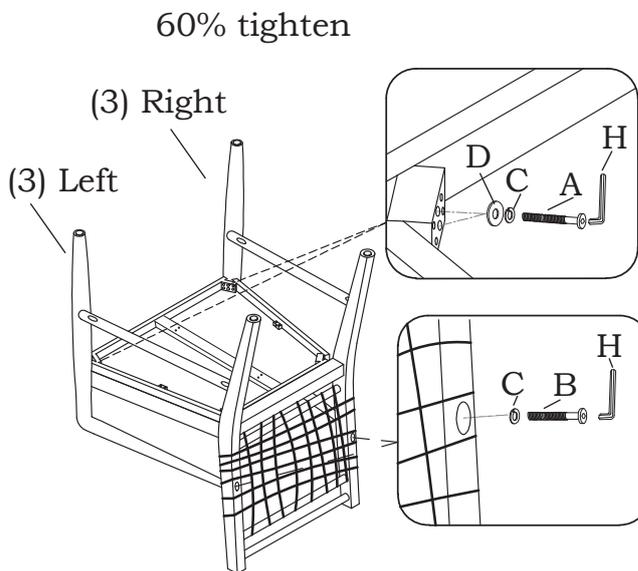


VII

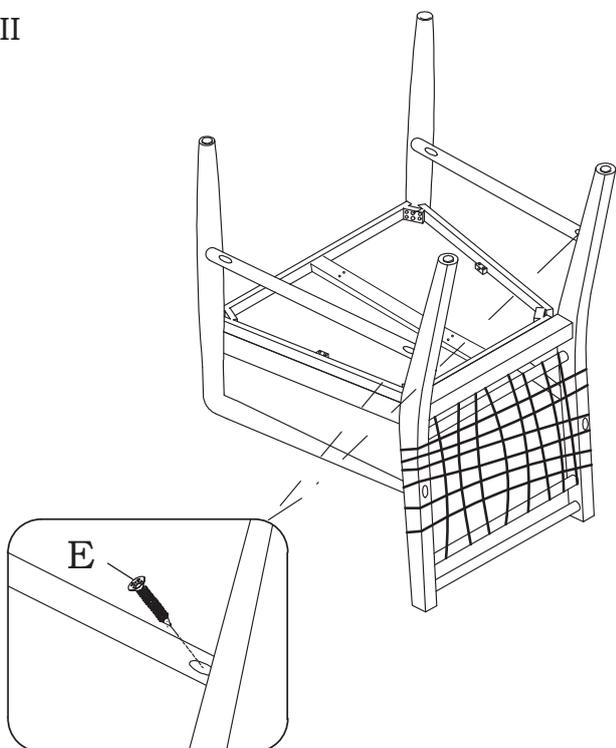


VIII

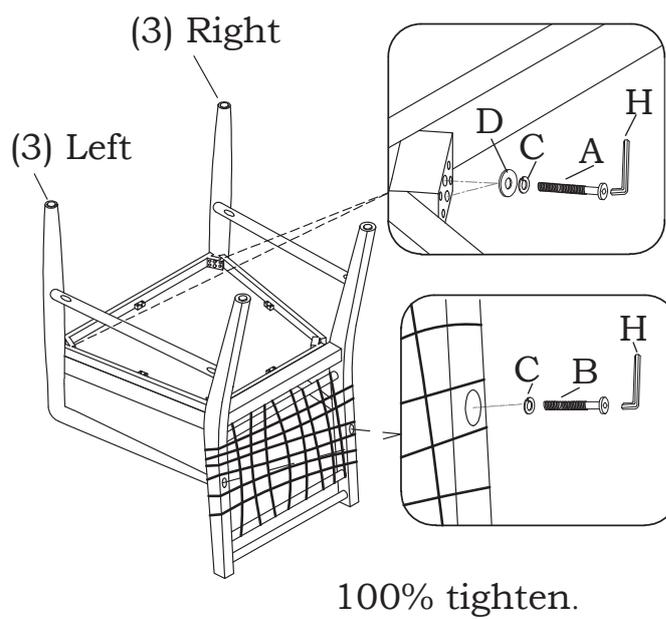

IX

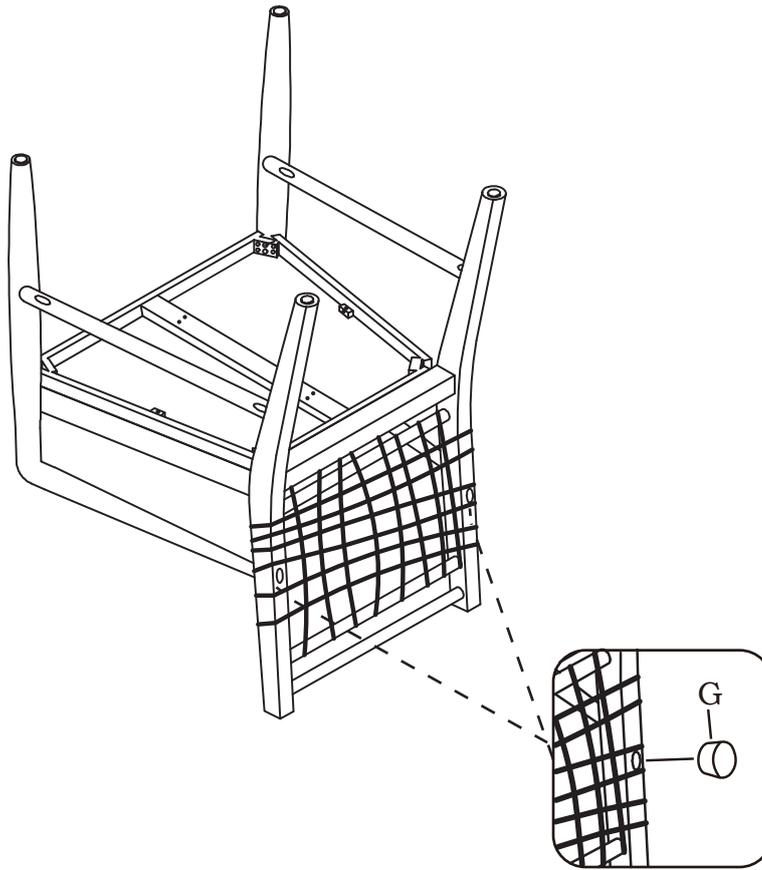

X

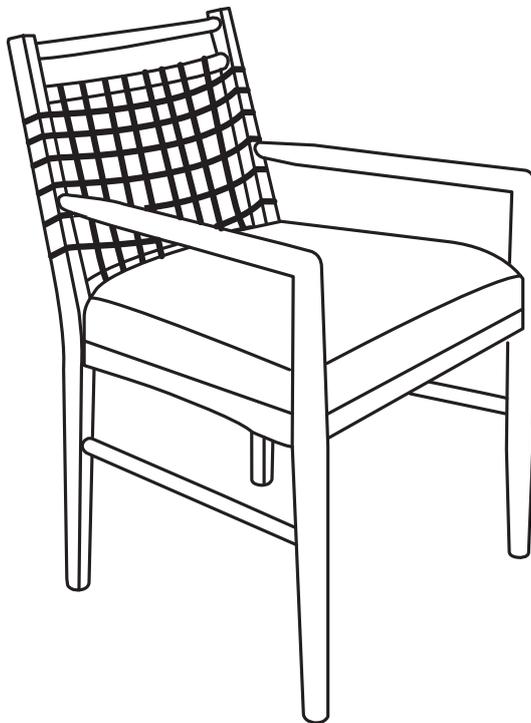

Assembled

Please use the attached adjustable footglides to level the chair on an uneven surface.

For missing parts or damaged parts, please call /
Pour pièce manquante ou endommagée, veuillez appeler:

USA, Canada and Mexico : (866)798-6663

AI-V8-D006-260209