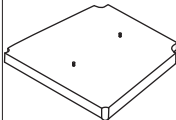 
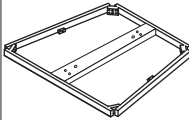 
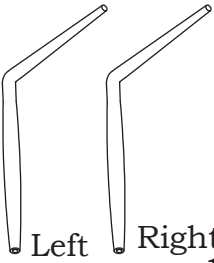 
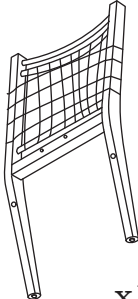 


ITEM NAME/NOM D'ITEM: WEZLY DINING CHAIR





ITEM #/NO. ITEM: 110689,110690

PARTS LIST/LISTE DES PIÈCES


(1)	(2)	(3)	(4)	(5)	(6)
					A.  M6x70mm x8 B.  M6x35mm x4 C.  M6 x12 D.  M6 x10 E.  38mm x12 F.  M8 X 30mm x2 G.  M14.5 x2 H.  M6 x1
x1	x1	Left Right x1	x1	x2	

ASSEMBLY INSTRUCTIONS/INSTRUCTIONS D'ASSEMBLAGE

    
Do not FULLY TIGHTEN the screws or nuts for any step until all are in place.

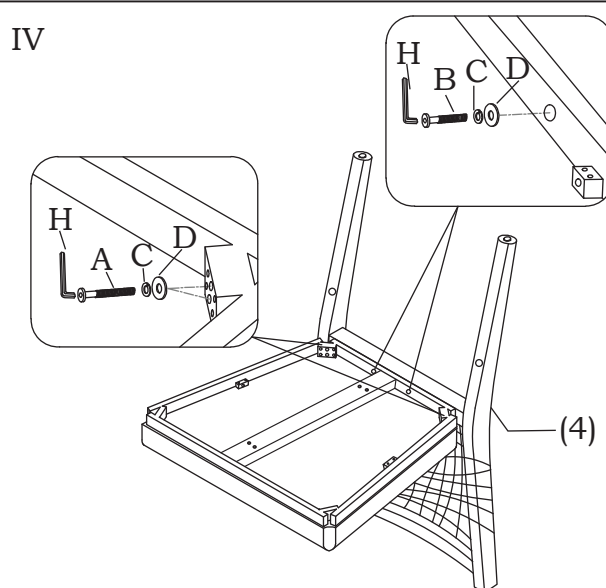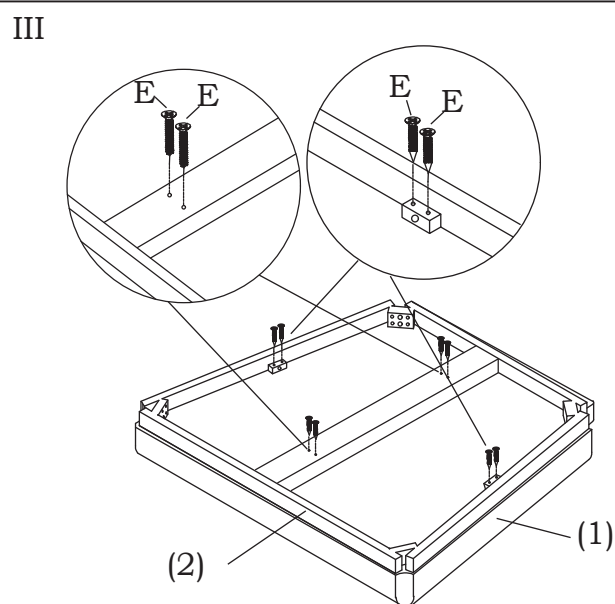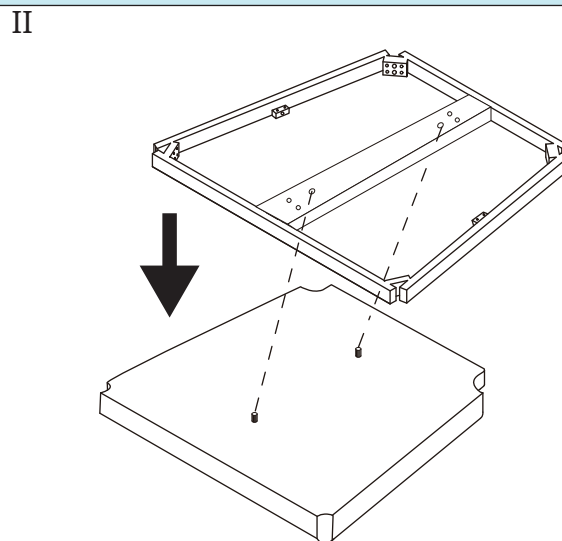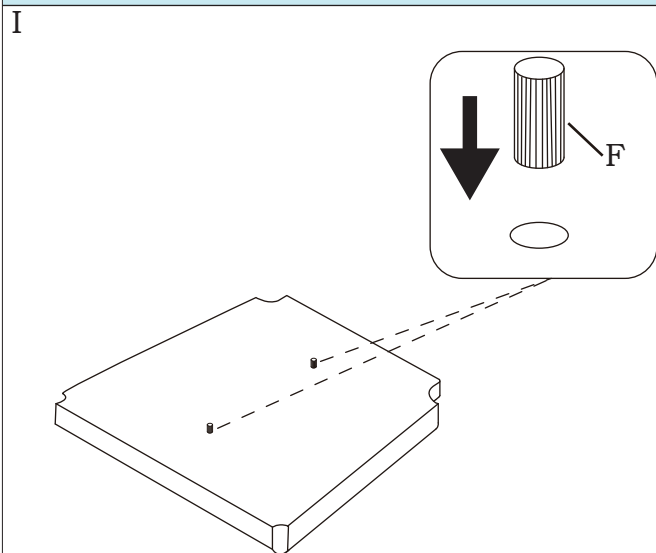


V

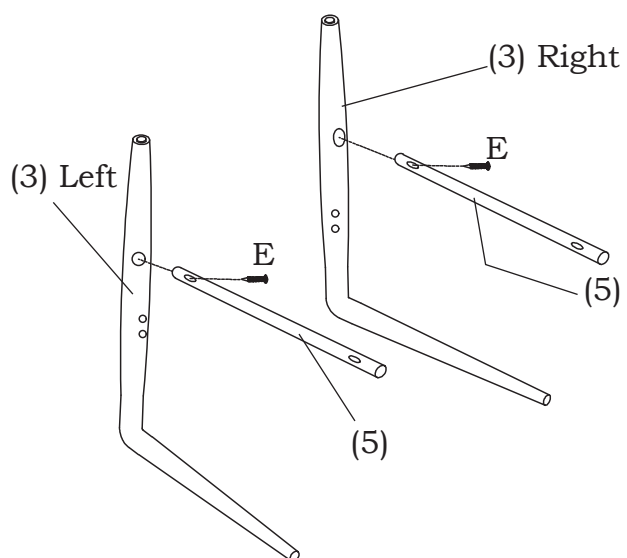 


VI

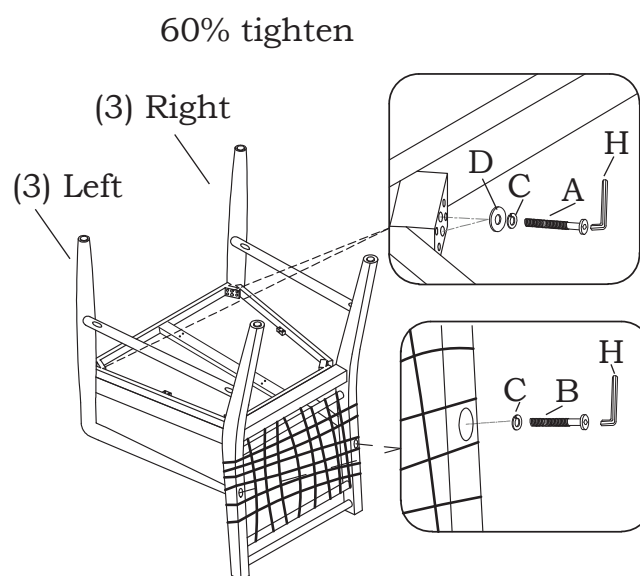 


VII

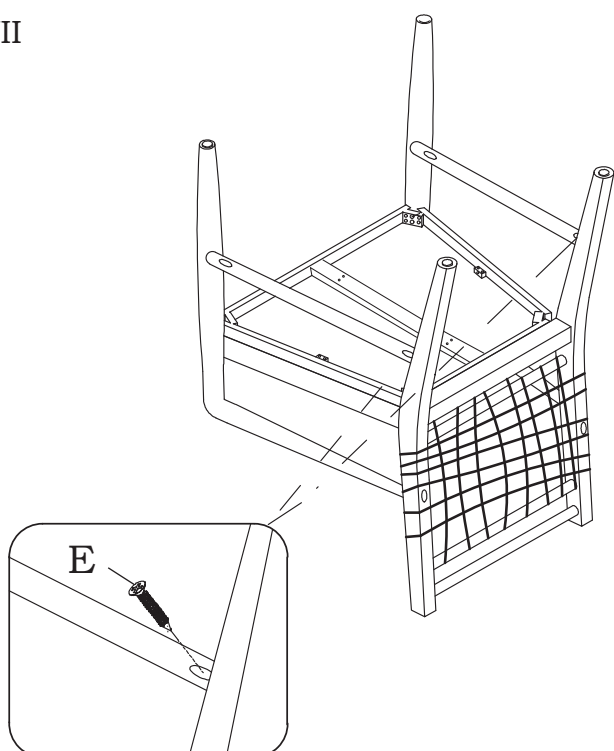 


VIII

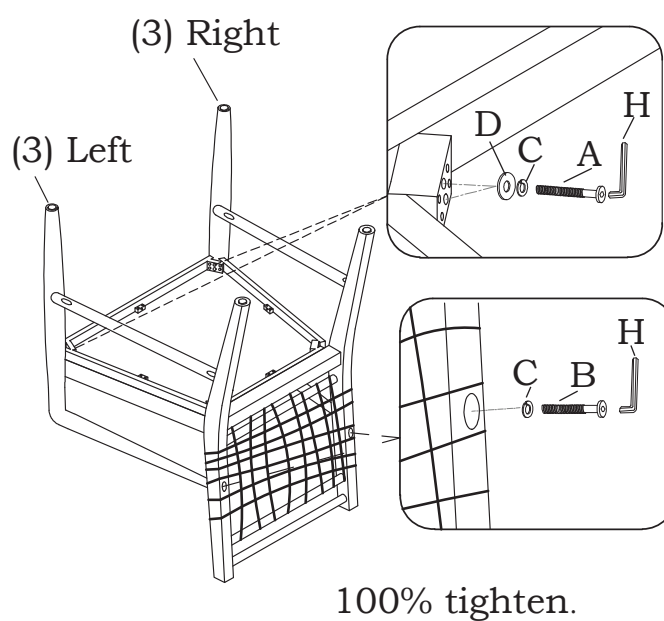 

IX

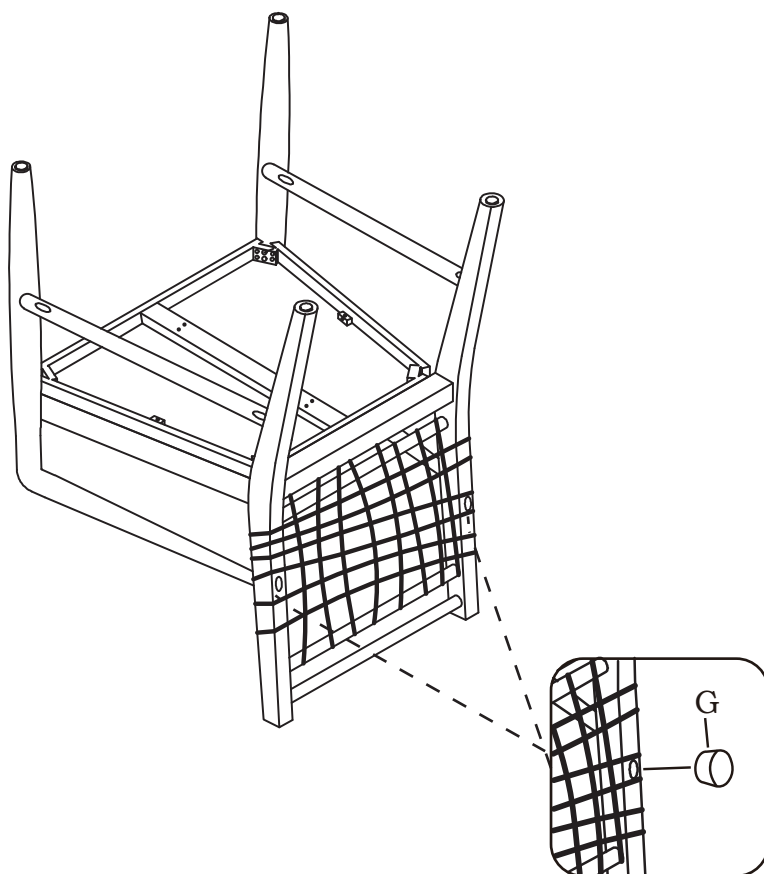 

X

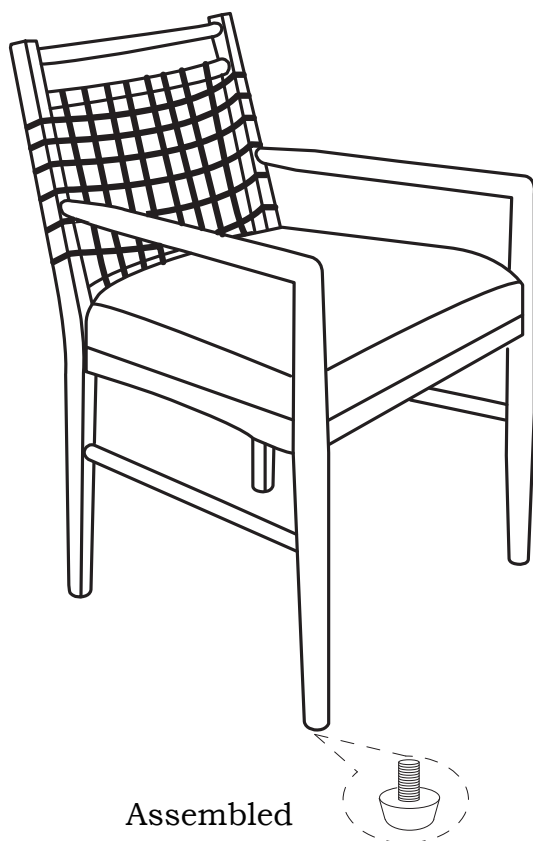 

Please use the attached adjustable footglides to level the chair on an uneven surface.