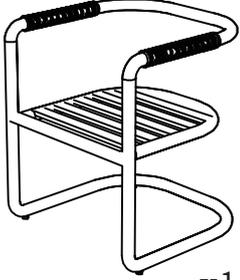
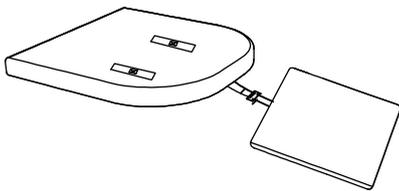


ITEM NAME/NOM D'ITEM: CIEL DINING CHAIR

ITEM #/NO. ITEM: 704177

PARTS LIST/LISTE DES PIÈCES


(1)	(2)	(3)	(4)
 x1	 x1	 x1	<p>A.  M6x55mm x2</p> <p>B.  M6x40mm x2</p> <p>C.  M6x20mm x2</p> <p>D.  M6 x6</p> <p>E.  M6 x1</p>

ASSEMBLY INSTRUCTIONS/INSTRUCTIONS D'ASSEMBLAGE

Do not FULLY TIGHTEN the screws or nuts for any step until all are in place.

I

60% Tighten

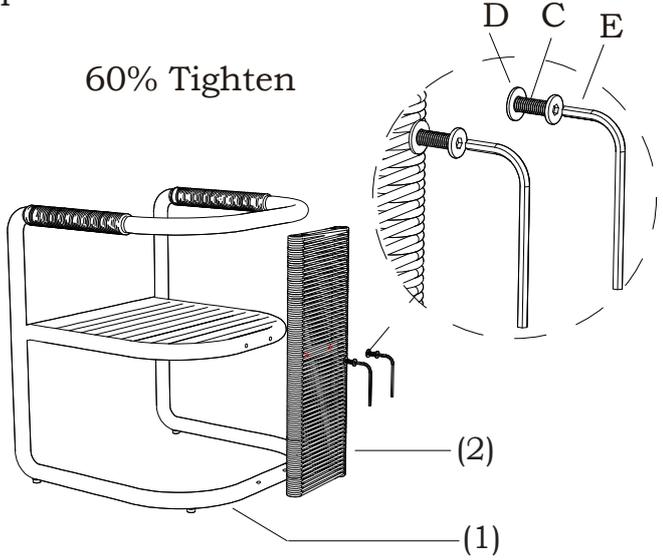


(2)

(1)

II

60% Tighten

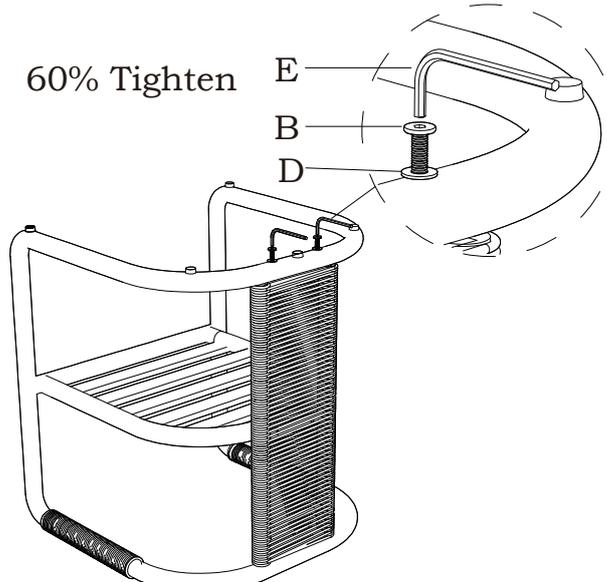


E

B

D

III

100% Tighten all the screws.

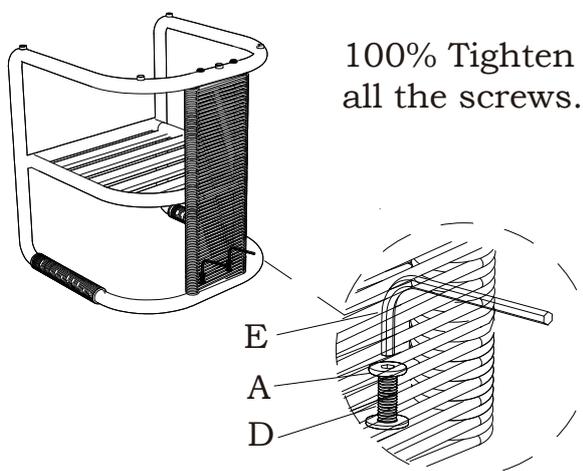


E

A

D

IV

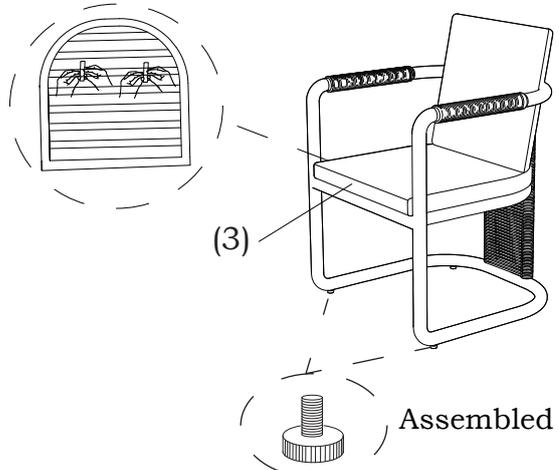

(3)

Assembled

Please use the attached adjustable footglides to level the chair on an uneven surface.