




PARTS & SERVICE DEPARTMENT
 Nashville, Tennessee
 615-889-8900 / Fax: 615-547-1000
 www.Lochinvar.com

Replacement Parts List

Residential Gas Flammable Vapor Ignition Resistant Water Heaters LT(S)N & LT(S)L 030, 040, & 050

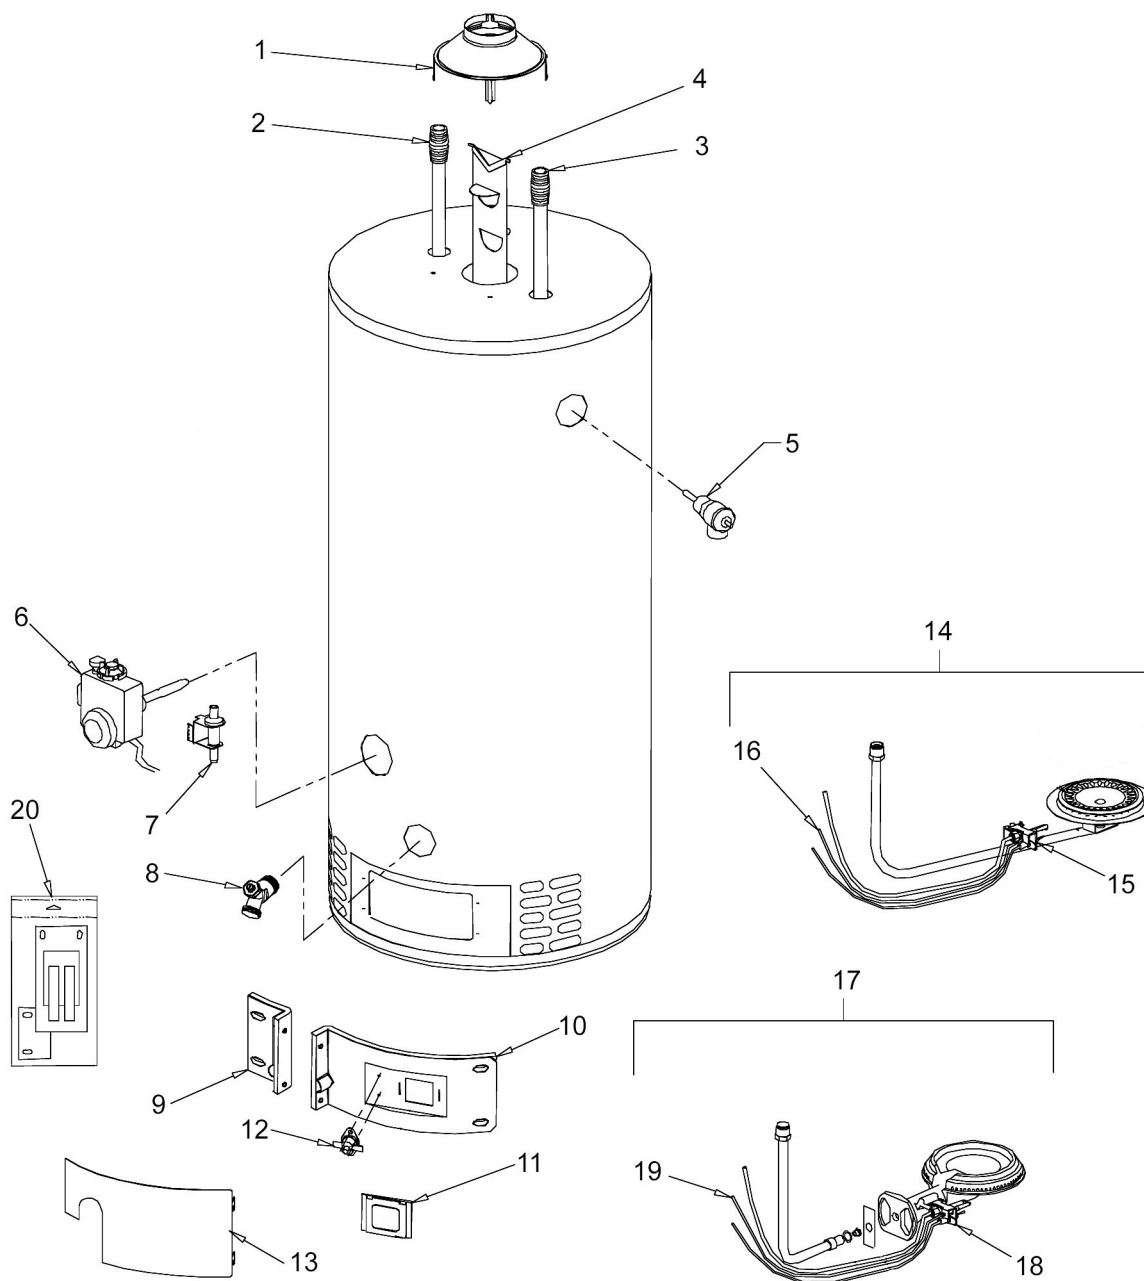

ITEM	DESCRIPTION	MODEL NUMBERS / PART NUMBERS				
		LT(N,L)030G	LS(N,L)030G	LT(N,L)040G	LT(N,L)040G-4	LT(N,L)041G
1	Draft Hood	DRH1000	DRH1000	DRH1000	DRH1000	DRH1000
2	Anode, Magnesium 3/4" dia.	WTR1019	WTR1019	WTR1019	WTR1019	WTR1019
2	Anode, Aluminum 3/4" dia.	WTR1040	WTR1040	WTR1040	WTR1040	WTR1040
3	Cold Water Inlet Tube 3/4" dia.	WTR1018	WTR1018	WTR1018	WTR1018	WTR1018
4	Flue Baffle	JKT1013	JKT1005	JKT1008	JKT1011	JKT1010
5	T&P Relief Valve	RLV1001	RLV1001	RLV1001	RLV1001	RLV1001
6	Natural Gas Thermostat Kit	TST1006	TST1006	TST1006	TST1006	TST1006
6	LP Gas Thermostat Kit	TST1007	TST1007	TST1007	TST1007	TST1007
7	Piezo Igniter	PLT1063	PLT1063	PLT1063	PLT1063	PLT1063
8	Brass Drain Valve	DRV1007	DRV1007	DRV1007	DRV1007	DRV1007
9	Left Side Inner Door with Gasket	JKT1017	JKT1006	JKT1006	JKT1006	JKT1006
10	Right Side Inner Door with Gasket	JKT1018	JKT1007	JKT1021	JKT1007	JKT1007
11	Sight Glass Assembly	MSC1005	MSC1005	MSC1005	MSC1005	MSC1005
12	Resettable Thermal Switch	RLY1003	RLY1002	RLY1002	RLY1003	RLY1003
13	Outer Door	JKT1029	JKT1029	JKT1029	JKT1029	JKT1029
14	NAT Burner Assembly	BNR1038*	BNR1012*	BNR1022*	BNR1034*	BNR1022*
15	Pilot Assembly Natural Gas	PLT1067*	PLT1067*	PLT1067*	PLT1067*	PLT1067*
16	Thermocouple	PLT1010*	PLT1010*	PLT1010*	PLT1010*	PLT1010*
17	LP Cast Iron Burner Assembly	BNR1039*	BNR1021*	BNR1023*	BNR1035*	BNR1023*
18	Pilot Assembly LP Gas	PLT1011*	PLT1061*	PLT1061*	PLT1061*	PLT1061*
19	Thermocouple	PLT1010*	PLT1010*	PLT1010*	PLT1010*	PLT1010*
20	Inner Door Gasket kit	GKT1014	GKT1014	GKT1014	GKT1014	GKT1014

ITEM	DESCRIPTION	MODEL NUMBERS / PART NUMBERS				
		LS(N,L)041G	LT(N,L)050G	LT(N,L)050G-4	LT(N,L)051G	XD(N,L)050G♦
1	Draft Hood	DRH1020	DRH1000	DRH1021	DRH1000	DRH1000
2	Anode, Magnesium 3/4" dia.	WTR1019	WTR1019	WTR1019	WTR1019	WTR1019
2	Anode, Aluminum 3/4" dia.	WTR1040	WTR1040	WTR1040	WTR1040	WTR1040
3	Cold Water Inlet Tube 3/4" dia.	WTR1018	WTR1018	WTR1018	WTR1018	WTR1018
4	Flue Baffle	JKT1010	JKT1009	JKT1011	JKT1055	JKT1055
5	T&P Relief Valve	RLV1001	RLV1001	RLV1001	RLV1001	RLV1001
6	Natural Gas Thermostat Kit	TST1006	TST1006	TST1006	TST1000	TST1013
6	LP Gas Thermostat Kit	TST1007	TST1007	TST1007	TST1011	TST1018
7	Piezo Igniter	PLT1063	PLT1063	PLT1063	PLT1063	PLT1063
8	Brass Drain Valve	DRV1007	DRV1007	DRV1007	DRV1007	DRV1007
9	Left Side Inner Door with Gasket	JKT1006	JKT1019	JKT1019	JKT1019	JKT1019
10	Right Side Inner Door with Gasket	JKT1021	JKT1021	JKT1021	JKT1021	JKT1021
11	Sight Glass Assembly	MSC1005	MSC1005	MSC1005	MSC1005	MSC1005
12	Resettable Thermal Switch	RLY1003	PRS1024	RLY1002	PRS1024	PRS1024
13	Outer Door	JKT1029	JKT1029	JKT1029	JKT1029	JKT1029
14	NAT Burner Assembly	BNR1025*	BNR1025*	BNR1036*	BNR1069*	BNR1069*
15	Pilot Assembly Natural Gas	PLT1067*	PLT1067*	PLT1067*	PLT1067*	PLT1067*
16	Thermocouple	PLT1010*	PLT1010*	PLT1010*	PLT1010*	PLT1010*
17	LP Cast Iron Burner Assembly	BNR1023*	BNR1033*	BNR1037*	BNR1083*	BNR1083*
18	Pilot Assembly LP Gas	PLT1061*	PLT1061*	PLT1061*	PLT1061*	PLT1061*
19	Thermocouple	PLT1010*	PLT1010*	PLT1010*	PLT1010*	PLT1010*
20	Inner Door Gasket kit	GKT1014	GKT1014	GKT1014	GKT1014	GKT1014

* Removing inner door to repair these parts will require replacing inner door gasket - GKT1014.

♦Indicates models equipped for domestic hot water and space heating applications (Double Duty)

Please provide model & serial number when ordering parts.

Aug-05 Printed in U.S.A.