

## **№ PIPE CUTTERS**

## 590 AND 591 MANUAL PIPE CUTTIER

Wheeler #	Service (Std) WT Soil Pipe	XH Soil Pipe	No-Hub®	Tile / Clay	Shipping Weight
590-6	1 <sup>1</sup> / <sub>2</sub> "-6" (38mm-150mm)	1 <sup>1</sup> / <sub>2</sub> "-5" (38mm-125mm)	1 <sup>1</sup> / <sub>2</sub> "-6" (38mm-150mm)	4"-6" (100mm-150mm)	23 lbs. (10.5kg)
590-8	1 <sup>1</sup> / <sub>2</sub> "-6" (38mm-150mm)	1 <sup>1</sup> / <sub>2</sub> "-5" (38mm-125mm)	1 <sup>1</sup> / <sub>2</sub> "-6" (38mm-150mm)	4"-8" (100mm-200mm)	25 lbs. (11.5kg)
590-10	1 <sup>1</sup> / <sub>2</sub> "-6" (38mm-150mm)	1 <sup>1</sup> / <sub>2</sub> "-5" (38mm-125mm)	1 <sup>1</sup> / <sub>2</sub> "-6" (38mm-150mm)	4"-10" (100mm-250mm)	28 lbs. (12.7kg)
590-12	1 <sup>1</sup> / <sub>2</sub> "-6" (38mm-150mm)	1 <sup>1</sup> / <sub>2</sub> "-5" (38mm-125mm)	1 <sup>1</sup> / <sub>2</sub> "-6" (38mm-150mm)	4"-12" (100mm-300mm)	28 lbs. (12.7kg)
590-15	1 <sup>1</sup> / <sub>2</sub> "-6" (38mm-150mm)	1 <sup>1</sup> / <sub>2</sub> "-5" (38mm-125mm)	1 <sup>1</sup> / <sub>2</sub> "-6" (38mm-150mm)	4"-15" (100mm-375mm)	29 lbs. (13kg)
591-6	1 <sup>1</sup> / <sub>2</sub> "-6" (38mm-150mm)	1 <sup>1</sup> / <sub>2</sub> "-5" (38mm-125mm)	1 <sup>1</sup> / <sub>2</sub> "-6" (38mm-150mm)	4"-6" (100mm-150mm)	24 lbs. (11kg)
591-8	1 <sup>1</sup> / <sub>2</sub> "-6" (38mm-150mm)	1 <sup>1</sup> / <sub>2</sub> "-5" (38mm-125mm)	1 <sup>1</sup> / <sub>2</sub> "-6" (38mm-150mm)	4"-8" (100mm-200mm)	25 lbs. (11.5kg)

38 Replacement Adjustment Screw Assembly






INCLUDES



Close-up view of "captured screw"

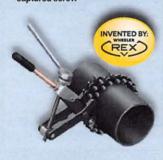

## 3990 XH RATCHET PIPE CUTTER

Wheeler #	Service (Std) WT Soil Pipe	XH Soil Pipe	Tile / Clay	Cast Iron Water Class 22	Shipping Weight
3990-6	2"-6" (50mm-150mm)	2"-6" (50mm-150mm)	2"-6" (50mm-150mm)	2"-6" (50mm-150mm)	21 lbs. (9.5kg)
3990-8	2"-8" (50mm-200mm)	2"-8" (50mm-200mm)	4"-8" (100mm-200mm)	2"-6" (50mm-150mm)	23 lbs. (10.5kg)

## SOIL PIPE COUPLING TORQUE WRENCH

This durable "T-Handle" type torque tool with a contoured comfort-fit handle features a removable socket and a unique locking collar, which allows the tool to be used as an untorqued snug-up or back-off, as well as a conventional torque tool. With the locking collar retracted, the tool torques to the right (tightening), while ratcheting to the left. When proper torque value has been achieved, the mechanism slips internally and overtightening is impossible.

1977 T-Torque for tightening 5/16" coupling nuts to 60 in. lbs	Weight 1 lb.	(.5kg)
1980 T-Torque for tightening 5/16" coupling nuts to 80 in. lbs	Weight 1 lb.	(.5kg)
1981 T-Torque for tightening 3/8" coupling nuts to 80 in. lbs	Weight 1 lb.	(.5kg)
1982 T-Torque for tightening 5/16" & 3/8" coupling nuts to 80 in. lbs	Weight 1 lb.	(.5kg)

275410 5/16" Replacement Socket 275818 3/8" Replacement Socket



More Torque Wrenches available... see page 54.