# MC50 **Mobile Computer**

### Accessories Guide



### Standard

# Adapters



Adapter (CN/EU/UK/US), I/P: 100-240V, O/P: 5V3A/12V1.5A/9V2A, use with DC-BK-TypeC cable.

#### **USB Cable**



DC-BK-TypeC 1.0 meter Type-C cable.

#### **Battery**



BTRY-C50-50MA Main battery, 5000mAh Li-on battery, Rated Voltage: 3.85V.

## **Optional**

#### **Charging Cradles**



#### CRD-C50-RBC

Single Charging Cradle, DC port, charge device only, use with DCPWR-12V2A-XX adapter.



### CRD-C50-SCC

Single Charging Cradle, Type-C port, charge device only, use with 10W/18W adapter.



### CRD-C50-MBC

Charging Cradle for main battery, up to 4 slots, use with DCPWR-12V2A-XX adapter.



#### CRD-C50-DBC

Single Charging Cradle, Type-C port, charge MC50 device with spare battery. use with PWR-18W-XX adapter.



### CRD-C50-DP

Charging Cradle for device, include the cradle cup(CRD-C50-INS), support device with UHF pistol grip or only device, use with DCPWR-12V2A-XX adapter.

The cradle cup has an insert that must be removed prior to inserting the MC50 with UHF pistol.

### **Pistol Grip**

### **Hand Strap**

### Rugged Rubber Boot Pistol Battery



### RB-C50-PS

Snap-On Trigger Handle and Rugged Boot Kit without battery.



RB-C50-HS

Hand Strap with buckle This include 2 pcs screws,1 pcs wrist strap Buckle and 1 pcs hand strap.



### RB-C50-RR

RB-C50-RR does not support charging cradle.



### BTY-C50-PB

Pistol Battery for UHF Back Clip, 5200 mAh

### **Screen Protector**



### SP-C50

Tempered glass screen protector.

# Adapters



### DCPWR-12V2A-CN/UK/EU/US

Adapter (CN/EU/UK/US), I/P:100-240V, Pistol O/P:12V2A, DC