


GUBI

ASSEMBLY INSTRUCTIONS


for

Silk Lantern
Pendant

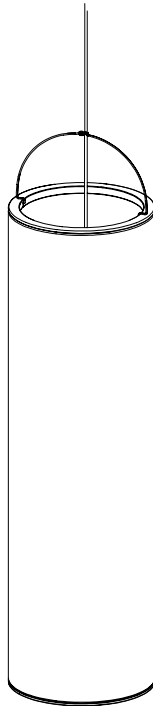

CONTENTS.

LANTERN PENDANT

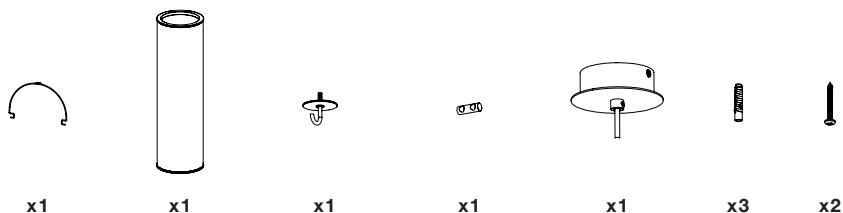

Installation.

Unbox the base.



1A. Remove the canopy screws to access the ceiling bracket.

2A. If needed, install the hook above the final position.

1B. Mark the position of the ceiling bracket and install it.

Depending on the wall type, use the appropriate plugs. Fasten the wall bracket using the two screws.


1C. Loosen the cable lock screw.

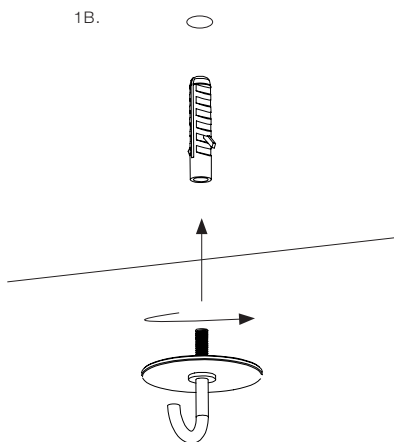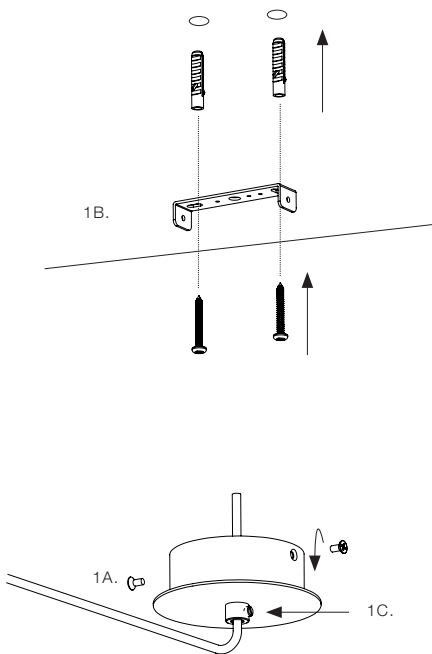


3A. Adjust the cable to the desired length. Cut off the excess. Secure the cable with the screw.

3B. Locate the main wire and connect it to the terminal box.

3C. Secure the canopy to the ceiling bracket.

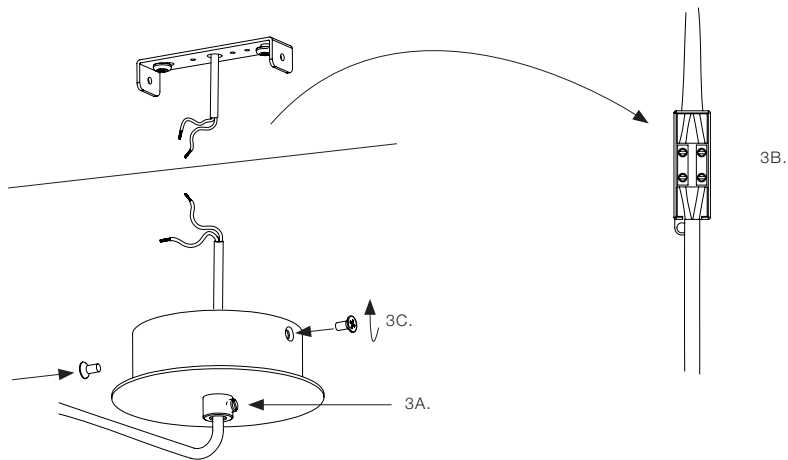


If needed, attach the cable to the hook and adjust it into the correct position.

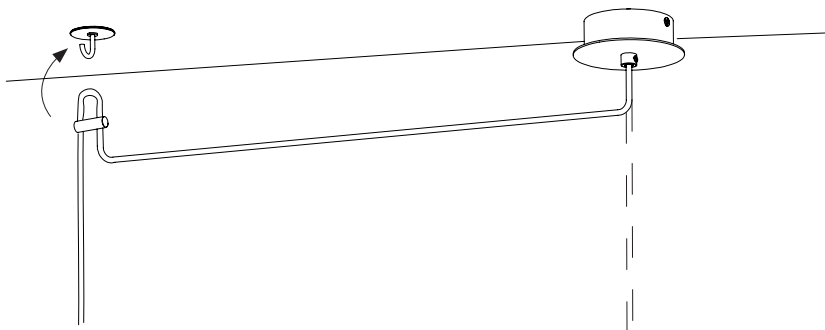


Shade.

- 1. Unfold the shade and make sure the silk shade is properly fastened to the wooden frame.
- 2. Locate the wooden ring with the grooves. This function as the top part.
Guide and insert brass hanger into the available grooves.

1A.

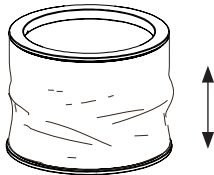


1B.

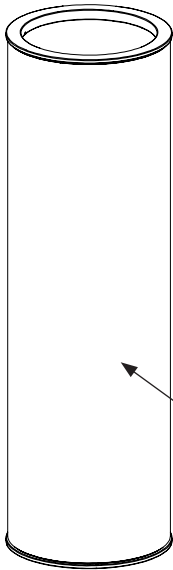


Wrinkles will occur when unboxing the product.
They will even out over time.

2A.

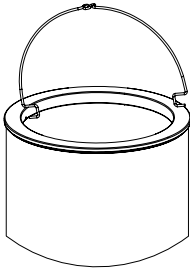

2B.

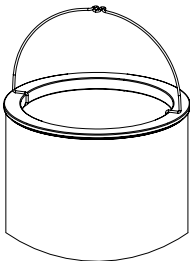


Attachment.


1. Insert Type A bulbs in socket. Not Included

2. Pull up the shade parallel with the cable. Once reached the desired height, snap into the cable.


1A.

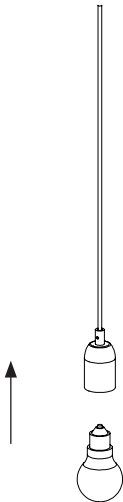


2A.

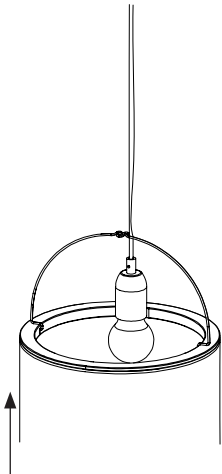

2B.

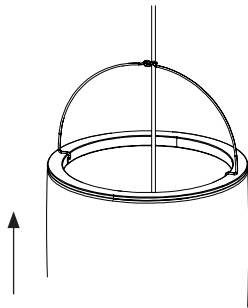

2C.

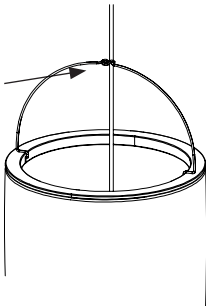



CARE INSTRUCTIONS

Wipe the parts with a dry or damp cloth that has been soaked in warm water. Only use soft cloths for wiping and polishing; never use sponges or steel wool. Do not use abrasive household cleaners.

Avoid acidic or alkaline cleaning materials, glass cleaner, and household ammonia.

SILK

Dust regularly with a soft brush or cloth. Spot clean with a slightly damp, white cloth. Do not immerse in water, as this may cause spots or damage. Keep the shade out of direct sunlight. Silk is fragile.

TROUBLESHOOTING

If the lamp does not light up, turn off the power. Check the bulb for a broken filament. Replace the bulb, if necessary, and then turn the lamp on. If the lamp still does not light up, contact the local dealer's customer service. If this lamp's external flexible cable or cord is damaged, a qualified electrician must replace it to avoid a hazard.

TECHNICAL INFORMATION

Light sources:

EU: 1 x E27

US: 1 x E26

Max. 6W LED. Turn off the power when changing the light bulb.

Isolation class II. This lamp is not approved for outdoor use or use in damp or wet rooms (IP20).

ENVIRONMENTAL PROTECTION

Electrical products must not be thrown out with regular trash. Instead, they must be taken to a communal collection point for environmentally friendly disposal, in accordance with local regulations. Contact your local authorities or retailer for recycling advice. The packaging material is recyclable. Dispose of the packaging in an environmentally friendly manner and make it available for the recycling collection service. Do not incinerate it.



For enquiries contact GUBI A/S - CVR: 17940384

Orientkaj 18-20. 2150 Nordhavn. Copenhagen, Denmark

T +45 69 15 60 60 – order@gubi.dk

GUBI.COM