 
 


FOLDING SOCCER GOAL

PART LIST

SIZE : 3000*2000*1200mm

| | | | | | |
|--|--|--|--|---|---|
| ①  2PCS ø66X1490mm | | ②  2PCS ø66X995mm | | ③  2PCS ø66X995mm | |
| ④  2PCS ø38X670mm | | ⑤  2PCS ø38X897mm | | ⑥  2PCS ø38X897mm | |
| ⑦  2PCS ø38X1400mm | | ⑧  1PC ø38X1522mm | | ⑨  1PC ø38X1522mm | |
| ⑩  1PC 66 connecting piece | ⑪  1PC 66 connecting piece | ⑫  3PCS 66 connecting piece | ⑬  48PCS Black Hooks | ⑭  4PCS Fixed Hooks | ⑮  2PCS Connector |
| ⑯  2PCS Connector | ⑰  2PCS Connector | ⑱  Metal Plastic M8X55MM 8PCS Screw | ⑲  Metal Plastic M8X25MM 24PCS Screw | ⑳  Plastic M8X10MM 4PCS Screw | ㉑  4PCS T-Shaped nut |
| ㉒  2PCS Plug | ㉓  1PC Net | ㉔  6PCS U-shaped soil | ㉕  28PCS Elastic Clasp | ㉖  1PC 5mm Hexagon Wrench | ㉗  1PC 13mm Ratchet Spanner |


IMPORTANT: Read all instructions carefully before using this product.

Warning! **CHOKING HAZARD!** - Small parts. Not for Children under 3 years old. Adult assembly required. The soccer goal is heavy, Four capable adults are recommended for this installing.

This product should, at all times, be used by the child under direct supervision of an adult.

Remove all the separate parts from the packaging, lay them on the ground and check roughly that all are there on the base of the assembly steps.

ASSEMBLY

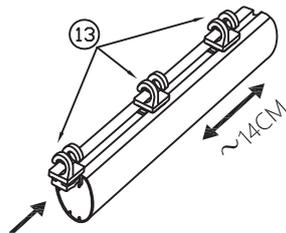


Please install black plastic hooks on aluminum alloy profiles firstly.

The distance between two hooks is about 14cm (The hook distance can be adjusted after the football door is assembled).

Recommend installing 10 pcs black plastic hooks (13) on pipe (1).

Recommend installing 7 pcs black plastic hooks (13) on pipe (2).

Recommend installing 7 pcs black plastic hooks (13) on pipe (3).

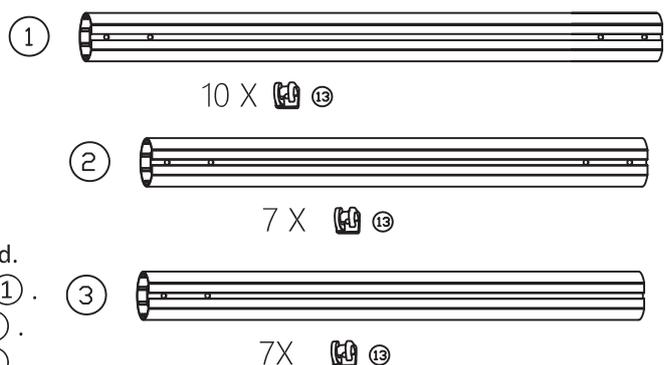



Warnings for safe use:



To simplify the assembly, please read the following instructions before beginning. It will be helpful to have an additional person assist in the assembly process.



Keep this manual for future reference.



- Adult supervision is required at all times when Goal is used by children.
 - To reduce risk of entanglement, keep small children away from net area at all times.
 - Never let children climb on goal as this can result in goal falling over causing serious injury or death.
 - The metal frame of the soccer goal will conduct electricity. Lights, extension cords, and all such electrical equipment must never be allowed to come in contact with the soccer goal.
 - Inspect the soccer goal before each use. Make sure the strips and all parts are correctly and securely positioned and attached. Tighten any loose hardware. Replace any worn, defective, or missing parts.
 - Wear comfortable clothing free of hooks, snaps, drawstrings or anything which may snag or catch in the soccer goal mesh. Remove jewelry, necklaces, and earrings.
 - Never set-up the soccer goal in heavy rain, wind or storm conditions, especially storms. It is recommended that the soccer goal be taken apart and stored.
 - When moving the assembled soccer goal, have at least two adults evenly lift the frame of the soccer goal off the ground and move.
 - Place the soccer goal on a level surface before use.
 - Always use anchors, see assembly instructions for the adequate placement.
 - Inspect the soccer goal before each use and replace any worn, defective, or missing.
- Read all instructions and complete all assembly before using.





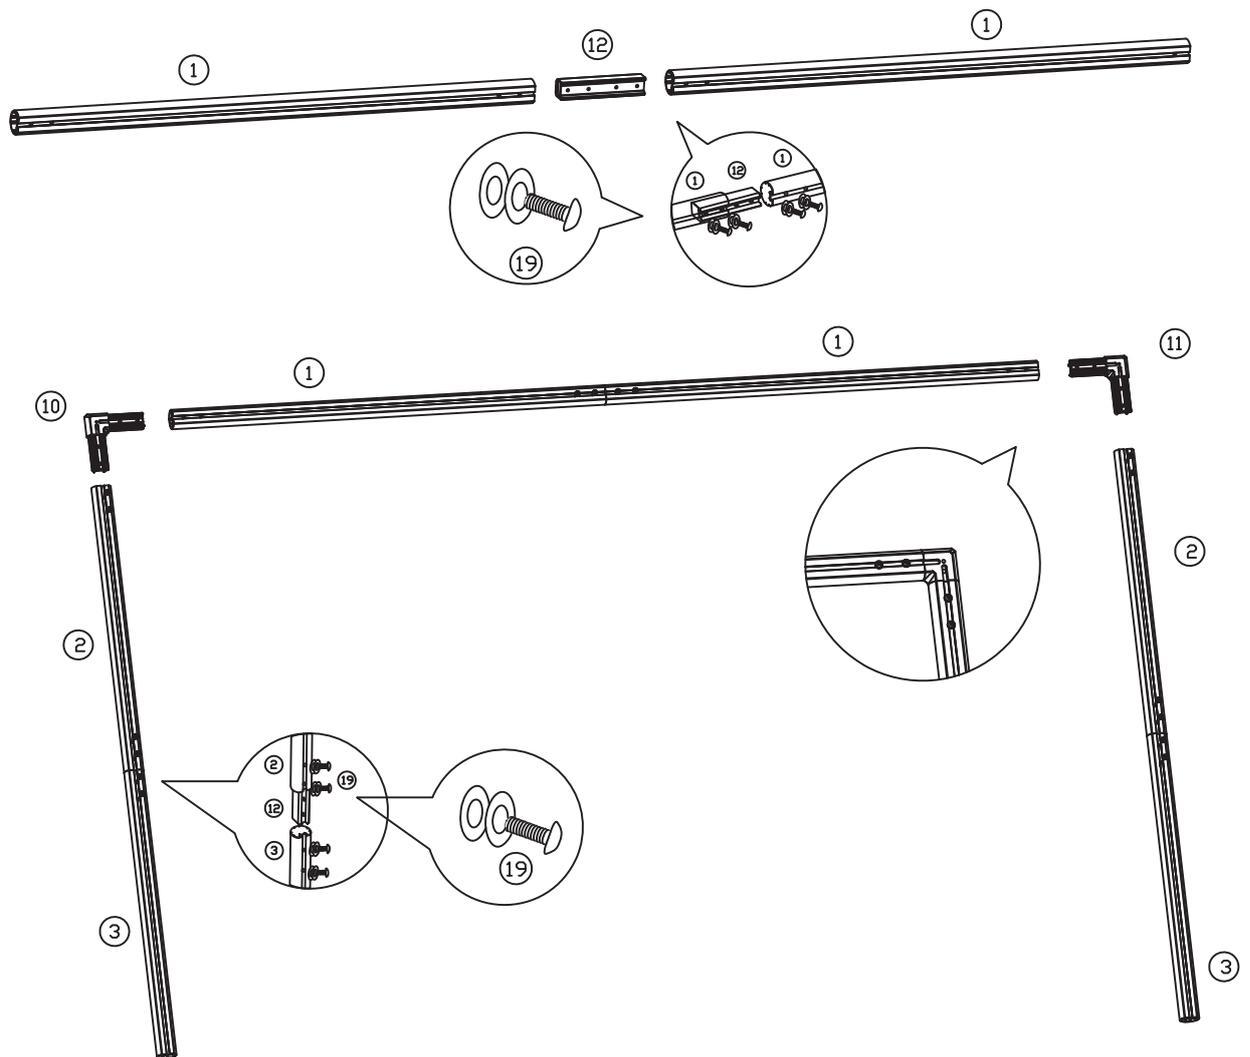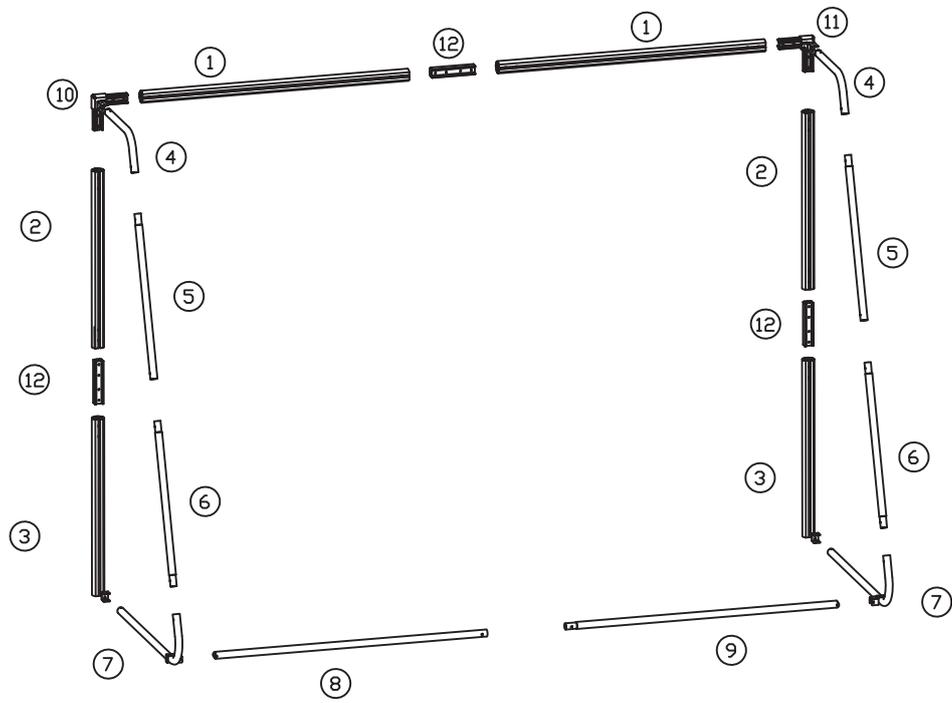


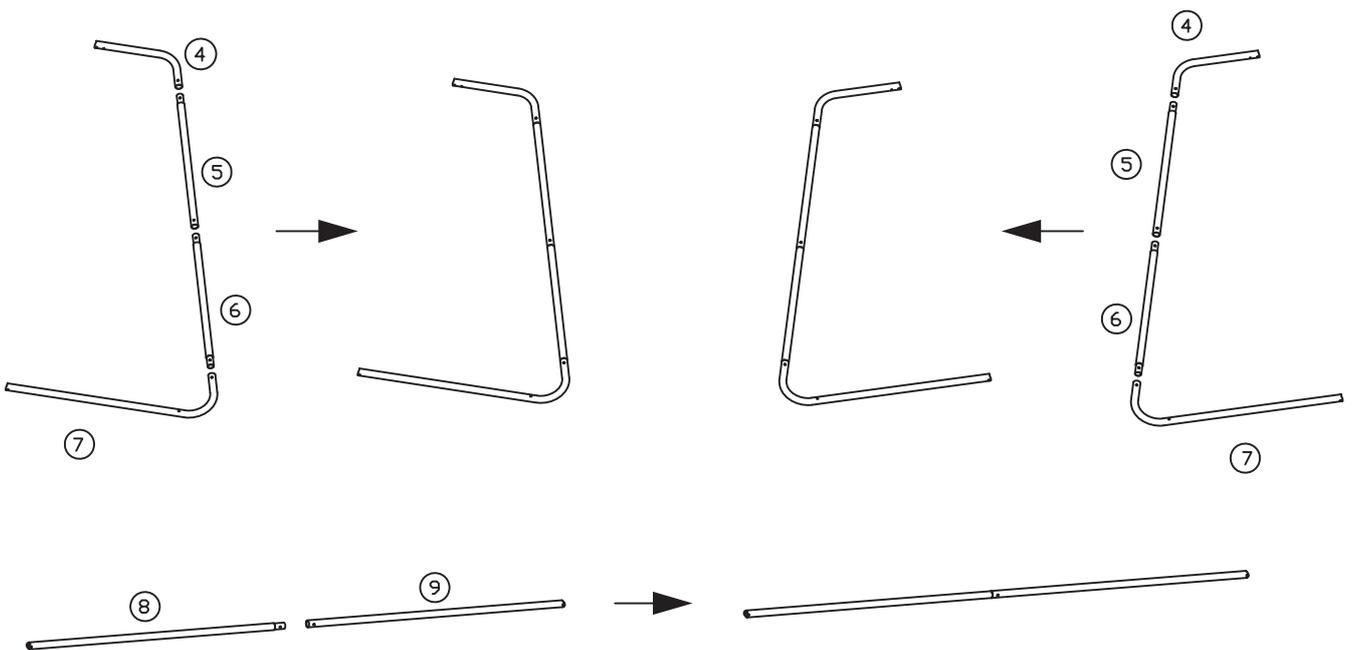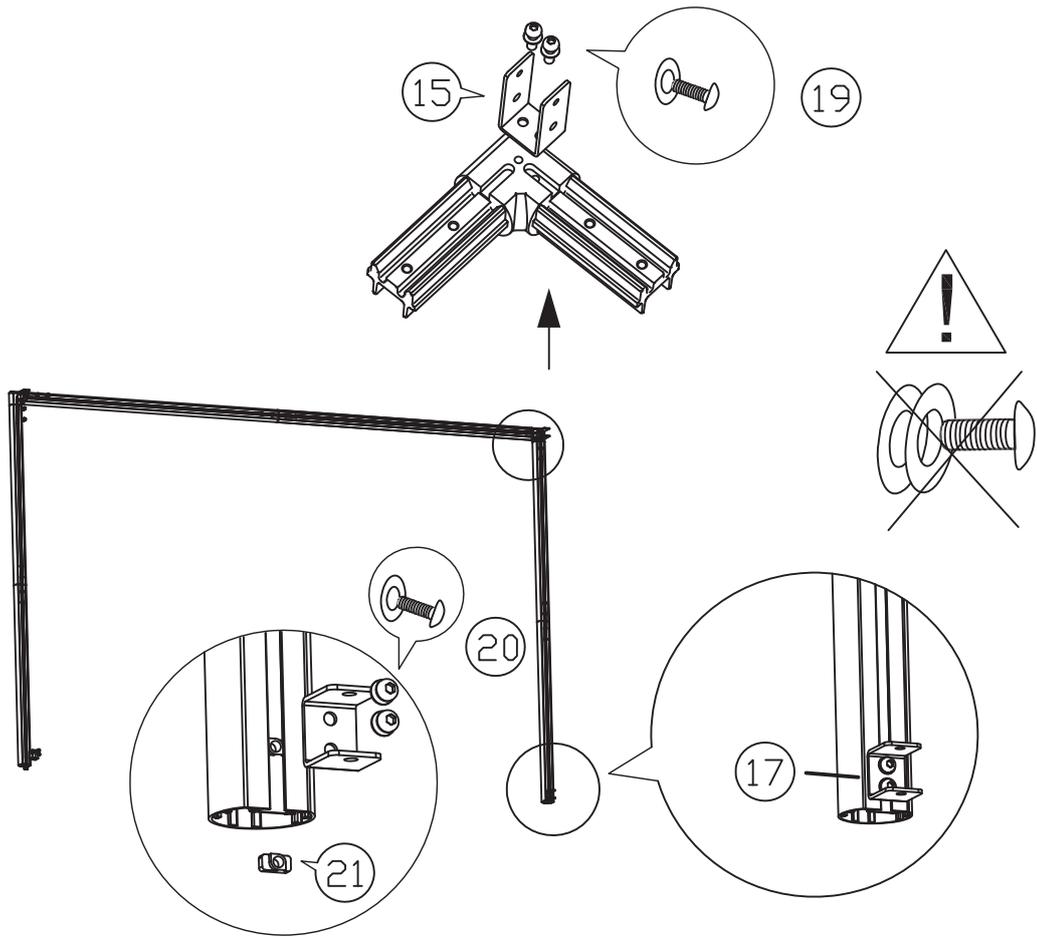

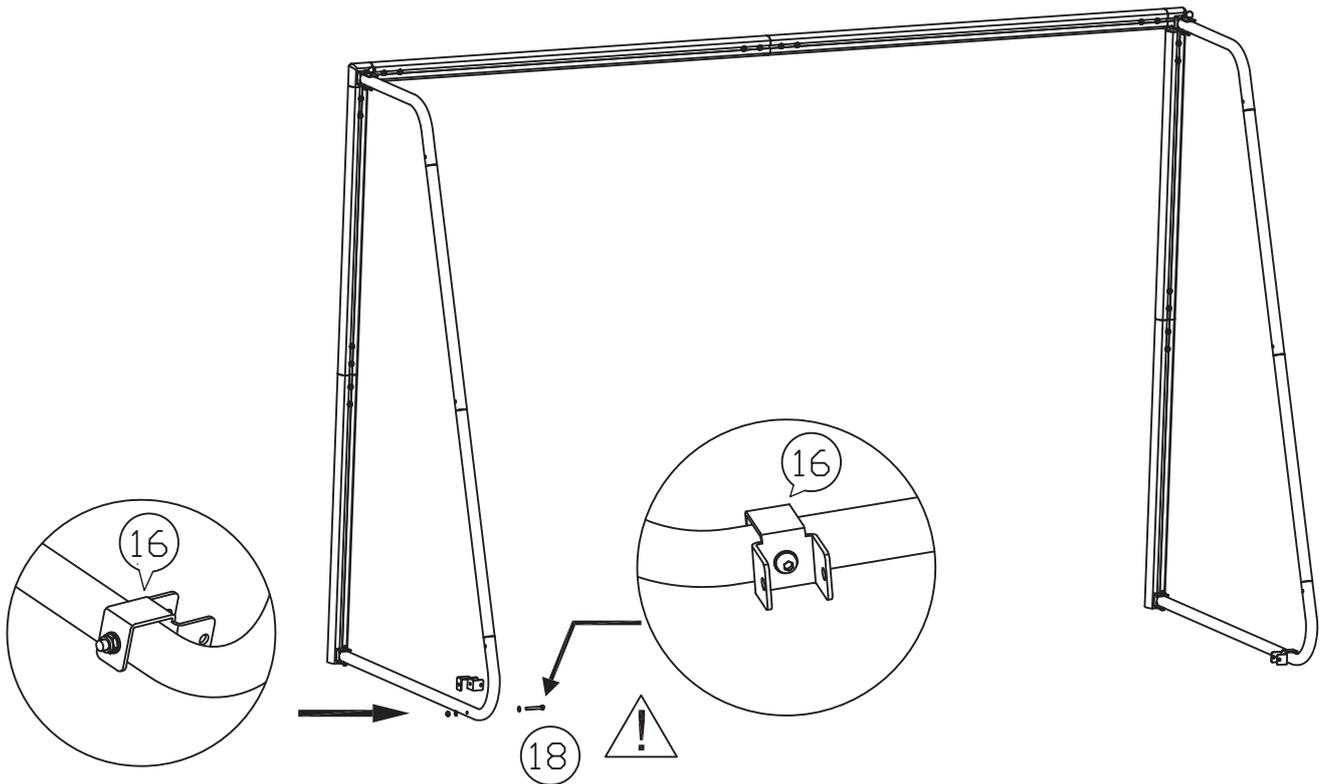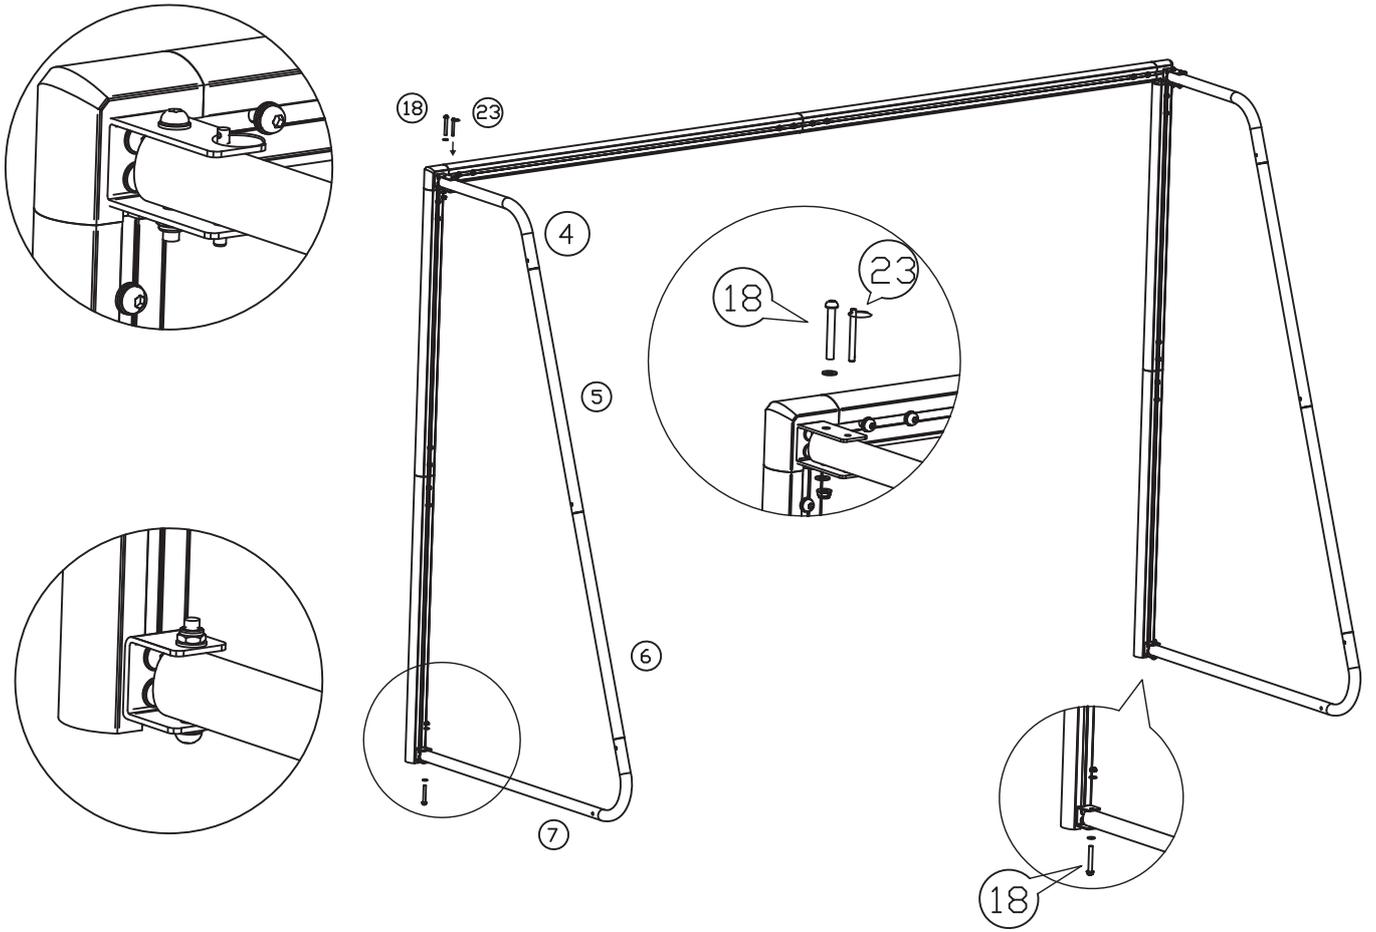

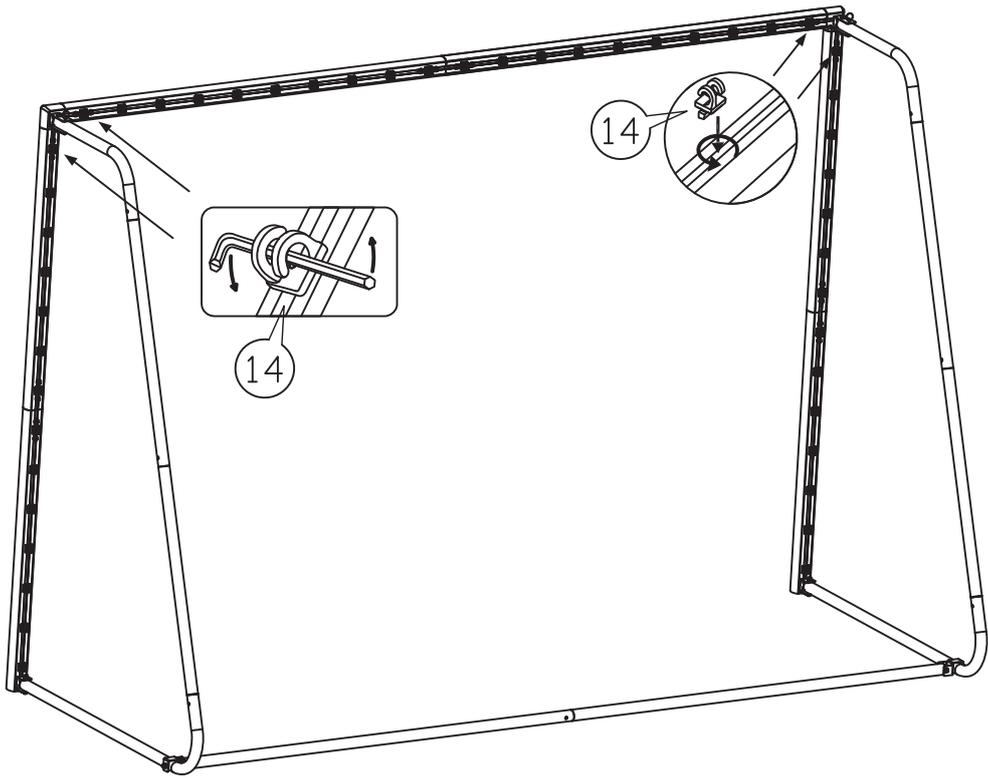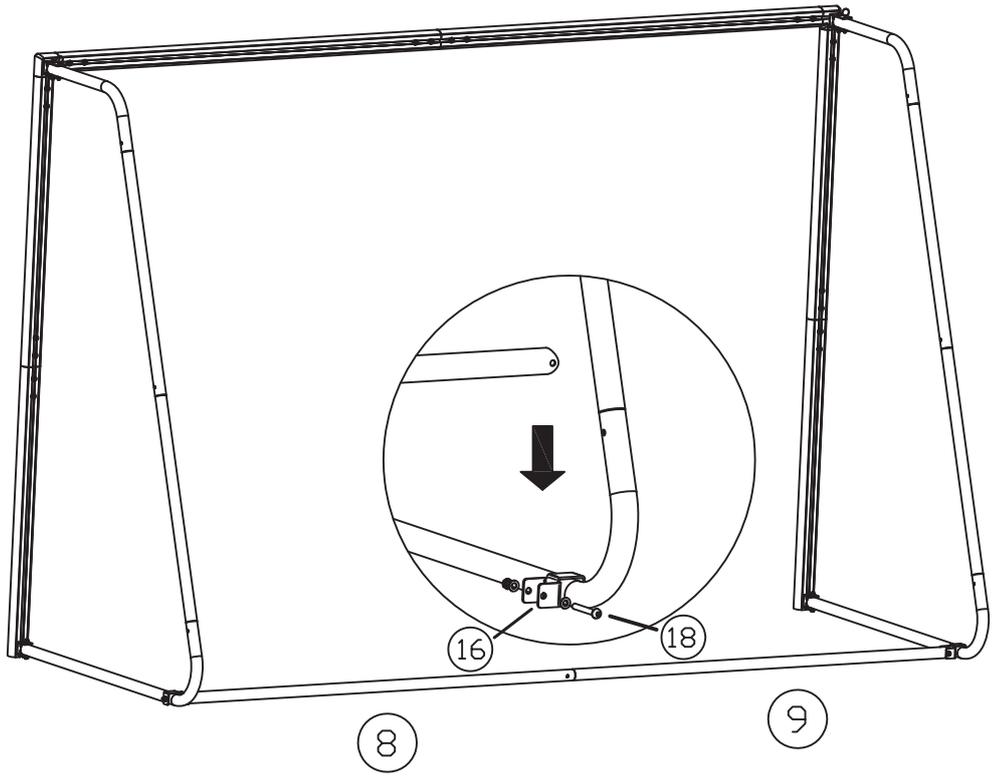

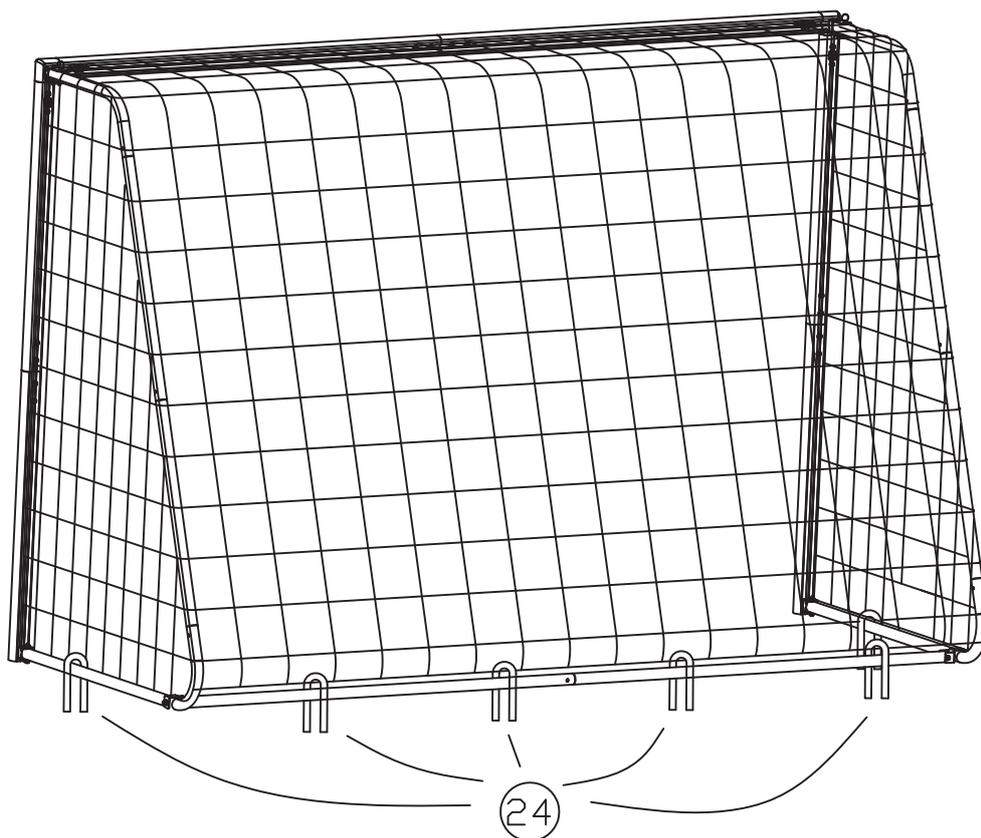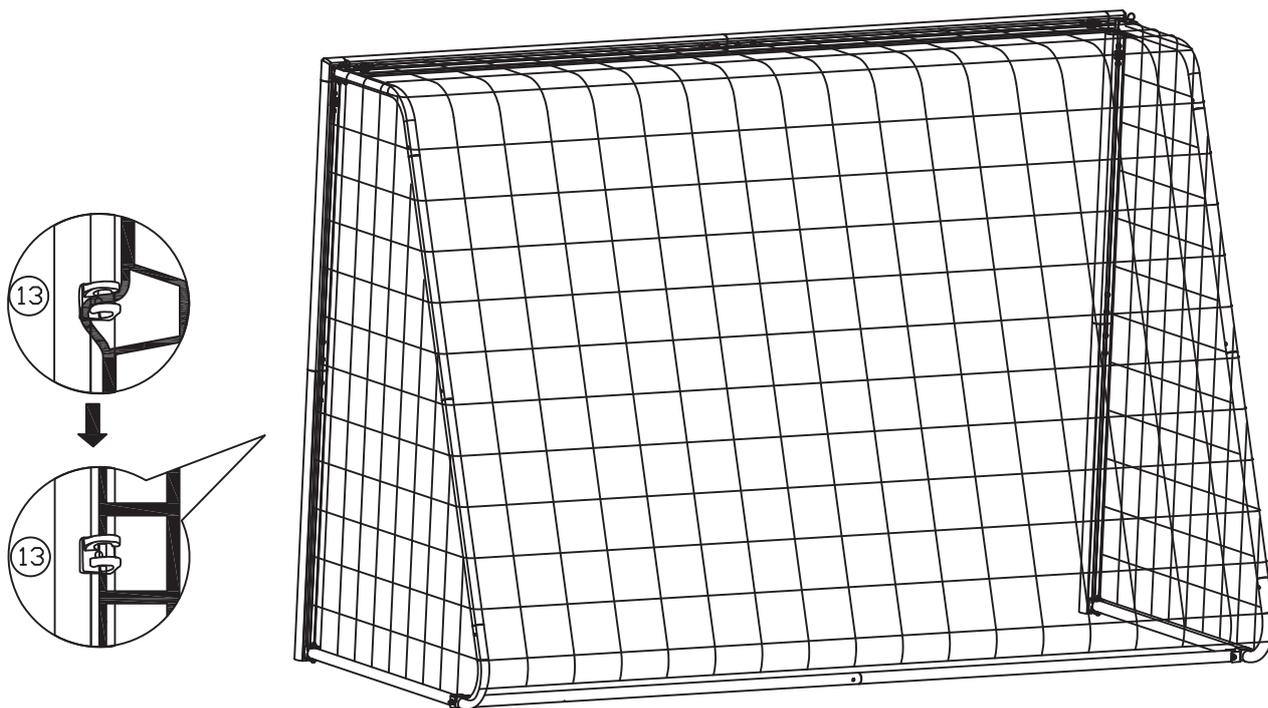

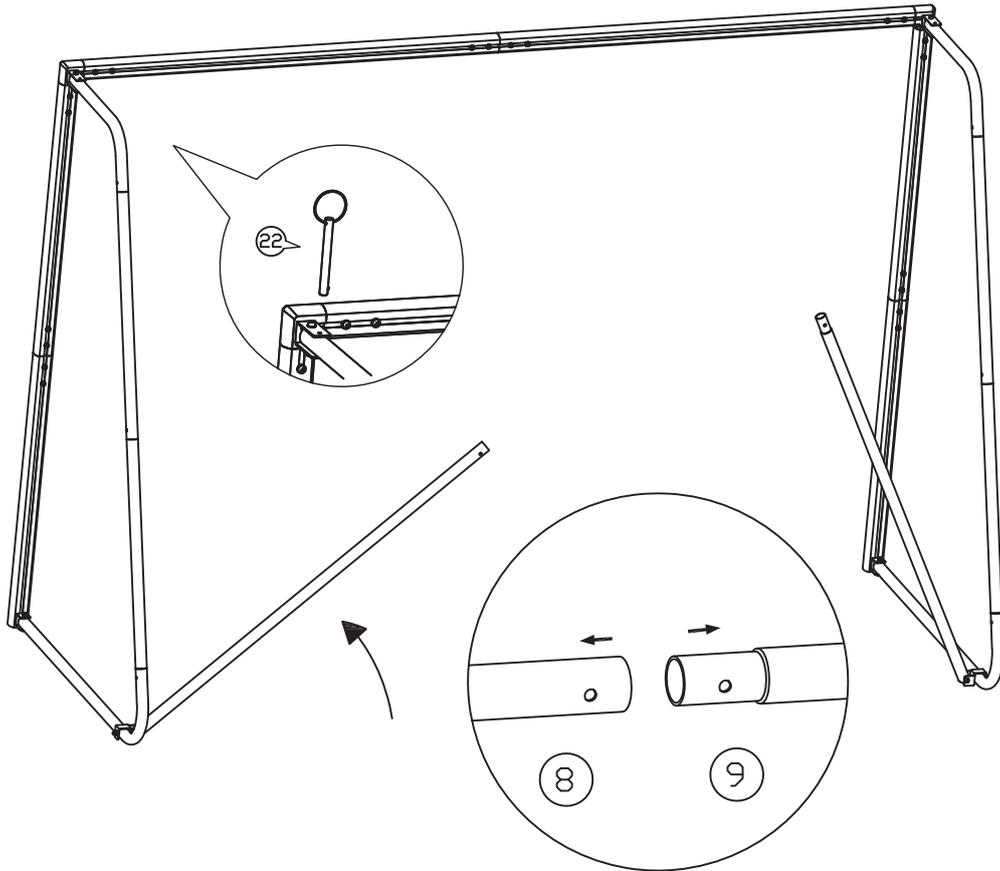

When you need folding soccer goal, pls pull out ②②, and disconnect ⑧ and ⑨, then push it inside, after folding goal and place it against the wall.

