


For use with Bullard Airline Respirators

Includes: AC1000 Cool Tube, belt bracket, nylon belt and heat shield.

Function: The AC1000 is designed to supply a continuous flow of cool air to certain Bullard supplied air respirators. Please consult the NIOSH approval matrix in your respirator user manual to verify that the AC1000 is NIOSH approved for your specific configuration. All Bullard parts must be present and properly assembled to constitute a NIOSH-approved respirator.

NOTE
The AC100035 is designed to operate at low pressures.

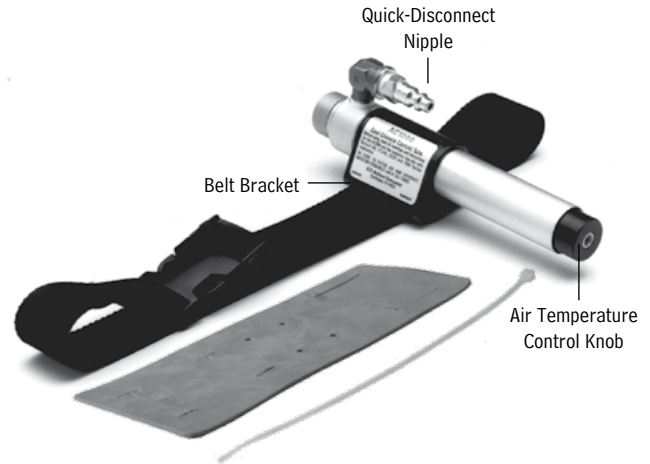

WARNING
Before using this product, read and follow all directions and warnings, including those in the respirator instruction manual. Failure to follow these instructions could result in death or serious injury.

WARNING
This climate control system is not recommended for cooling the air supply when the air temperature is less than 70°F. Since the system may cool the incoming air by more than 30°F, it is possible for ice to form in the breathing tube and reduce the airflow. Failure to observe this warning could result in death or serious injury.

WARNING
The respirator's air source must supply clean, breathable air, Grade D or better, at all times. The respirator does not purify air or filter out contaminants.
Connecting the respirator to a line supplying nitrogen or other harmful gases could cause death or serious injury.
Failure to follow these instructions could result in death or serious injury.

Air Quality Requirements

Respirable air must be supplied to the point-of-attachment of the BULLARD air supply hose that is part of the NIOSH approved system. The point-of-attachment is where the air supply hose connects to the fitting that contains a pressure gauge used to monitor the pressure of the air provided to you.

Locate the source of supplied air in a clean environment far enough from your work site to ensure the air remains contaminant-free. Always use an inlet filter on your air source and any monitors and alarms as necessary to assure clean, breathable air at all times.

Supplied breathing air **MUST** meet or exceed the requirements for Type 1 gaseous air described in the Compressed Gas Association Commodity Specification G-7.1 (Grade D or higher quality) as specified by Federal Law 42 CFR, Part 84, Subpart J, 84.141(b) and 29 CFR 1910.134(i)(1)(i). The requirements for Grade D breathable air include:

- Oxygen..... 19.5-23.5%
 - Hydrocarbons in mg/m³ of gas..... 5 mg/m³ max.
 - Carbon monoxide..... 10 ppm max.
 - Carbon dioxide..... 1,000 ppm max.
 - Odor No pronounced odor*
- No toxic contaminants at levels that make air unsafe to breathe.
* Specific measurement of odor in gases is impractical. Air normally may have a slight odor. The presence of a prolonged odor should render the air unsatisfactory.

Refer to C.G.A. Commodity Specification G-7.1 for complete details, or contact the Compressed Gas Association (1235 Jefferson Davis Highway, Arlington, VA 22202 or www.cganet.com).

Air Pressure

Continually monitor the air pressure at the point-of-attachment while operating the respirator. A reliable air pressure gauge must be present to monitor the pressure.

WARNING
Failure to supply the minimum required pressure at the point-of-attachment for your hose length will reduce airflow and could result in death or serious injury.

It is important to operate the Bullard climate control device in the prescribed pressure range for the particular Bullard respirator you are using. Operating the correct pressure range will insure that the correct air flow is delivered to the respirator and will maintain the NIOSH approval. Refer to your respirator user manuals' Breathing Air Pressure Table to determine the correct pressure that should be used with the climate control device. This table defines the pressure ranges necessary to provide the respirator with a volume of Grade D air that falls within the U.S. Government required range of 6-15 cfm (or 170-425 lpm). (See 42 CFR, Part 84, Subpart J, 84.150)

The **Breathing Air Pressure Table** defines the air pressure ranges necessary to provide the respirator with a volume of air that falls within the required range of 6-15 cubic feet per minute (cfm) or 170-425 liters per minute (lpm). Be sure you understand the information in the BREATHING AIR PRESSURE TABLE before using the respirator.

Distributed By:



2717 Tobey • Indianapolis, IN 46219
(317) 545-0665 • FAX (317) 545-0670 • (800) 800-0665
www.idsblast.com

www.bullard.com

Air Supply Hose

To maintain your Bullard respirator's NIOSH approval, use only approved Bullard V10 Series hose(s) in lengths of 25 to 300 feet, or Bullard V5 Series hose in lengths of 25 or 50 feet, between the AC1000's quick-disconnect fitting and the point-of-attachment to the hose. Bullard V11 hose-to-hose adaptors **MUST** be used to connect V10 hose lengths together. Secure connection(s) until wrench tight and leak free. The AC100035 is compatible only with Bullard V20 Series Air Supply Hose.


⚠ WARNING

Use of any other air supply hose voids NIOSH approval on the entire respirator assembly and could reduce the airflow to the respirator. Failure to observe this warning could result in death or serious injury.

Preparation and Use of the AC1000

1. In an uncontaminated atmosphere screw the hose connector fitting on the end of the breathing tube to the fitting on the AC1000. Tighten hose connectors firmly (**Figure 1**).

2. Lace the belt supplied with the Cool Tube through the belt bracket. Slots are provided for wearing the tube either vertically or horizontally on the waist. See Heat Shield instructions.

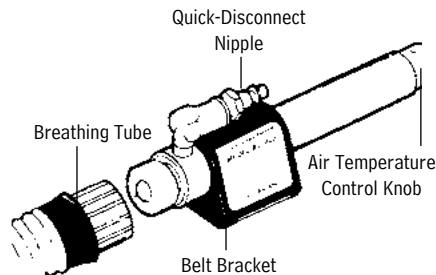

3. With the approved Bullard air supply hose connected to the air source and with air flowing into the hose, connect the quick-disconnect coupler on the air supply hose to the quick-disconnect nipple on the AC1000 Cool Tube.

4. Adjust the air pressure at the point-of-attachment to within the approved pressure range (**Figure 2**). See the Air Pressure section on the front page.

5. Don the respirator by following the directions in your respirator instruction manual. If you do not have instructions, contact Bullard Customer Service at the address or phone numbers given below.

6. To obtain cooler air, turn the air temperature control knob counterclockwise (**Figure 1**).

Maximum cooling is attained when knob is fully open and when there is maximum airflow out of the AC1000 exhaust port.

To obtain air that is closer to ambient temperature, turn air temperature control knob clockwise. If knob is fully closed, your respirator will receive air at ambient temperature.

7. When finished working, leave the work area wearing the respirator. With the air still flowing into the hood, remove the hood and then disconnect the air supply hose using the quick-disconnect coupler attached to the AC1000 Cool Tube.

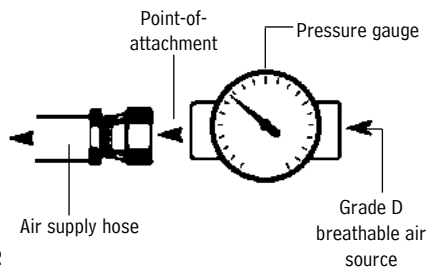


Figure 2

Heat Shield Instructions

The climate control heat shield is designed to work with the Bullard AC1000, HC2400, CT, HCT, or ACL99 climate control devices.

Assembly

The heat shield is designed to work with the standard nylon belt (part # 4612) supplied with the climate control devices.

1. Determine whether the climate control device will be worn vertically or horizontally on the waist.
2. If the device will be worn in the horizontal position, align the tube on the heat shield as shown in **Figure 3**. If the tube will be worn in the vertical position, align the tube on the heat shield as shown in **Figure 4**.
3. Lace the belt supplied with your climate control device through both the heat shield slots and the climate control belt bracket slots.
4. Use plastic zip tie to secure the climate control unit to the heat shield.

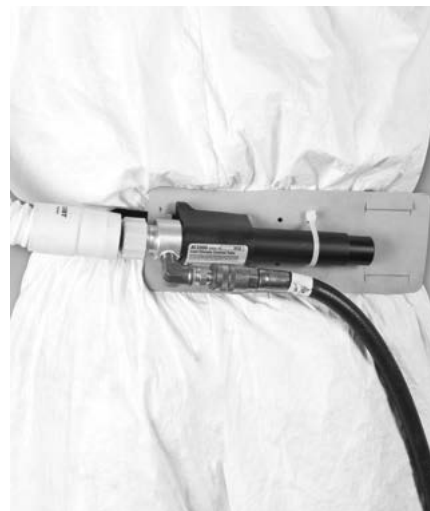


Figure 3



Figure 4

Americas:
Bullard
 1898 Safety Way
 Cynthiana, KY 41031-9303 • USA
 Toll-free within USA: 877-BULLARD (285-5273)
 Tel: +1-859-234-6616
 Fax: +1-859-234-8987

Europe:
Bullard GmbH
 Lilienthalstrasse 12
 53424 Remagen • Germany
 Tel: +49-2642 999980
 Fax: +49-2642 9999829

Asia-Pacific:
Bullard Asia Pacific Pte. Ltd.
 LHK Building
 701, Sims Drive, #04-03
 Singapore 387383
 Tel: +65-6745-0556
 Fax: +65-6745-5176



©2014 Bullard. All rights reserved.

60880010351 (1014)