


EDP10 Run Hour Meter Conversion Installation Instructions


EDP10 Run Hour Meter Conversion Kit - HM

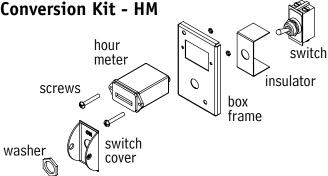


▲ WARNING

This run hour meter kit is intended for use on the EDP10 Bullard Free-Air Pump only. **Be sure power cord is unplugged before starting the steps below.**

- 1. Loosen nut on switch
- 2. Remove screws from switch plate and remove switch plate
- 3. Keep screws from switch plate accessible
- 4. Remove switch from plate (Figure 1)
- 5. Cut two wire jumpers 3.5" long
- 6. Remove wire P1 from switch and cut off the connecter
- 7. Strip wire P1 and one end of jumper wire (Figure 2)
- 8. Wrap the two strip ends together (Figure 3)
- Obtain ring connecter. Push wrapped wires into the ring connecter and crimp connector to wires (Figure 4)

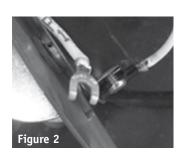


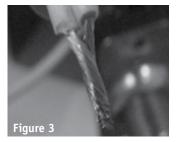




Americas: Bullard 1898 Safety Way Cynthiana, KY 41031-9303 ● USA Toll-free within USA: 877-BULLARD (285-5273) Tel: +1-859-234-6616 Fax: +1-859-234-8987

Europe: Bullard GmbH Lilienthalstrasse 12 53424 Remagen ● Germany Tel: +49-2642 999980 Fax: +49-2642 9999829

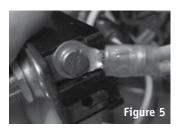



 - 10. Connect ring connector back to switch and bend toward the top of switch (Figures 5 and 6)
- 11. Repeat steps 7-10 for wires on other side of switch
- 12. Strip the other ends of the jumper wires, insert each into a slide Connector, and crimp securely
- Obtain box frame and screws from switch plate. Turn frame until the two (2) holes inside frame is on top (Figure 7)
- 14. Place screws in bottom left and top right of frame and bolt to motor
- Obtain cover to frame and switch insulator. Align switch and insert through cover



17. Obtain the hour meter, two (2) screws, and nuts. Attach hour meter in slot and bolt to cover using two (2) screws and nuts



Figure 7


18. Connect jumpers to the back of the hour meter


Figure 1

NOTE

Wires on hour meter can be connected to either side and operate correctly. (Figure 8)

19. Obtain two (2), 8-32 x 1.5" screws and bolt cover on using the threaded holes in the motor (Figure 9)

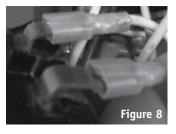

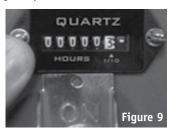

See the tutorial video on BullardTV You Tube (http://www.youtube.com/BullardTV)

For additional assistance call Bullard Customer Service 877-BULLARD.

Asia-Pacific: Bullard Asia Pacific Pte. Ltd. LHK Building

THE Building 701, Sims Drive, #04-03 Singapore 387383 Tel: +65-6745-0556 Fax: +65-6745-5176

©2015 Bullard. All rights reserved

