



Congratulations on choosing a BlackWolf Turbo tent, please read through this instruction booklet thoroughly before using your new tent.

BEFORE YOUR FIRST CAMPING TRIP

We strongly recommend you pitch your tent before you take it away for the first time to familiarise yourself with the process and to double check that all the components are included.

We recommend you weather your tent by hosing it thoroughly, the stitching in the bound seams will swell and this will help seal the stitching holes. Please note and fully understand that no tent can be guaranteed 100% waterproof. Whilst the fabric your tent is made from is waterproof in certain weather conditions such as strong wind and driven rain can cause some leakage through seams and zippers.

USING YOUR TENT

Always peg out all guy ropes at all times. In cool weather or high humidity condensation can form inside your tent. This is not coming through the fabric but is water vapour that is inside the tent (created when you breathe and perspire and also from

evaporation off wet items inside your tent). The best way to minimise condensation is to maximise ventilation by opening gusseted windows, vents and doors to allow air to flow through.

AFTER USE CARE


Where possible clean and dry your tent before packing it away, if the weather is bad and you have to pack your tent wet it is important to get it out and thoroughly dry it as soon as possible. NEVER store your tent wet, mildew can form on the fabric, pegs and other components can corrode. After coastal camping trips it is a good idea to rinse your gear in fresh water. Store your tent in a dry, well ventilated place.

COMPONENT LIST


- 1 x Turbo X-Lite LF tent with the frame attached
- 1 x Turbo Lite X-Lite LF fly
- 4 x Guy ropes (already attached to your tent and packed in fin pockets)
- 6 x Loose guy ropes (for windows)
- 1 x Awning pole (in 4 segments)
- 16 x steel pegs in peg bag
- 1 x Turbo tent bag

TURBO X-LITE LF TENT PITCHING INSTRUCTIONS


1. Choose a flat site, clear away any sharp sticks or stones that may damage your tent floor. Remove your tent from the carry bag and unclip the strap around the tent (put the strap back in the bag for packing up the tent). Then unclip the strap around the top of the frame that holds the pole bundle together.

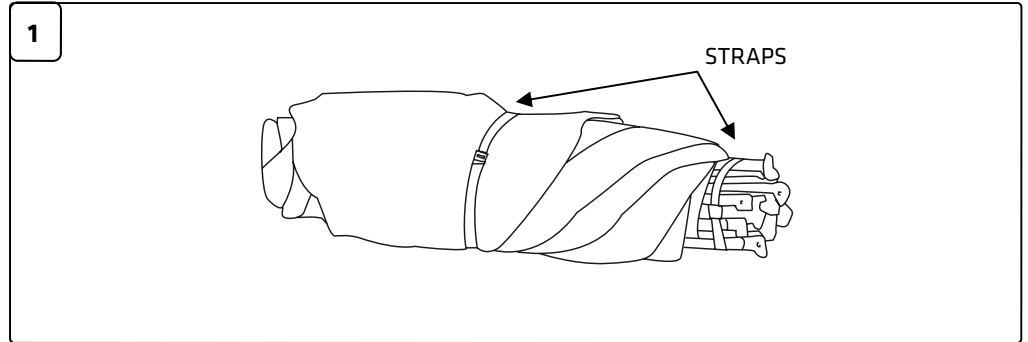


2. Unroll the tent, ensure the tent door is zipped closed, pull the corners into position so the floor is taught, and peg out the d-rings on the feet of the Turbo frame.

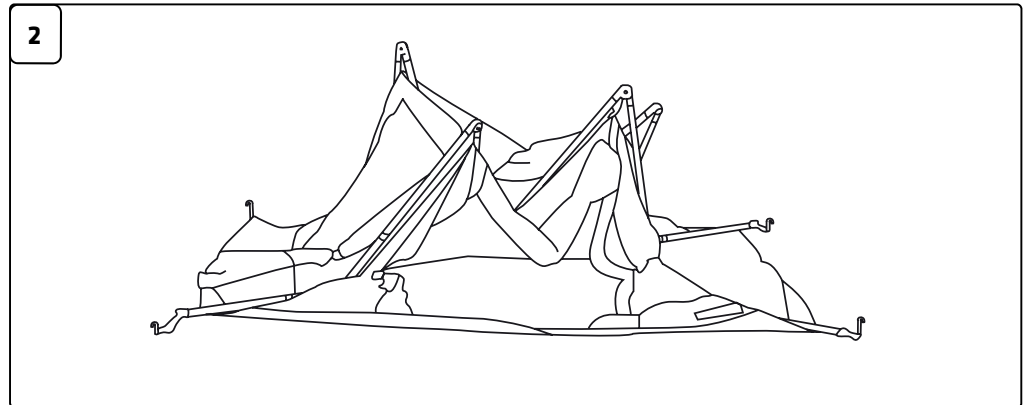

3. Straighten the legs, the lower knuckles will lock into place.

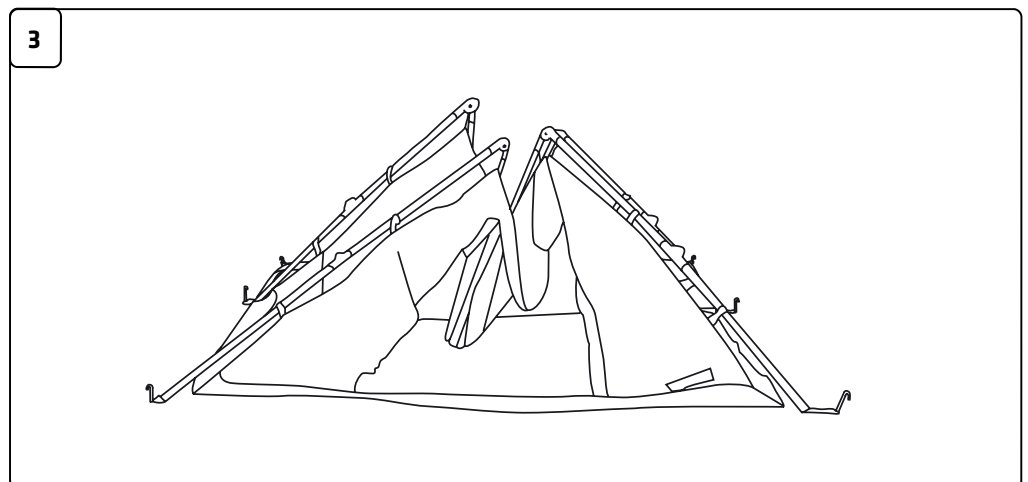

4. Un-zip the door and step inside the tent, push the centre hub up from underneath, it will "pop" into position, the inner is pitched.

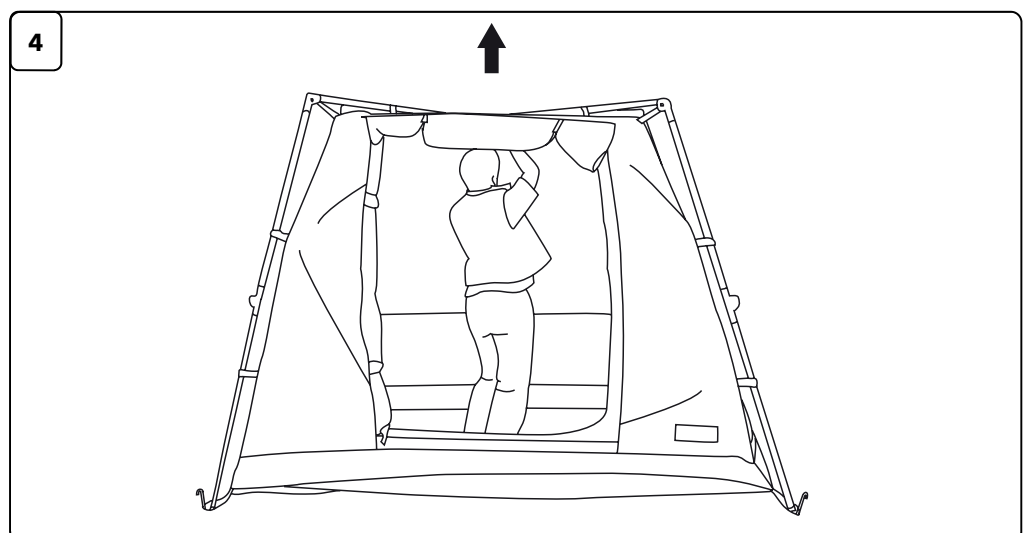


TURBO X-LITE LF TENT PITCHING INSTRUCTIONS *continued*

5. Un-fold the fly and lay it over the tent, the vestibule is at the front over the door. Clip the fly in place at the feet of the Turbo frame. Secure the Velcro loops on the inside of the fly to the frame.

Take the 4 awning pole segments, unzip the doors in the fly, thread the two curved segments into the pole sleeve inside the front of the vestibule at the top of each door zip, one from each side and join them in the middle. Attach the straight sections, the spigot end goes into the eyelet in the webbing tape between frame and tent. This is quite tight to create the tension on the awning. Zip the doors up and peg out the front of the vestibule, there are 2 peg out loops you should peg out only one depending on whether you want to use the front door or side doors to access the tent.

Peg out all remaining guy ropes, they are already attached to the tent packed away in the zippered pockets in the guy rope fins.

Short guy ropes are supplied for pegging out the gusseted windows for ventilation.

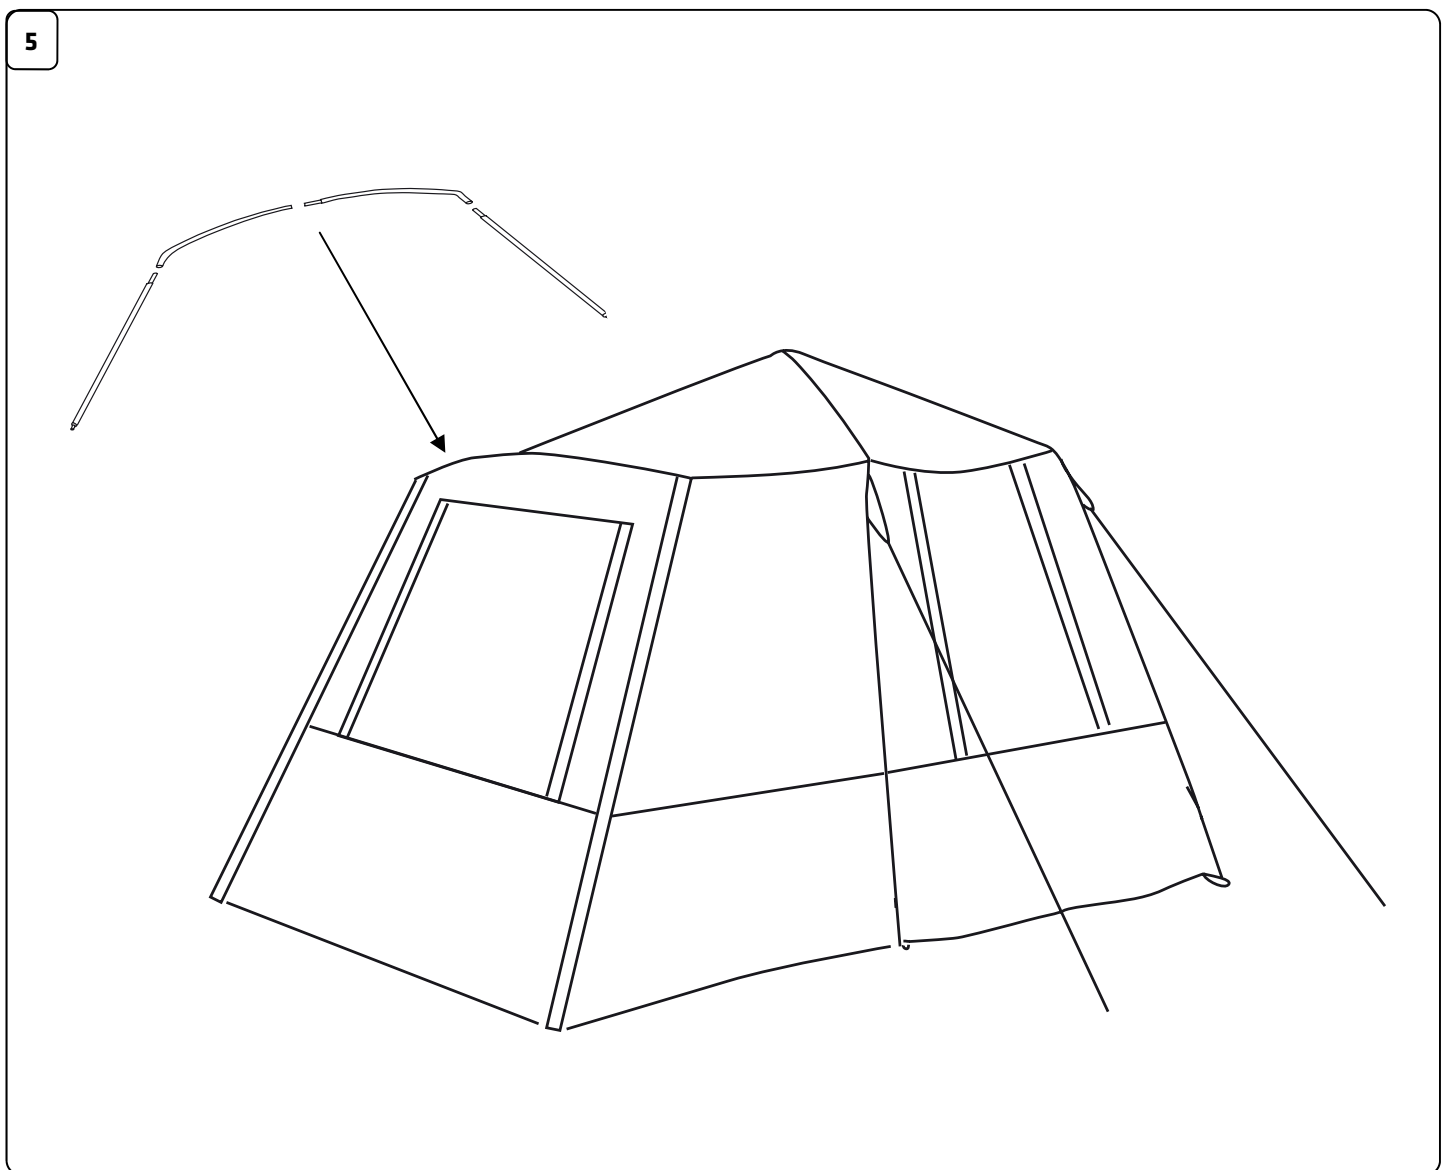

TURBO X-LITE LF PACKING INSTRUCTIONS

1. Unpeg the guy ropes and roll them up and return to zippered pockets in guy rope fins. Remove the awning pole ends from the eyelets, unthread from the pole sleeve and fold up. Unclip and remove the fly, allow to dry, if wet, before packing. (Your tent can be packed up wet but should be taken out and dried as soon as possible) Fold the fly to fit into the bag and put aside. Clean and dry all pegs before putting them back into their bag.

2. Go inside the tent, grab the handle in the centre of the roof and pull down, hold your other hand up to 'catch' one of the roof poles as the frame 'pops' down.

3. Lower the centre of the tent to the ground and step back outside the tent.

4. Press the button on the lower knuckles to release allowing the legs to fold.

5. Unpeg the tent corners and fold the corner up towards the centre of the tent, thread the webbing loop over the folded knuckle to hold the leg in the folded position.

6. Wrap the webbing strap around the pole bundle to hold it together.

7. Organise the floor folds into neat triangles, spend some time getting these neat and flat because it makes rolling the tent much easier.

8. Fold all the triangle floor panels to one side of the pole bundle and roll the tent around the poles. Secure the rolled tent with the strap.

9. The awning poles and pegs should go into the bag first followed by the tent then the fly on top.

