

TUFF TENT 7

PITCHING YOUR TENT

1. Choose a flat site, clear away any sharp sticks or stones that may damage your tent floor.
2. Lay out the inner tent and peg it out at the corners. Note the front of the tent where the vestibule will be has the door.
3. Assemble the poles ensuring each section locks together, you will have:
 - 2 x Main tent pole top arches (no colour marking)
 - 4 x Main tent pole hockey sticks (no colour marking)
 - 1 x Bedroom pole top arches (yellow marker tape)
 - 2 x Bedroom pole hockey sticks (yellow marker tape)
 - 1 x Vestibule pole top arches (red marker tape)
 - 2 x Vestibule pole hockey sticks (red marker tape)
4. The poles are colour coded to match the coloured tape on the pole sleeves, start with the yellow bedroom poles, thread the top arch poles through the poles sleeve. With one person on each side of the tent lift the top arch pole and attach the hockey stick poles on each side they should angle towards the front insert the pin on the ring into the pole. Next thread the main tent top arches through the pole sleeves across the top of the main room in the middle of the tent. Again with one person on each side of the tent lift one main tent arch pole from both sides and attach the hockey stick poles and insert the pin on the ring into the pole, repeat for the other main pole. Attach all the plastic c-clips to the poles. The inner is pitched.
5. Unroll the fly and lay it over the tent. The front of the fly has a pole sleeve for the vestibule pole. Line up the windows and door. Attach Velcro loops on inside of the fly to the poles. Thread the red vestibule top arch pole through the poles sleeve then attach the hockey stick poles on each side and insert the pin on the ring into the pole. Clip the fly to the tent at the base of the main poles at the front and back. Peg out all the loops on the fly.
6. Guy Ropes are already attached to your tent. It is important to securely peg out all guy ropes as the weather can change at any time.

Please Note:

Your tent is not fire-proof, be vigilant around flames and fire. Avoid cooking inside on open flames.

This tent is not designed or intended to be used as permanent accommodation.



PEG OUT AND PITCH THE INNER TENT FIRST

PITCHED TENT WITH FLY



The gusseted windows on your tent can be used for ventilation in almost any weather. Maximising ventilation will help to minimise condensation inside your tent.

BLACK WOLF

ESCAPE | EXPLORE | DISCOVER

COMPONENT CHECKLIST

- INNER TENT AND FLY
- 12 STEEL POLE ASSEMBLIES AND POLE BAG
 - 2 x Main tent pole top arches (no colour marking)
 - 4 x Main tent pole hockey sticks (no colour marking)
 - 1 x Bedroom pole top arches (yellow marker tape)
 - 2 x Bedroom pole hockey sticks (yellow marker tape)
 - 1 x Vestibule pole top arches (red marker tape)
 - 2 x Vestibule pole hockey sticks (red marker tape)
- 41 STEEL PEGS AND PEG BAG
- GUY ROPES (ALREADY ATTACHED TO THE TENT)

DISASSEMBLY AND TENT CARE

Remove the pegs from the guy ropes, roll up the guy ropes and stow them in the guy rope fin pockets.

Unclip the fly from the inner and remove, ensure it is completely dry before folding up. Remove all the poles by pushing them out, rather than pulling.

Clean any dirt from the pole ends. Fold the poles up and return to their bag.

Remove remaining pegs and clean them before they are put away.

Turn the inner over to expose the floor - if this is damp or dirty, clean and allow to dry. Flip the inner the right way up and lay the fly evenly out on top. Fold it up, folding into the centre, until the width is the size of the carry bag, then roll up.

If you must pack your tent up when wet, dry out as soon as possible to avoid mildew damage. If you have been camping in a coastal environment everything should be rinsed in fresh water before storing for an extended period.

The specifications of your tent may vary from what is shown as we are always working to improve and update our products.

Made in China