

CLASSIC DOME 4+

PITCHING YOUR TENT

1. Choose a flat site, clear away any sharp sticks or stones that may damage your tent floor.
2. Lay out the inner tent and peg it out at the corners.
3. Assemble the poles ensuring each section locks together to form continuous lengths.
4. The two long black poles goes from corner to opposing corner. Insert the pole end into the pin on the ring at the corner of the tent and the other end into the pin on the corner diagonally opposite. Attach the plastic c-clips on the inner tent to the poles. The inner is pitched.
5. Unroll the fly and lay it over the tent, the front of the tent has the power cord inlet and the front of the fly has the vestibule and main door. Attach Velcro loops on inside of the fly to the poles. Hook the corners to the rings. Thread the vestibule pole through the sleeve in the fly and insert the pole ends into the pins on the rings at the front corners of the tent. Peg out the front, back and sides of the fly.
6. Guy ropes are already attached to your tent. It is important to securely peg out all guy ropes as the weather can change at any time.

Please Note:

*Your tent is not fire-proof, be vigilant around flames and fire.
Do not cook inside your tent.
This tent is not designed or intended to be used as permanent accommodation.*

Peg out and pitch the innertent first



Pitched tent with fly



BLACK WOLF

ESCAPE | EXPLORE | DISCOVER

COMPONENT CHECKLIST

- Inner tent and Fly
- Fibreflex poles, 4 assemblies and pole bag
- 15 Steel pegs and peg bag
- Guy ropes (already attached to tent)

DISASSEMBLY AND TENT CARE

Detach the fly from the inner and remove. Remove all the poles and clean any dirt from the end ferrules. Fold these up and return to their carry bag. Remove all pegs and clean them before they are put away. Turn the inner over to expose the floor - if this is damp or dirty, clean and allow to dry.

Flip the inner the right way up and lay the fly evenly out on top. Fold it up, folding into the centre, until the width is the size of the carry bag. Then roll up, including the pole and peg bags in the roll.

If you must pack your tent up when wet, dry out as soon as possible to avoid mildew damage.

The specifications of your tent may vary from what is shown as we are always working to improve and update our products.

Made in China