

# CLASSIC DOME 6

## PITCHING YOUR TENT

1. Choose a flat site, clear away any sharp sticks or stones that may damage your tent floor.
2. Lay out the inner tent and peg it out at the corners.
3. Assemble the poles ensuring each section locks together to form continuous lengths.
4. The two long black poles go from the back corner to the middle of the tent to create the main room. Thread the poles through the pole sleeves marked with black tape, one person should go inside the tent and lift the poles from the centre while the other person inserts the pole ends into the pin on the ring in the middle of the tent and the other end into the pin on the corner. Attach the plastic c-clips on the inner tent to the poles.
5. The red poles go from side to side across the front of the inner tent. Thread the poles through the pole sleeves marked with red tape, insert the pins on the rings into the pole ends and attached the c-clips on the inner tent to the poles. The inner is pitched.
5. Unroll the fly and lay it over the tent, the front of the tent has front and side doors, the main room has a rear door and side vents. Attach Velcro loops on inside of the fly to the poles. Hook the corners to the rings. Peg out the front, back and sides of the fly.
6. Guy ropes are already attached to your tent. It is important to securely peg out all guy ropes as the weather can change at any time.

Please Note:

*Your tent is not fire-proof, be vigilant around flames and fire.*

*Do not cook inside your tent.*

*This tent is not designed or intended to be used as permanent accommodation.*

Peg out and pitch the inner tent first



Pitched tent with fly



# BLACK WOLF

ESCAPE | EXPLORE | DISCOVER

## COMPONENT CHECKLIST

- Inner tent and Fly
- Fibreflex poles, 4 assemblies and pole bag
- 27 Steel pegs and peg bag
- Guy ropes (already attached to tent)

## DISASSEMBLY AND TENT CARE

Detach the fly from the inner and remove. Remove all the poles and clean any dirt from the end ferrules. Fold these up and return to their carry bag. Remove all pegs and clean them before they are put away. Turn the inner over to expose the floor - if this is damp or dirty, clean and allow to dry.

Flip the inner the right way up and lay the fly evenly out on top. Fold it up, folding into the centre, until the width is the size of the carry bag. Then roll up, including the pole and peg bags in the roll.

If you must pack your tent up when wet, dry out as soon as possible to avoid mildew damage.

The specifications of your tent may vary from what is shown as we are always working to improve and update our products.

Made in China