

Grasshopper

PITCHING YOUR TENT

1. Choose a flat site, clear away any sharp sticks or stones that may damage your tent floor.
2. Lay out the inner tent and peg it out at the corners.
3. Assemble the poles ensuring each section locks together.
4. The poles are colour coded to match the end tapes and the tapes on the c-clips. The long pole goes from one corner to the other and the 2 short poles go over the long pole from the tent corners to the eyelets above the doors. Attach the plastic c-clips on the inner tent to the poles. The inner is pitched.
5. Unroll the fly and lay it over the tent and line up the doors. Attach the eyelets at the top of each door to the short pole ends above the inner tent doors. Peg out all the fly peg points.
6. It is important to securely peg your tent and all guy ropes, as the weather can change at any time.

Please Note:


Your tent is not fire-proof, be vigilant around flames and fire. Do not cook inside your tent.

The specifications of your tent may vary from what is shown as we are always working to improve and update our products.

Made in China



ESCAPE | EXPLORE | DISCOVER

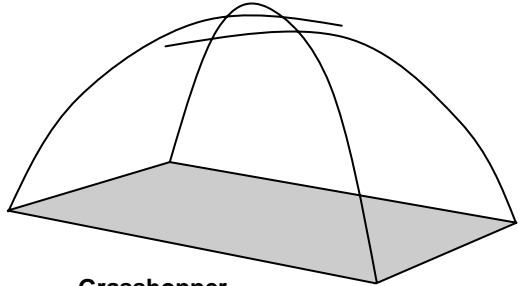

Grasshopper

Pole assembly guide

COMPONENT CHECKLIST

- Inner tent and Fly
- T6 Aluminium pole, 3 assemblies and pole bag
- 12 Alloy pegs and peg bag
- Guy ropes (already attached to tent)

DISASSEMBLY AND TENT CARE

Remove all pegs and clean them before they are put away. Unhook the fly from the inner and remove. Remove the poles, fold up and return to the pole bag. Turn the inner over to expose the floor - if this is damp or dirty, clean and allow to dry.

Flip the inner the right way up and lay the fly evenly out on top. Fold it up, folding into the centre, until the width is the size of the carry bag. Then roll up, including the pole and peg bags in the roll.

If you must pack your tent up when wet, dry out as soon as possible to avoid mildew damage.