

MANTIS UL1

PITCHING YOUR TENT

1. Choose a flat site, clear away any sharp sticks or stones that may damage your tent floor.
2. Lay out the inner tent and peg it out at the corners.
3. Assemble the poles ensuring each section locks together.
4. Thread the poles through the pole sleeves. Insert the pole end into the eyelet in the tape, make sure the pole sleeve is aligned with the top section of the pole and insert the other pole end into the eyelet in the tape. Repeat for the second pole. Attach the plastic c-clips on the inner tent to the poles. The inner is pitched.
5. Unroll the fly and lay it over the tent and line up the doors. Attach the velcros on the inside of the fly to the matching velcros on the top of the pole sleeves. Peg out all the fly peg points.
6. It is important to securely peg your tent and all guy ropes, as the weather can change at any time.

Please Note:

Your tent is not fire-proof, be vigilant around flames and fire. Do not cook inside your tent.

The specifications of your tent may vary from what is shown as we are always working to improve and update our products.

Made in China

BLACK WOLF

ESCAPE | EXPLORE | DISCOVER



MANTIS
pole assembly guide

COMPONENT CHECKLIST

- Inner tent and Fly
- T6 Aluminium poles, 2 assemblies and pole bag
- 12 Alloy pegs and peg bag
- Guy ropes (already attached to tent)

DISASSEMBLY AND TENT CARE

Remove all pegs and clean them before they are put away. Unhook the fly from the inner and remove. Remove the poles, fold up and return to the pole bag. Turn the inner over to expose the floor - if this is damp or dirty, clean and allow to dry.

Flip the inner the right way up and lay the fly evenly out on top. Fold it up, folding into the centre, until the width is the size of the carry bag. Then roll up, including the pole and peg bags in the roll.

If you must pack your tent up when wet, dry out as soon as possible to avoid mildew damage.