

STEALTH ALPHA

PITCHING YOUR TENT

1. Choose a flat site, clear away any sharp sticks or stones that may damage your tent floor.

2. Lay out the tent, inner and fly are joined together, peg one corner.

3. Assemble the poles ensuring each section locks together.

4. The 2 longer poles are for the front frame they go from apex to corner. On the inside of the fly at the top front apex there are small pole pockets for the ends of the poles with the cap, at the other end insert the pin attached to the metal ring into the metal ferrule on the pole. Peg through the metal rings stand the front of the tent up and peg out the front of the vestibule.

5. At the rear the short pole goes into a pocket in the apex of the fly (accessed from the outside) then into the eyelet in the tape that extends from corner to corner at the rear. Peg out the back centre of the fly and then the two sides

6. Once the tent is standing peg out the front and rear guy ropes. Your tent is pitched.

Please Note:

Your tent is not fire-proof, be vigilant around flames and fire. Do not cook inside your tent.

The specifications of your tent may vary from what is shown as we are always working to improve and update our products.

Made in China

BLACK WOLF

ESCAPE | EXPLORE | DISCOVER



COMPONENT CHECKLIST

- Inner tent and Fly
- Fibreflex poles, 3 assemblies
- 8 pegs
- Guy ropes (already attached to tent)

DISASSEMBLY AND TENT CARE

Remove all pegs and clean them before they are put away. Remove the poles, fold up and return to the pole bag. Turn the tent over to expose the floor - if this is damp or dirty, clean and allow to dry.

Flip the tent the right way up. Fold it up, folding into the centre, until the width is the size of the carry bag. Then roll up, including the pole and peg bags in the roll.

If you must pack your tent up when wet, dry out as soon as possible to avoid mildew damage.