

# Stealth Mesh



## PITCHING YOUR TENT


1. Choose a flat site, clear away any sharp sticks or stones that may damage your tent floor.
2. Lay out the inner tent.
3. Assemble the poles ensuring each section locks together.
4. Thread the poles through the pole sleeves. Insert the pin attached to the ring into one pole end, from the other end of the pole push the pole into an arc and insert the pin into the other pole end. Repeat for the second pole. Peg out the corners securely. The inner is pitched.
5. Unroll the fly and lay it over the tent and line up the doors of the inner and fly. Attach the velcro tabs inside the fly to the matching velcros at the top of each arc. Clip the corners of the fly to the buckles on the d-rings. Peg out the front of the fly to create the vestibule.
6. It is important to securely peg your tent and all guy ropes, as the weather can change at any time.

### Please Note:

Your tent is not fire-proof, be vigilant around flames and fire. Do not cook inside your tent.

The specifications of your tent may vary from what is shown as we are always working to improve and update our products.

Made in China

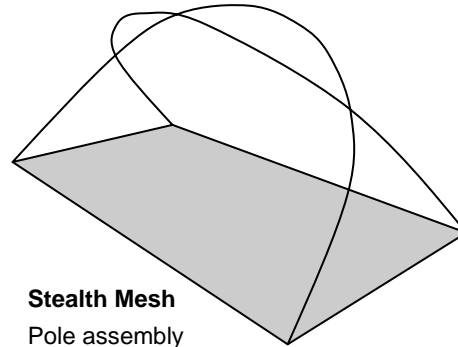

### Stealth Mesh

Pole assembly guide

## COMPONENT CHECKLIST

- Inner tent and Fly
- 8.5mm Fibreflex poles, 2 assemblies and pole bag
- 11 steel pegs and peg bag
- Guy ropes (already attached to tent)

## DISASSEMBLY AND TENT CARE

Remove all pegs and clean them before they are put away. Unclip the fly from the inner and remove. Remove the poles, push the poles out of the pole sleeves (don't pull) fold up and return to the pole bag. Turn the inner over to expose the floor - if this is damp or dirty, clean and allow to dry.

Flip the inner the right way up and lay the fly evenly out on top. Fold it up, folding into the centre, until the width is the size of the carry bag. Then roll up, including the pole and peg bags in the roll.

If you must pack your tent up when wet, dry out as soon as possible to avoid mildew damage.