

AIRLESS

MANUAL SPRAY GUNS SERIES



USE AND
MAINTENANCE
INSTRUCTION
MANUAL



ALG-7 TE WB

(TRIGGER 4 FINGERS)

ALG-72 TE WB

(TRIGGER 2 FINGERS)



EN - IT

1. IMPORTANT INFORMATIONS

IMPORTANT	
	This manual is an integral part of the Airless Spray Gun and must be read carefully before starting ANY ACTIVITY involving the use, adjustment and maintenance of the equipment, including its handling. This manual must be stored in a safe place for any future reference. Be sure to observe warnings and cautions in this instruction manual.
COMPLIANCE TO STANDARD OF SPRAY GUN	
The ANEST IWATA Airless Spray Guns comply with 2014/34/EU Directive relating to equipment and protective systems intended for use in explosive potentially atmospheres.	
COMPLETE COMPLIANCE MARKING:	  II 2 G Ex h IIB T6 Gb X +5°C ≤ Ta ≤ +40°C
ABBREVIATE MARKING ON THE SPRAY GUN:	  II 2 G Ex h X

BE SURE TO FOLLOW WARNING AND CAUTION REQUIREMENTS INDICATED BY THE FOLLOWING SYMBOL WHOSE CONTENT IS PARTICULARLY IMPORTANT FOR SAFETY.

SYMBOL	WARNING	HAZARD LEVEL	CONSEQUENCE
	WARNING	POTENTIALLY HAZARDOUS SITUATION	DEATH OR SERIOUS INJURY
	CAUTION		MINOR TO MODERATE INJURY
	IMPORTANT		PROPERTY DAMAGE

2. TECHNICAL SPECIFICATION

Max. operating pressure:	250 bar (3600 PSI)	Fluid output l/min.	Refer to the data included in the chart for the choice of the tip nozzle, on the last page of the manual.
Fluid hose connection:	G1/4"	Weight g (lbs):	ALG-7 WB: 440 (0.97) / ALG-7 TE WB: 415 (0.91)
Noise Level (LAeqT)*:	62.9 dB(A)	Filter:	100 Mesh (included)
*Measuring point: 1m backwards from gun, 1.6m height. Max. Temperature range: Atmosphere 5-40°C / Air-Fluid 5-43°C			

3. SAFETY WARNING

 WARNING	FIRE AND EXPLOSION HAZARDS
	SPARKS AND OPEN FLAMES ARE STRICTLY PROHIBITED Paints can be highly flammable and can cause fire. Do not expose to open flames, electrical goods, cigarettes etc.
	SECURELY GROUND AIRLESS SPRAY GUN BY USING FLUID HOSE WITH BUILT-IN GROUND WIRE. ELECTRICAL RESISTANCE: <1MΩ. Check the earth stability periodically. Securely ground pump, Airless spray gun, workpiece and containers containing paint. Be sure to use fluid hose with built-in ground wire to have continuous grounding between pump and Airless spray gun. Use conductive container containing paint. If not, insufficient grounding can cause fire and explosion due to static electric sparking.
	NEVER USE THE FOLLOWING HALOGENATED HYDROCARBON SOLVENTS which can cause cracks or dissolution on gun body (aluminium) by chemical reaction. UNSUITABLE SOLVENTS: methyl chloride, dichloromethane, 1,2-dichloroethane, carbon tetrachloride, trichloroethylene, 1,1,1-trichloroethane. BE SURE THAT ALL FLUIDS AND SOLVENTS ARE COMPATIBLE WITH GUN PARTS.
 WARNING	PROTECTION OF HUMAN BODY
	USE THE AIRLESS SPRAY GUN IN A WELL-VENTILATED SITE BY USING A SPRAY BOOTH. If not, poor ventilation can cause organic solvent poisoning and catch fire. If you feel any abnormality during operation, consult a medical doctor immediately.

 WARNING	PROTECTION OF HUMAN BODY
	ALWAYS WEAR PROTECTIVE GEAR (safety glasses, mask, gloves.) If not, cleaning liquid, etc., can cause inflammation of eyes and skin. In case of any physical discomfort for skin or eyes, immediately seek a medical advice.
	WEAR EARPLUGS IF NECESSARY. Noise level can exceed 85 dB(A), depending on operating conditions and painting site.
	NEVER TRY TO STOP LEAKS BY HAND, WHEN PAINT LEAKS. In case of leaks, stop pump immediately and reduce paint pressure down to 0 pressure. If you feel any abnormality or receive any injury, consult a medical doctor immediately.
	BEFORE TO FIT OR TO REMOVE NOZZLE TIP BE SURE TO STOP PUMP, REDUCE FLUID PRESSURE DOWN TO 0 BAR AND SECURELY APPLY SAFETY LOCK OF AIRLESS SPRAY GUN. Emission of paint during operation can cause great danger. The pulsations of flow gun or pulling trigger many times during painting operation, may cause carpal tunnel syndrome. ALWAYS REST, IN CASE OF TIREDNESS or discomfort for your hand and stop operations for a short break. It is recommendable to damp the pulsations emitted from pump, by using damping components placed on the inlet connection(s) of the equipment or using an anti-pulsation hose.

 WARNING	FLUID HOSE HAZARDS
	SECURELY CONNECT FLUID HOSE. If hose is disconnected during operation, hazardous hose movement and paint ejection will cause severe bodily injury.
	NEVER USE CRACKED, DAMAGED, BENT OR CRUSHED FLUID HOSE. High pressure paint emitted from small hole can pierce an iron plate and cause great danger.
	NEVER BEND FLUID HOSE WITH A RADIUS OF LESS THAN PERMITTED BEND RADIUS. Contact your Distributor, to have notice about permitted bend radius. NEVER PUT HEAVY THINGS ON IT in order not to damage the hose. If done, the hose can explode causing great danger.

 WARNING	IMPROPER USE OF THE EQUIPMENT
	NEVER EXCEED MAXIMUM OPERATING PRESSURE AND MAXIMUM OPERATING TEMPERATURE. Use at more than Max. operating pressure and Max. Temperature range can cause explosion of Airless spray gun resulting in great danger.
	ALWAYS RELEASE FLUID PRESSURE BEFORE CLEANING, DISASSEMBLING OR SERVICING. Otherwise, remaining pressure can cause bodily injury due to improper operation or scattering cleaning liquid.
	NEVER POINT AIRLESS SPRAY GUN TOWARDS PEOPLE OR ANIMALS.
	NEVER USE THIS GUN TO SPRAY FOODS OR CHEMICALS. Otherwise, foreign substance, could cause corrosion of fluid passages which could adversely affect health.
	NEVER ALTER THIS AIRLESS SPRAY GUN. If done, it can cause insufficient performance and failure or in extreme cases, explosions.

 WARNING	OTHER PRECAUTION
	IN THE CASE OF MALFUNCTIONING, IMMEDIATELY STOP OPERATION AND FIND THE CAUSE OF THE FAILURE. Do not use again until you have solved the problem.
	DO NOT ENTER WORKING AREAS, WHERE ROBOTS, RECIPROCATORS, ETC. ARE USED, UNTIL THEY HAVE BEEN TURNED OFF. Otherwise, they could cause injury.
	NEVER USE SPARE PARTS THAT ARE NOT ANEST IWATA ORIGINALS.
	ALWAYS USE A NEUTRAL CLEANER: whose pH value must be between 6 and 8, to avoid any risk of corrosion of the materials that make up the product.

4. CHECKING OF THE PRODUCT

IMPORTANT

WHEN RECEIVING THE AIRLESS SPRAY GUN, MAKE SURE THAT IT HAS NOT BEEN DAMAGED DURING TRANSPORT OR STORAGE AND ALSO CHECK THAT ALL THE CONTENTS ARE INSIDE THE BOX.

In case there are some damaged or missing components, DO NOT USE THE PRODUCT TO AVOID DANGER AND IMMEDIATELY CONTACT THE DISTRIBUTOR WHO SOLD IT TO YOU.

ALWAYS KEEP CAUTION PLATES (WARNING DISPLAY) CLEAN AND IN GOOD CONDITION. If they are damaged or missing, replace with new ones.

ALG 7 TE WB

ALG 72 TE WB

5. SET UP OF THE AIRLESS SPRAY GUN

WARNING

FLUID HOSE CONNECTION

ALWAYS FIRMLY CONNECT FLUID HOSE.
If hose is disconnected during operation, hazardous hose movement and fluid ejection will cause severe bodily injury. If fluid leaks from hose, never try to stop it by hand. Stop pump immediately and reduce fluid pressure down to 0 bar.

Fluids or solvent can enter in human body directly through eye, mouth or skin. It is very dangerous.
IF YOU FEEL ANY ABNORMALITY OR RECEIVE ANY INJURY, CONSULT A MEDICAL DOCTOR IMMEDIATELY.

BEFORE USING A NEW AIRLESS SPRAY GUN FOR THE FIRTS TIME, CLEAN FLUID PASSAGES INSIDE IT. If not, rust preventive oil inside Airless gun can cause failure.

WARNING

BEFORE FIT OR REMOVE NOZZLE TIP, BE SURE TO STOP PUMP, REDUCE FLUID PRESSURE DOWN TO 0 BAR AND SECURELY APPLY SAFETY LOCK OF AIRLESS SPRAY GUN.

FLAT TIP ASSEMBLY

1. Apply safety lock.

2. Fit Nozzle Tip and tighten Nozzle Holder

3. Adjust nozzle tip position with 200 mm monkey wrench.

4. Fix hand guard in parallel with nozzle tip.

REVERSIBLE TIP ASSEMBLY

1. Apply safety lock.

2. Remove hand guard.

3. Remove nozzle holder and fit the reversible tip.

4. Fit hand guard.

HOW TO REMOVE THE HAND GUARD

Pull it upwards and then in direction of the arrow.

Hand guard

7. PAINTING JOB

WARNING

During painting, be sure to wear protective gear such as glasses, mask or gloves to avoid serious injury caused by paint or solvent which might enter your eyes or you might inhale.

As fluid pressure increases, paint mist becomes finer and finishing becomes better. But on the other hand, high pressure can be dangerous and precipitate corrosion of equipment and nozzle tip. Adjust pressure as low as possible, whilst still maintaining a satisfactory finish.

8. CLEANING & MAINTENANCE

WARNING

Fully clean after each use with compatible cleaning liquid, to ensure longer lifetime of the spray gun and good performance in the next job.

During painting, be sure to wear protective gear such as glasses, mask or gloves to avoid serious injury caused by paint or solvent which might enter your eyes or you might inhale.

Be sure to stop pump and reduce fluid pressure down to 0 bar before disassembling Airless spray gun. Only an experienced person who is fully conversant with the equipment can do maintenance and inspection.

Never use spare parts that are not ANEST IWATA Originals.

WHERE TO CLAEN	HOW TO PROCEED
1. Nozzle Tip	Remove nozzle tip from Airless spray gun and clean it.
2. Inside gun body	Clean inside of Airless spray gun with cleaning liquid which is compatible with paint being used.
3. Filter set	A. Remove No.12 handle from gun body. B. Remove and clean No.11 filter set.

9. NOZZLE TIP SELECTION

NUMBERING SYSTEM

VTR200209

Example: VTR200 2 09


Diagram showing the numbering system with labels: Nozzle Tip Serie, Pattern width, Orifice in inch.

IMPORTANT: USE NOZZLE TIP WITH LARGE FIGURES OF LAST 2 DIGITS WHEN YOU SPRAY PAINTS OF HIGH VISCOSITY OR EASILY CLOGGED.


NOTE

REFER TO THE AIRLESS TIPS SELECTION CHART ON PAGE 16, TO FIND THE MOST SUITABLE AIRLESS NOZZLE TIP.


10. SPARE PART LIST

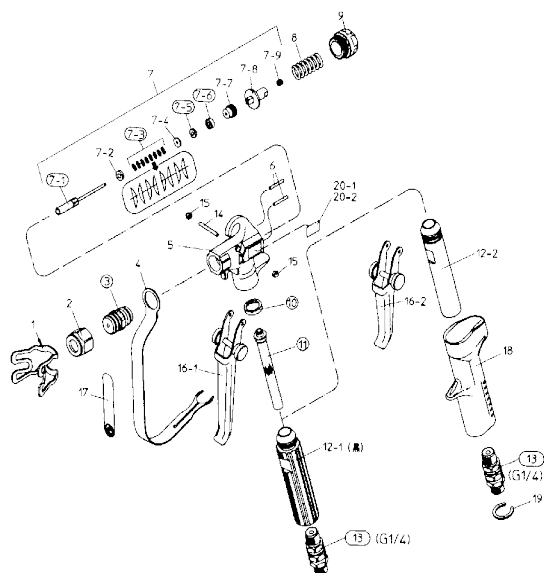

ALG-7 TE WB

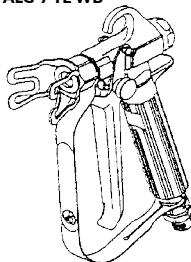

ALG-72 TE WB

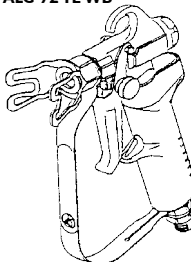

REF.	CODE	DESCRIPTION	
1	03501170	HAND GUARD	
2	93547180	NOZZLE HOLDER (11/16")	
3	93545180	NOZZLE GLAND SET UNIVERSAL (11/16")	●
4	93504170	SAFETY GUARD	
6	03502180	NEEDLE SEAT	
7	93807170	NEEDLE SET	
7-1	93808170	NEEDLE BAR SET	●
7-2	03504180	SPRING HOLDER	
7-3	03844170	SPRING WASHERS	●
7-4	03067951	PACKING HOLDER	
7-5, 7-6	03846170	NEEDLE PACKING SET	●
7-7	03505180	NEEDLE PACKING SEAT	
7-8	03500190	NEEDLE SPRING HOLDER	
7-9	06994603	SCREW	

REF.	CODE	DESCRIPTION	Model	
8	03501190	NEEDLE SPRING		
9	93074790	NEEDLE SPRING SEAT		
10	03529180	PACKING		●
11	VFM2008	FILTER 100 Mesh		●
12-1	03503190	HANDLE	ALG 7 WB	
12-2	93511180	HANDLE	ALG 72 WB	
13	93003951	UNIVERSAL JOINT		●
14	03504190	TRIGGER STUD		
15	06994103	HEX. CAP NUT		
16-1	03805180	TRIGGER SET (4 fingers)	ALG 7 WB	
16-2	93806180	TRIGGER SET (2 fingers)	ALG 72 WB	
18	93507190	OUTER HANDLE		
19	03525170	STOPPER	ALG 72 WB	

NOTE ● Marked parts are wearable parts.

11. PROBLEMS CAUSES AND REMEDIES

IMPORTANT	AS FOR MARKED ITEMS (*), ASK TO YOUR DISTRIBUTOR TO REMEDY IT FOR YOU. INCORRECT REMEDY CAN NOT ACHIEVE SATISFACTORY PERFORMANCE.	
PROBLEM	CAUSE	REMEDY
PAINT DOES NOT COME OUT	Nozzle tip is clogged.	Clean nozzle tip and remove foreign matter from hole by needle.
	The paint is not fed.	Inspect pump.
	Filter set [11] is completely clogged.	Clean or replace.
PAINT COMES OUT WEAKLY	Pump pressure is low.	Increase pump pressure.
	Filter set [11] is clogged.	Clean or replace.
	Nozzle tip is worn or the size of nozzle tip is too large. (Pump capacity is small compared with nozzle tip being used.)	Replace with new tip or proper sized tip.
PAINT DOES NOT STOP SMOOTHLY. (Paint leaks from the gun tip).	Pump pressure is too high.	Reduce paint pressure down to 250 bar (3.600 PSI)
	Paint sticks to needle packing [7-6].	Disassemble, clean or replace parts.*
	Paint sticks to needle seat [6].	Disassemble, clean or replace parts.*
	Seat between needle bar set [7-1] and nozzle gland set [3] is worn.	Disassemble, clean or replace parts.*
PAINT LEAKS FROM Needle Spring Seat [9] or Needle Seat [6].	Needle packing seat [7-7] is loose.	Tighten needle spring holder [7-8].
	Wear or damage of needle packing [7-6].	Disassemble, clean or replace parts.*
	Wear or damage of needle bar set [7-1].	Disassemble, clean or replace parts.*
PAINT LEAKS FROM Universal Joint [13].	Wear of packing in universal joint.	Replace universal joint.

1. INFORMAZIONI IMPORTANTI

IMPORTANTE	
	Questo manuale è parte integrante della pistola Airless e deve essere letto attentamente prima di procedere con qualsiasi operazione che comprende la messa in funzione, la manutenzione della pistola, compresa la sua manipolazione. Assicurarsi di osservare sempre le avvertenze e le precauzioni contenute nel suddetto manuale di istruzioni e di conservarlo in un luogo sicuro per ogni eventuale futuro riferimento.
CONFORMITÀ AGLI STANDARD DELLE PISTOLE PER VERNICIATURA	
Le pistole Airless per verniciatura ANEST IWATA sono conformi alla Direttiva 2014/34/EU relativa alle apparecchiature e ai sistemi di protezione destinati all'uso in atmosfere potenzialmente esplosive.	
MARCATURA DI CONFORMITÀ COMPLETA:	  II 2 G Ex h IIB T6 Gb X +5°C ≤ Ta ≤ +40°C
MARCATURA ABBREVIATA PRESENTE SULLA PISTOLA:	  II 2 G Ex h X

ASSICURARSI DI SEGUIRE LE PRESCRIZIONI INDICATE DAL SEGUENTE SIMBOLO CUI CONTENUTI SONO PARTICOLARMENTE IMPORTANTI PER LA SICUREZZA.

SIMBOLO	AVVERTENZE	LIVELLO DI PERICOLO	CONSEGUENZE
	AVVERTENZE	SITUAZIONE POTENZIALMENTE PERICOLOSA	SERI RISCHI PER LA SALUTE E LA VITA
	ATTENZIONE		RISCHI MODERATI
	IMPORTANTE		DANNI MATERIALI

2. SPECIFICHE TECNICHE

Max. pressione d'esercizio:	250 bar (3600 PSI)	Portata materiale ml/min.:	Far riferimento ai dati inclusi nella tabella per la scelta dell'ugello presente nell'ultima pagina del manuale.
Raccordo tubazione materiale:	G1/4"	Peso g (lbs):	ALG-7 WB: 440 (0.97) / ALG-7 TE WB: 415 (0.91)
Livello di rumorosità (LAeqT)*:	62.9 dB(A)	Filtro:	100 Mesh (incluso)
*Punto di misurazione: 1 m dietro la pistola, 1.6 m d'altezza.		Massima Temperatura:	Ambiente 5-40°C / Aria/Fluidi 5-43°C

3. AVVERTENZE DI SICUREZZA

AVVERTENZE	RISCHI DI INCENDI ED ESPLOSIONI
	LA PRESENZA DI FIAMME LIBERE E LA PRODUZIONE DI SCINTILLE È SEVERAMENTE VIETATA. Le vernici possono essere altamente infiammabili e quindi essere causa di gravi incendi. Evitare ogni azione che potrebbe provocare incendi, come fumare, creare scintille o utilizzare attrezzature elettriche non idonee.
	COLLEGARE CORRETTAMENTE A TERRA LA PISTOLA AIRLESS, UTILIZZANDO UNA TUBAZIONE DEL MATERIALE CONDUTTIVA. RESISTENZA ELETTRICA: <1MΩ. VERIFICARE PERIODICAMENTE LA STABILITÀ DELLA MESSA A TERRA. Assicuratevi che la pompa, la pistola Airless, l'oggetto da verniciare e i contenitori delle vernici siano correttamente collegati a terra. Utilizzate un contenitore conduttivo per le vernici. Utilizzate una tubazione materiale dotata di un cavo di terra per garantire una messa terra continua tra la pompa e la pistola Airless. Altrimenti un'inadeguata o insufficiente messa a terra potrebbe essere causa di incendi o esplosioni provocati dalle scintille prodotte dall'elettricità statica.
	MAI UTILIZZARE SOLVENTI IDROCARBURI ALOGENATI, che potrebbero causare danni e scioglimento delle parti in alluminio del corpo pistola, provocati da reazioni chimiche. SOLVENTI INCOMPATIBILI: cloruro di metile, diclorometano, 1,2-dicloroetano, tetracloruro di carbonio, tricloroetilene, 1,1,1-tricloroetano. ASSICURATEVI CHE TUTTI I MATERIALI ED I SOLVENTI SIANO COMPATIBILI CON LE PARTI DELLA PISTOLA.
AVVERTENZE	RISCHI PER LA SALUTE E PROTEZIONI DEL CORPO
	UTILIZZARE SEMPRE LA PISTOLA AIRLESS IN AMBIENTI BEN VENTILATI O NELLA CABINA DI VERNICIATURA. Una ventilazione inadeguata o insufficiente potrebbe provocare un'intossicazione da solventi organici o causare incendi. Se dovesse presentarsi un qualsiasi disturbo fisico durante le fasi di lavoro, consultare immediatamente un medico.

AVVERTENZE	RISCHI PER LA SALUTE E PROTEZIONI DEL CORPO
   	INDOSSARE SEMPRE INDUMENTI PROTETTIVI (OCCHIALI DI PROTEZIONE, MASCHERA, GUANTI). Altrimenti i prodotti per la pulizia potrebbero provocare infiammazione agli occhi ed alla pelle. Nel caso in cui si verificasse anche il più lieve rischio di danno fisico per gli occhi o la pelle, consultare immediatamente un medico. INDOSSARE TAPPI AFONIZZANTI SE NECESSARIO. Il livello di rumorosità può superare 85 dB(A) e dipende dalle condizioni d'utilizzo e dall'area di lavoro.
	NON CERCARE MAI DI FERMARE LE PERDITE DI VERNICE CON LE MANI. In caso di trafilamenti, arrestare immediatamente la pompa e ridurre la pressione della stessa a 0 bar. Se dovesse verificarsi un qualsiasi disturbo fisico durante le fasi di lavoro, consultare immediatamente un medico.
	ASSICURARSI DI ARRESTARE LA POMPA, RIDURRE LA PRESSIONE DEL MATERIALE A 0 BAR ED AZIONARE IL BLOCCO DI SICUREZZA DELLA PISTOLA AIRLESS PRIMA DEL MONTAGGIO O DELLO SMONTAGGIO DELL'UGELLO. La fuoriuscita di vernice durante il funzionamento potrebbe provocare seri danni. L'uso costante della pistola da verniciatura che prevede una prolungata pressione manuale sul grilletto della pistola o forti sollecitazioni alle mani dovute alle pulsazioni, provocate dalla pistola durante prolungate operazioni di verniciatura, potrebbero causare la sindrome dolorosa del Tunnel Carpale. NEL CASO DI AFFATICAMENTO DELLA MANO, SOSPENDERE LE OPERAZIONI DI VERNICIATURA PER UNA BREVE PAUSA. Si consiglia di smorzare le pulsazioni emesse dalla pompa, attraverso componenti di smorzamento posti sulle connessioni d'ingresso dell'attrezzatura o attraverso l'utilizzo di tubazioni anti-pulsazione di entrata in grado di assorbire i contraccolpi.

AVVERTENZE	PRECAUZIONI NELL'USO DELLE TUBAZIONI
	COLLEGARE SALDAMENTE LA TUBAZIONE DELLA VERNICE. L'eventuale scollegamento della tubazione durante le operazioni di verniciatura e la fuoriuscita di vernice, potrebbero provocare gravi ferite al corpo. NON USARE TUBAZIONI DEL MATERIALE CREPATE, DANNEGGIATE, PIEGATE O SCHIACCIATE. La vernice emessa ad un'alta pressione attraverso un piccolo foro potrebbe forare una lastra di ferro e provocare seri danni. NON PIEGARE LE TUBAZIONI DEL MATERIALE CON UN RAGGIO INFERIORE A QUELLO CONSIGLIATO. Contattare il rivenditore o direttamente la nostra azienda per trovare il raggio di piegatura idoneo. Non appoggiare oggetti pesanti sulle tubazioni per evitare di danneggiarle. Se ciò accadesse, le stesse potrebbero esplodere provocando seri danni.

AVVERTENZE	RISCHI DI USO IMPROPRIO
	NON SUPERARE MAI LA MASSIMA PRESSIONE O LA MASSIMA TEMPERATURA DI ESERCIZIO. L'utilizzo ad una pressione superiore a quella massima, potrebbe causare l'esplosione della pistola provocando gravi danni. SCARICARE SEMPRE LA PRESSIONE DEL MATERIALE PRIMA DELLE OPERAZIONI DI PULIZIA, SMONTAGGIO O MANUTENZIONE DELLA PISTOLA. Altrimenti la pressione residua potrebbe provocare lesioni al corpo, causate da operazioni scorrette o dalla dispersione dei liquidi usati per la pulizia. MAI PUNTARE LA PISTOLA AIRLESS IN DIREZIONE DEL CORPO UMANO O DI ANIMALI. MAI UTILIZZARE LA PISTOLA PER SPRUZZARE PRODOTTI ALIMENTARI O MEDICINALI. Altrimenti la miscela di sostanze estranee potrebbe causare la corrosione dei passaggi vernice, con conseguenti danneggiamenti alla pistola e rischi per la salute. MAI MODIFICARE LA PISTOLA AIRLESS. Altrimenti potrebbero verificarsi, malfunzionamenti o in casi estremi esplosioni.

AVVERTENZE	ALTRE PRECAUZIONI
	MAI ENTRARE NELLE AREE DI LAVORO DELLE ATTREZZATURE (come: robot, reciprocatori, ecc.), FINCHÉ QUESTE NON SIANO STATE DISATTIVATE. Altrimenti, il contatto con i macchinari in funzione potrebbe essere causa di incidenti e ferimenti. NEL CASO DI MALFUNZIONAMENTI, SOSPENDERE IMMEDIATAMENTE LE OPERAZIONI DI VERNICIATURA PER LA RICERCA DEL GUASTO. Non utilizzare nuovamente l'attrezzatura, finché il problema non verrà risolto. MAI UTILIZZARE ALTRI COMPONENTI O PARTI DI RICAMBIO CHE NON SIANO ORIGINALI ANEST IWATA. UTILIZZARE SEMPRE UN DETERGENTE NEUTRO: il cui valore pH dovrà essere compreso tra 6 e 8, per evitare eventuali rischi di corrosione dei materiali che compongono il prodotto.