


AVERY

Homega
Style Your Home

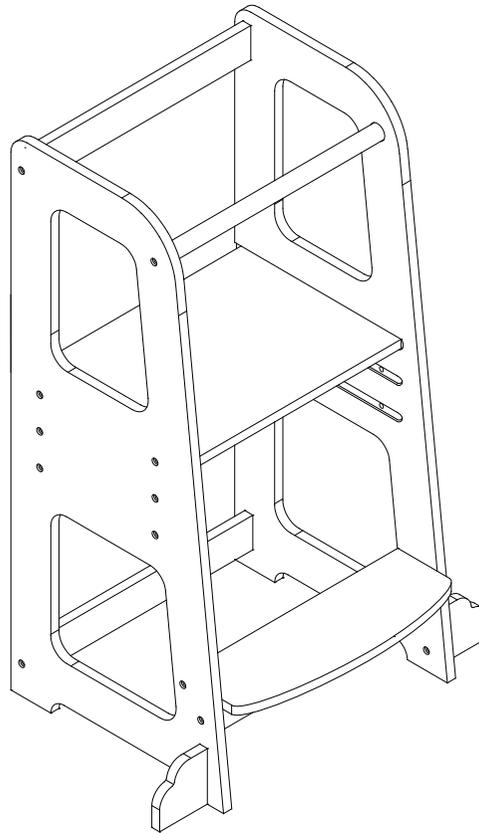

URBN
Living

Visit our website at homega.co.uk and claim 15% OFF your next order using code **HOME15**



Dear Customer

Thank you for your order. We hope that you have received your furniture in the pristine condition that we sent it out in.

In the unfortunate event that your order was mishandled during transit, please contact us to let us know the extent of the damages so we can resolve for you as soon as possible.

If replacement parts are required, please email us with images and the part number referenced in this manual and we will have a replacement sent out right away.

We can be reached by the following email: cs@egtrading.co.uk.

Please include the full name and postcode used to place the order in your email so we can locate your order in our systems.

Alternatively, we can be reached by phone (Mon – Fri) on: 0161 401 6140.

The Customer Satisfaction Team

 Homega.co.uk

 [Homega_uk](https://www.tiktok.com/@Homega_uk)

 [homega_uk](https://www.instagram.com/homega_uk)

 [MyHomegaUK](https://www.facebook.com/MyHomegaUK)

ADULT ASSEMBLY REQUIRED.

Our Kitchen Helper stands are ideal for children so that they can be elevated to safely reach work surfaces from when they can first stand unaided up until they have grown to where they can reach worksurfaces unassisted. These standard height stands are suitable for 18 months to 5 years, though it depends on the height and capability of the child using it. Some adults wait until the child is stable on their feet when holding onto something. This tends to be around 18-24 months old but varies for every child. Assess the child's capability before use.

The Kitchen helper meets stringent safety standards (EN 17191, EN71, EN 1022 and chemical safety tests) but as with any raised position or step it contains a potential risk that needs to be considered. As such, we recommend never leave a child unattended when using this kitchen helper. Please consider their level of coordination and ensure they are supervised as closely as is appropriate for their level of balance, coordination and awareness. May not be suitable for children under 3 yrs old.

Where possible you should ensure the stand is placed or positioned against a cupboard / worksurface to minimise the chance of tipping over. Pads can be attached to prevent the marking of your cupboard doors and floor surfaces

Always check to ensure that all clips, fittings and fasteners are secured before your child attempts use. Always assist the child to climb onto & off the Kitchen Helper

WARNING! PREVENT SERIOUS INJURY OR DEATH FROM FALLS OR TIPPING OVER:

- Never place child and product on an elevated surface!
- Never leave the child unattended.
- Always keep the child within arm's reach.
- Always place the product on a flat, level surface
- Never place the product near the stairs.
- **WARNING!** Do not place this product near a window as it can be used as a step by the child and cause the child to fall out of the window.
- Be aware of the risk of open fires and other sources of strong heat in the vicinity of the product
- Do not place this product near a window where cords from blinds or curtains could strangle a child
- Only to be used by one child at a time
- Children should never use the tower without adult supervision.
- Always ensure this unit is placed away from dangerous objects or appliances, such as a stove, oven, electrical outlets, etc.
- Weight limit of 30 kgs.
- Choking hazard: unassembled small parts can be a choking hazard to children.
- Never substitute parts.
- Children must not use this product until assembly is completed and the platform is set up on a level surface.
- For the first use, an adult should show the child how to use this product
- Children should be instructed not to use this product in any manner other than as intended. (rocking on, climbing up or down the sides or onto counter surfaces.

- Children should be instructed not to climb on product when it is wet.
- Determining when your child may have outgrown the stand is up to you.
- Do not attach any items to this product that may be potential strangulation hazard
- Do not place on wet or slippery floors
- Do not allow child to overextend its reach
- Do not allow child to try and push away from the counter
- Encourage your child to stand in the centre of the platform
- Be aware of any hot surfaces, cutting blades or trailing leads that may be accessible by the child when using the elevated stand.

CAUTION: CHILDREN SHOULD BE DRESSED APPROPRIATELY.

AVOID LOOSE-FITTING CLOTHING AND POTENTIALLY HAZARDOUS ITEMS SUCH AS SCARVES.

CARE AND MAINTENANCE



- Use a slightly damp cloth to spot clean. Wipe dry immediately with a soft dry cloth.
- Please periodically check that there are no loose fittings or screws and re-tighten if necessary.
- Never allow any kind of liquid to remain on your furniture as absorption can cause wood to warp or finishes to de-laminate.
- Keep out of direct sunlight & store in a dry place.
- Please do not place hot items such as hot drinks directly onto the stand.

ASSEMBLY

- DO not to use the stand if any part is broken or missing. Only use spare parts approved by the importer
- Keep children and animals away from the assembly area, this furniture contains small parts that could cause choking if swallowed.
- Ensure all packaging is disposed of responsibly.
- All assembly fittings should always be tightened properly

HELPFUL HINTS

- Take time to read through all the Assembly Instructions.
- Clear as much space as possible in the room you intend to use the furniture in. Assemble on a soft, dry, clean and smooth surface in the intended room.
- Do not pull or drag the built furniture between rooms.
- Open the fittings bag into a bowl or other container to stop any small parts being lost.
- Check that you have all fittings panels against the parts list to ensure that you have everything before you start.
- Check that you have the recommended tools for assembly, the use of power tools is NOT advised.
- Do not screw up the rack tightly until all parts are set in place.
- As a rule, if the child's belly button is above the top of the stands sides you should lower the standing platform. Do not place anything on the platform to raise the child higher

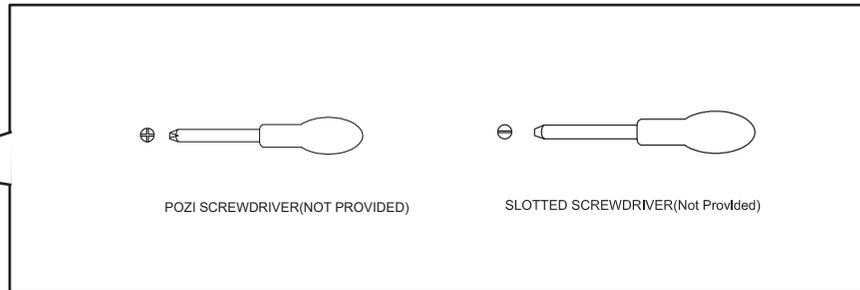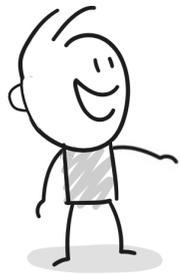

50min

APPROXIMATE ASSEMBLY TIME



1 PERSON ASSEMBLY




Top Tips Before You Start.

1. Please check that all parts are present before you start the assembly of your furniture.
2. For ease and speed of assembly, we recommend that before you commence each step of the assembly, that you identify all the parts required for that step.
3. For larger items, please ensure that you have sufficient space and people to assemble your product safely
4. We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
5. For the protection of your furniture, we recommend that the product is placed on a protected surface during assembly to prevent any damage.
6. Power tools are not recommended for this furniture.

7. During assembly please take care not to over-tighten any fittings, as this may damage the product.
8. Always place the product on a flat, steady and stable surface.
9. Do not sit or stand on the product, Do not use the product as a stepladder.
10. This product is intended for indoor, household use only as it is non industrial product.
11. Excessive pressure causes irreparable damage. Please do not kneel on any part of this product during assembly.


ASSEMBLY INSTRUCTIONS

AVERY KIDS KITCHEN STEP WITH SAFETY RAIL

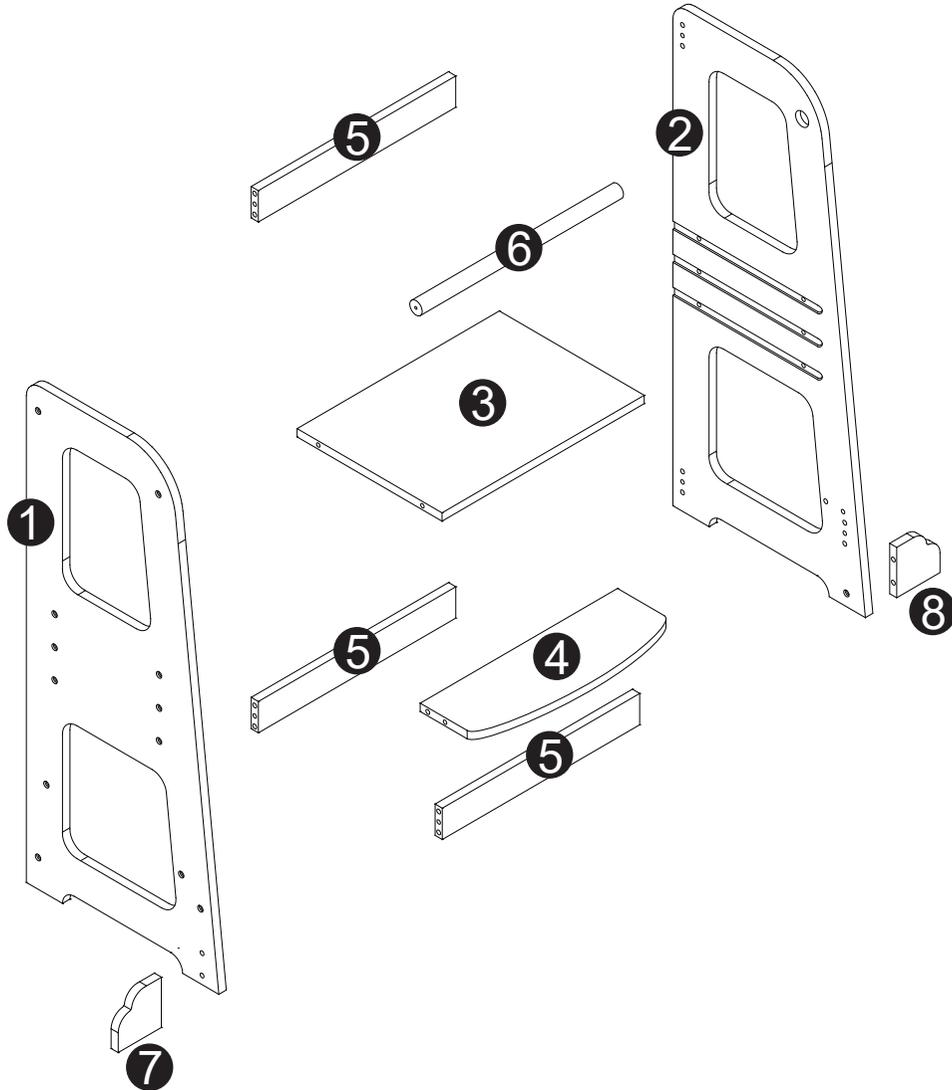


	A	M6x45mm	14pcs
	B		14pcs
	C	M8x30mm	16pcs
	D	M5x35mm	2pcs
	E	M6x12mm	8pcs
	F		8pcs
	G	M1.5x7.5mm	10pcs


1

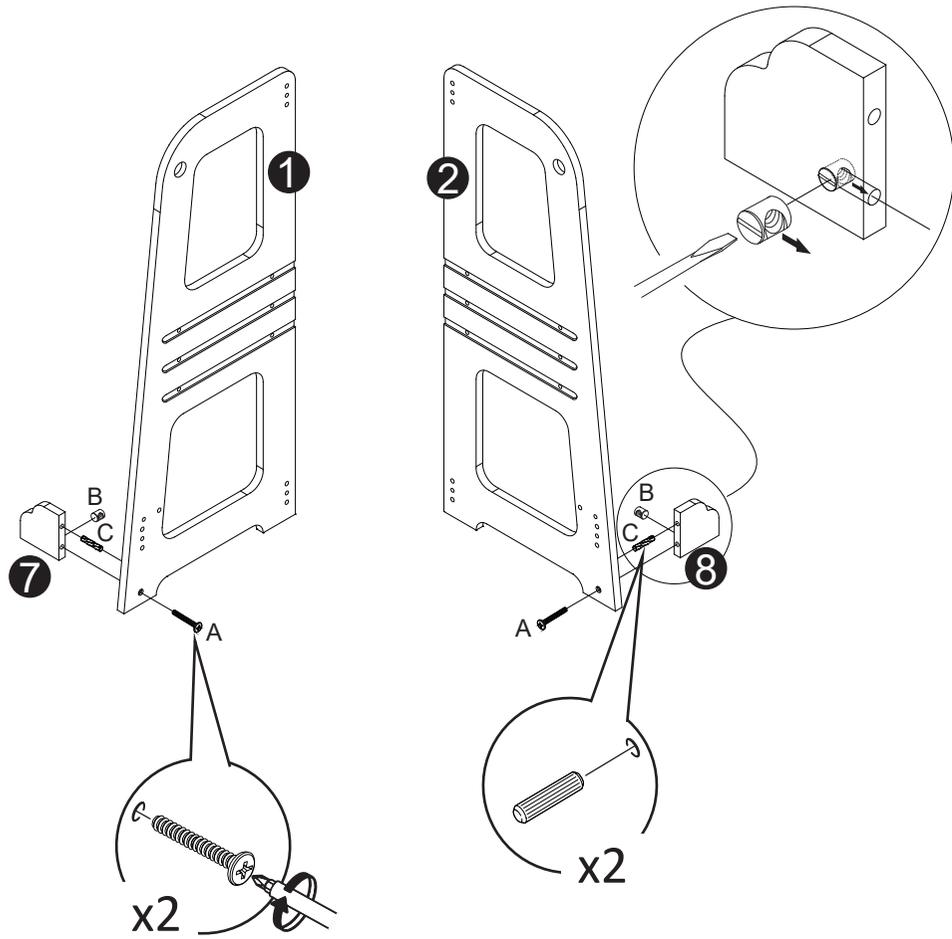


2

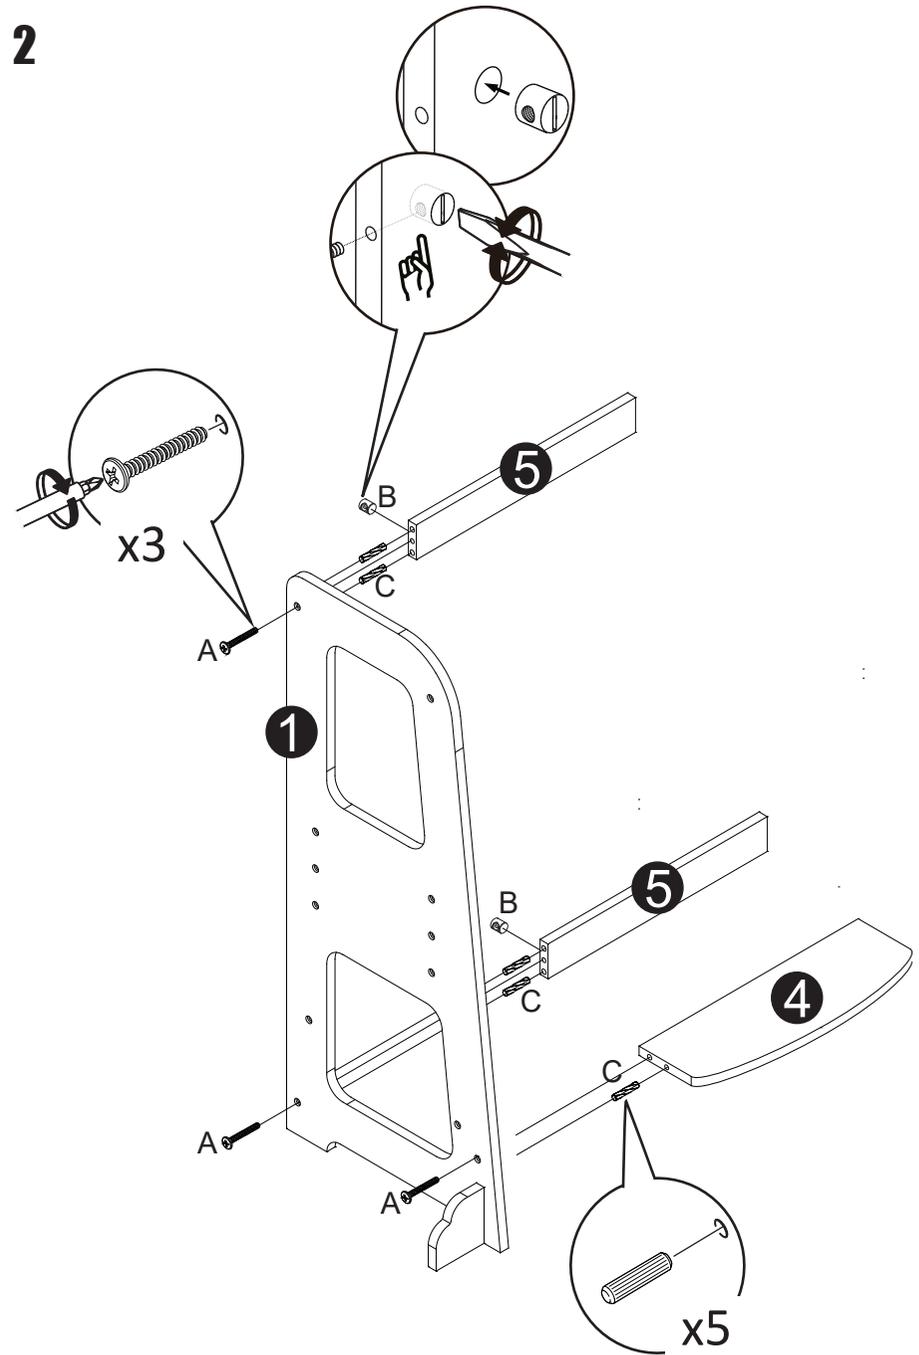


3

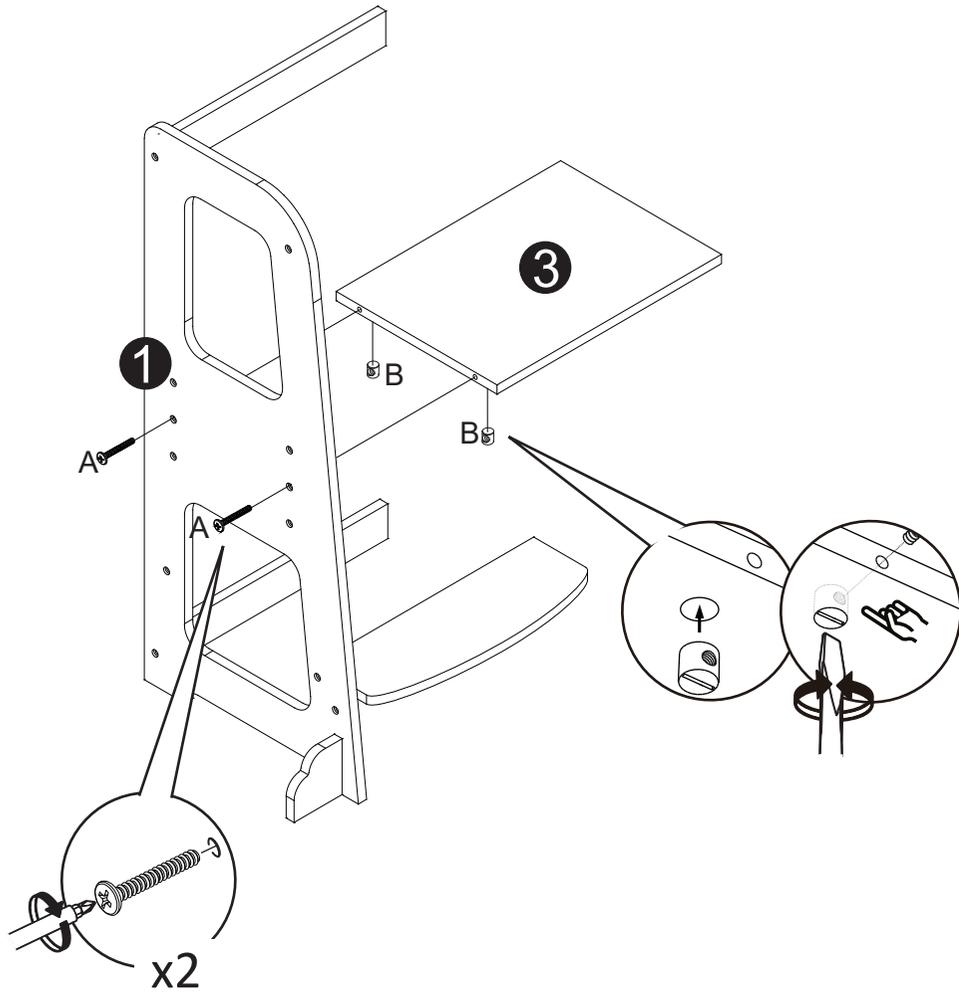


4

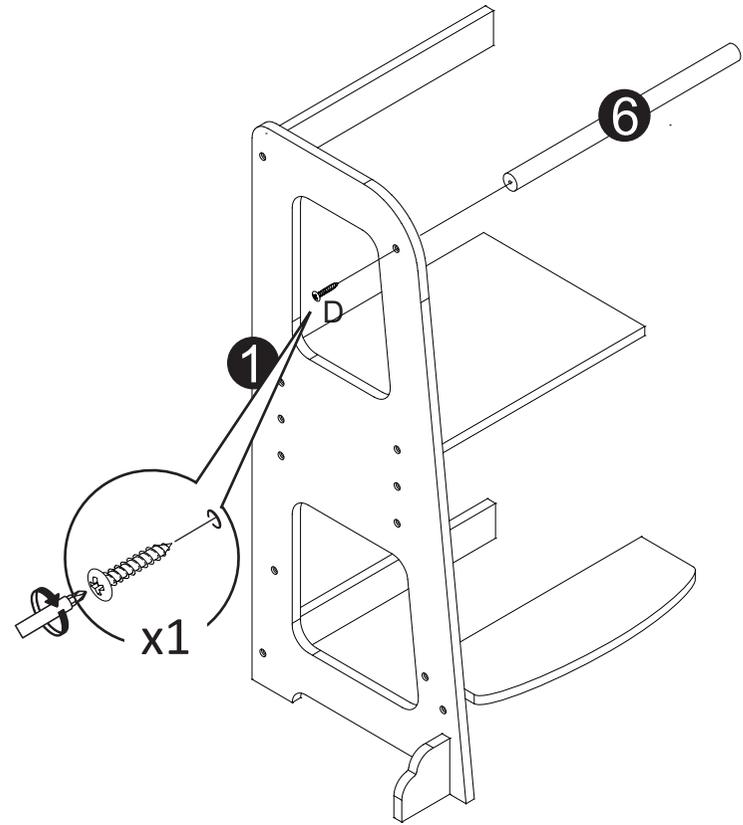


5

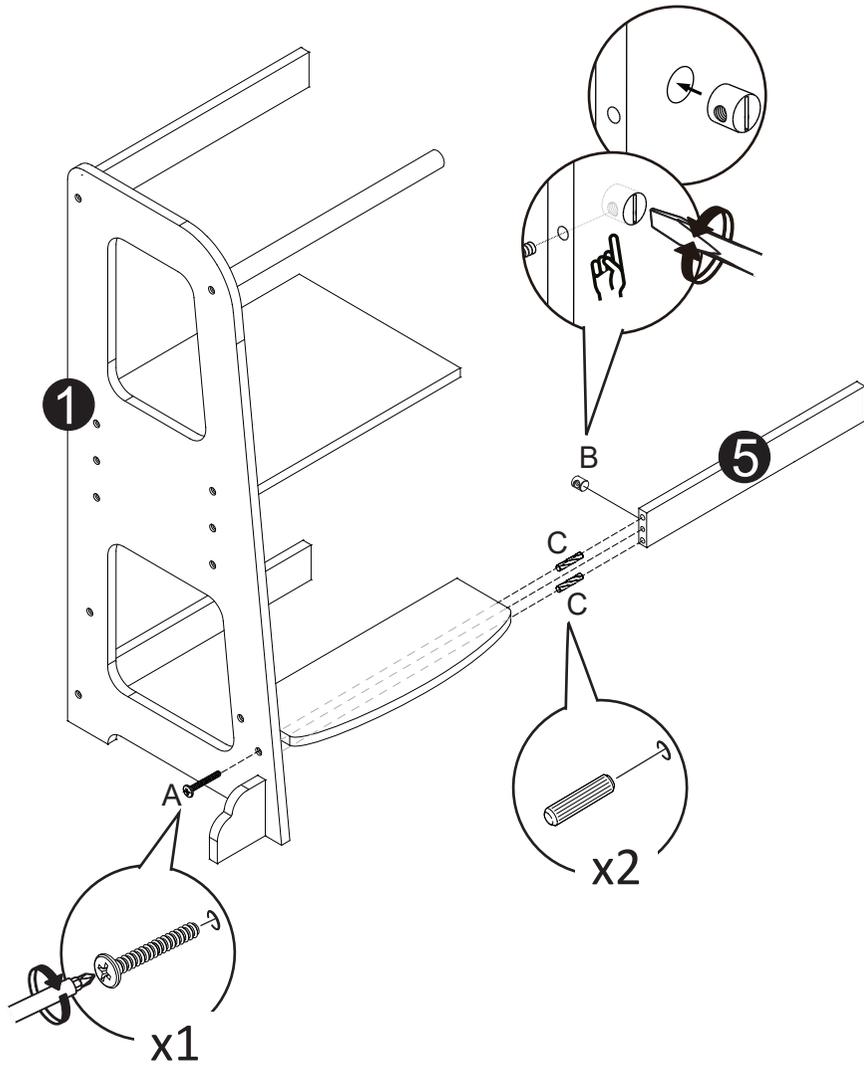


6

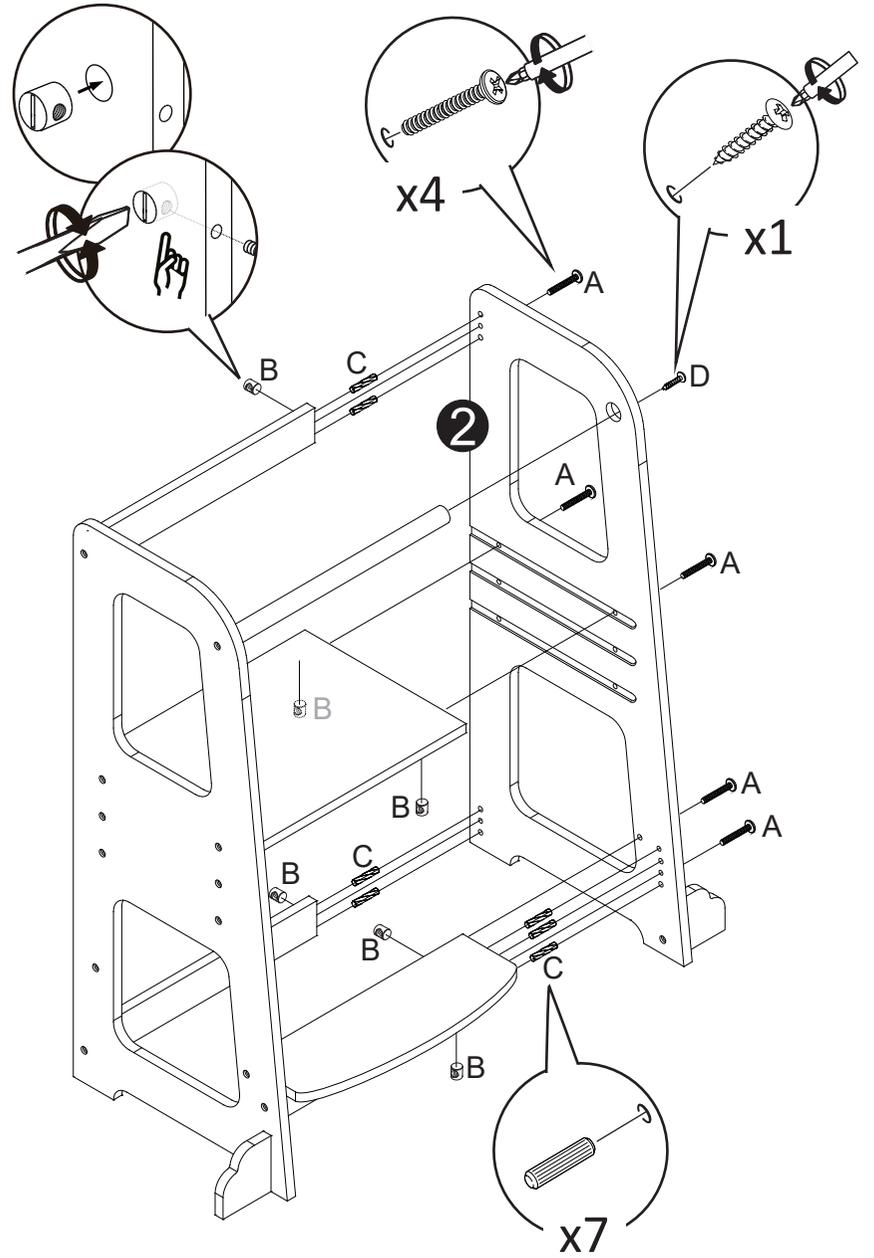


7 To prevent children from getting their fingers stuck, use E and F to lock the spare holes in the side plate

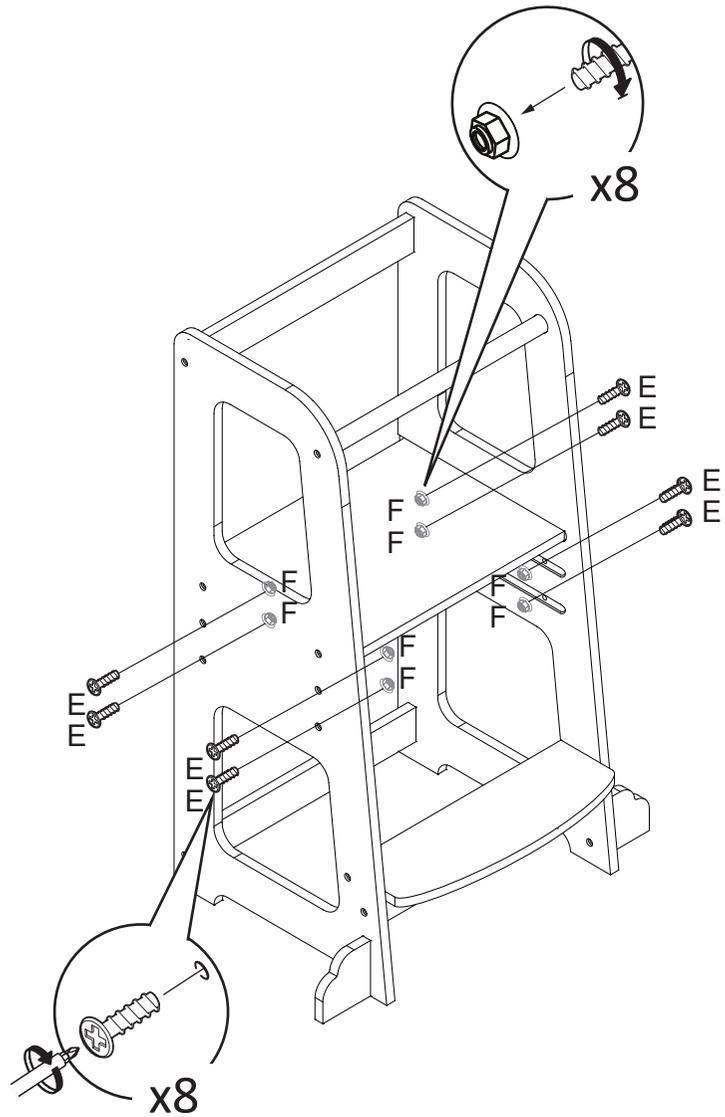

8

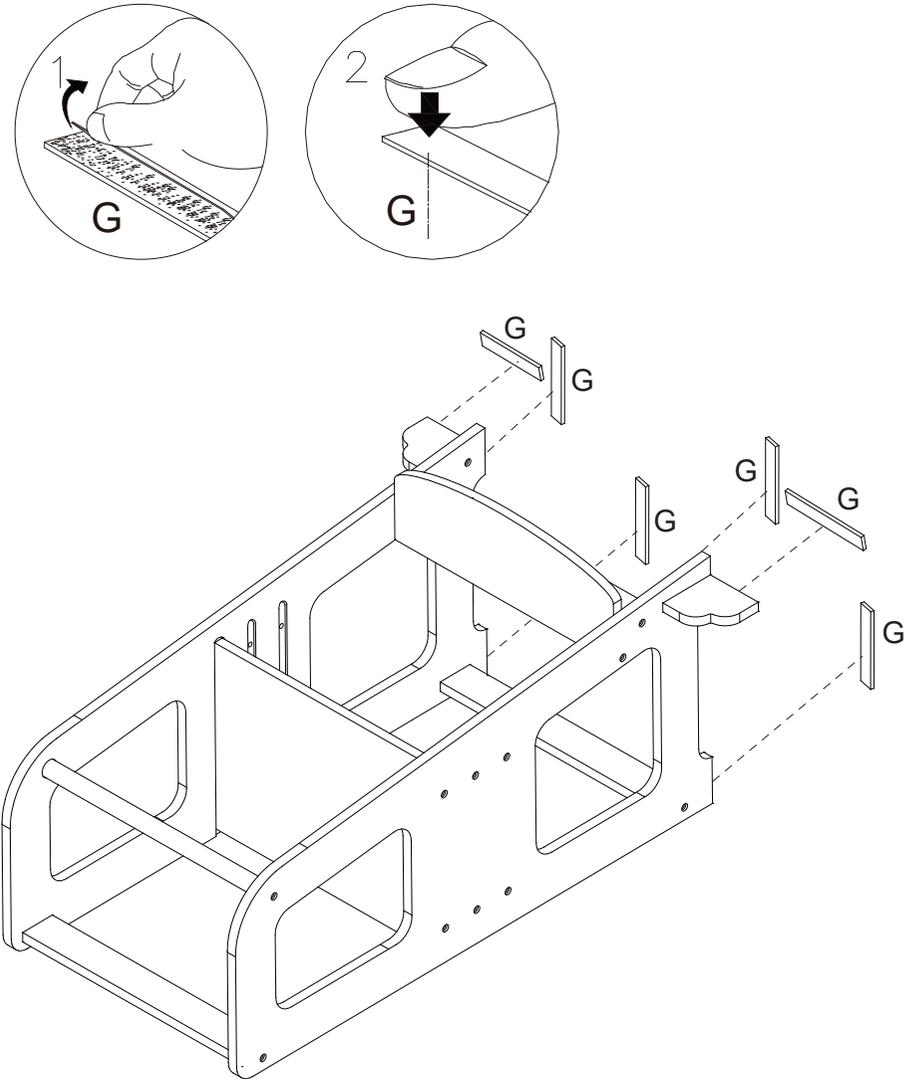

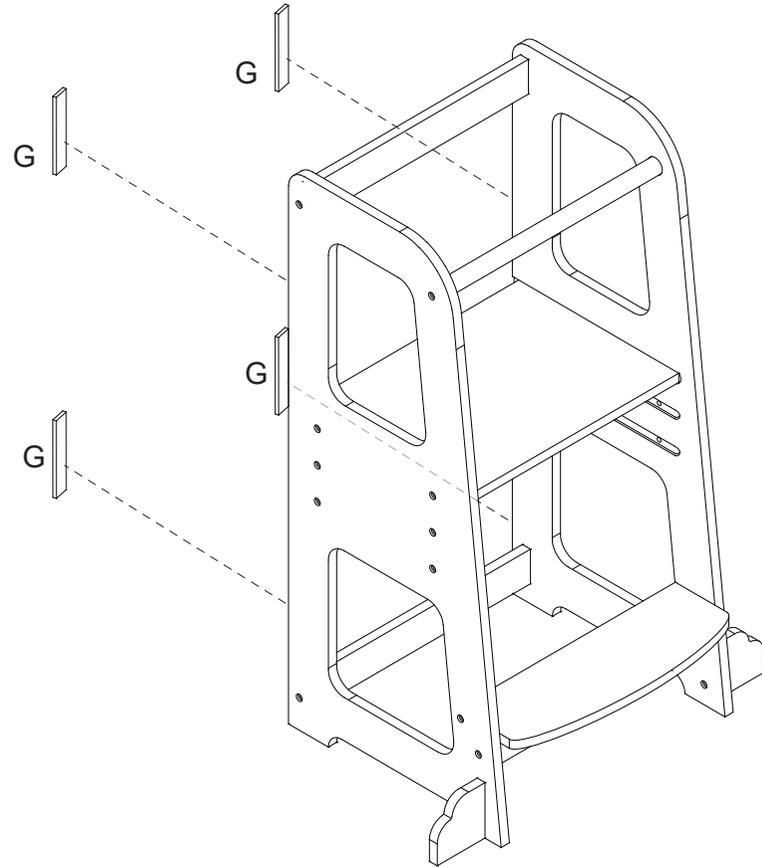

Care and maintenance of your furniture.

- Please periodically check all fittings and re-tighten as necessary.
- To clean your item, please use a damp cloth and wipe clean.
- Never allow any kind of liquid to sit on your furniture, as it can cause the wood to warp or the finish to peel and delaminate.
- Please do not place hot items (e.g. hot drinks) directly on to the wood surface.
- Please do not drag and pull your furniture.