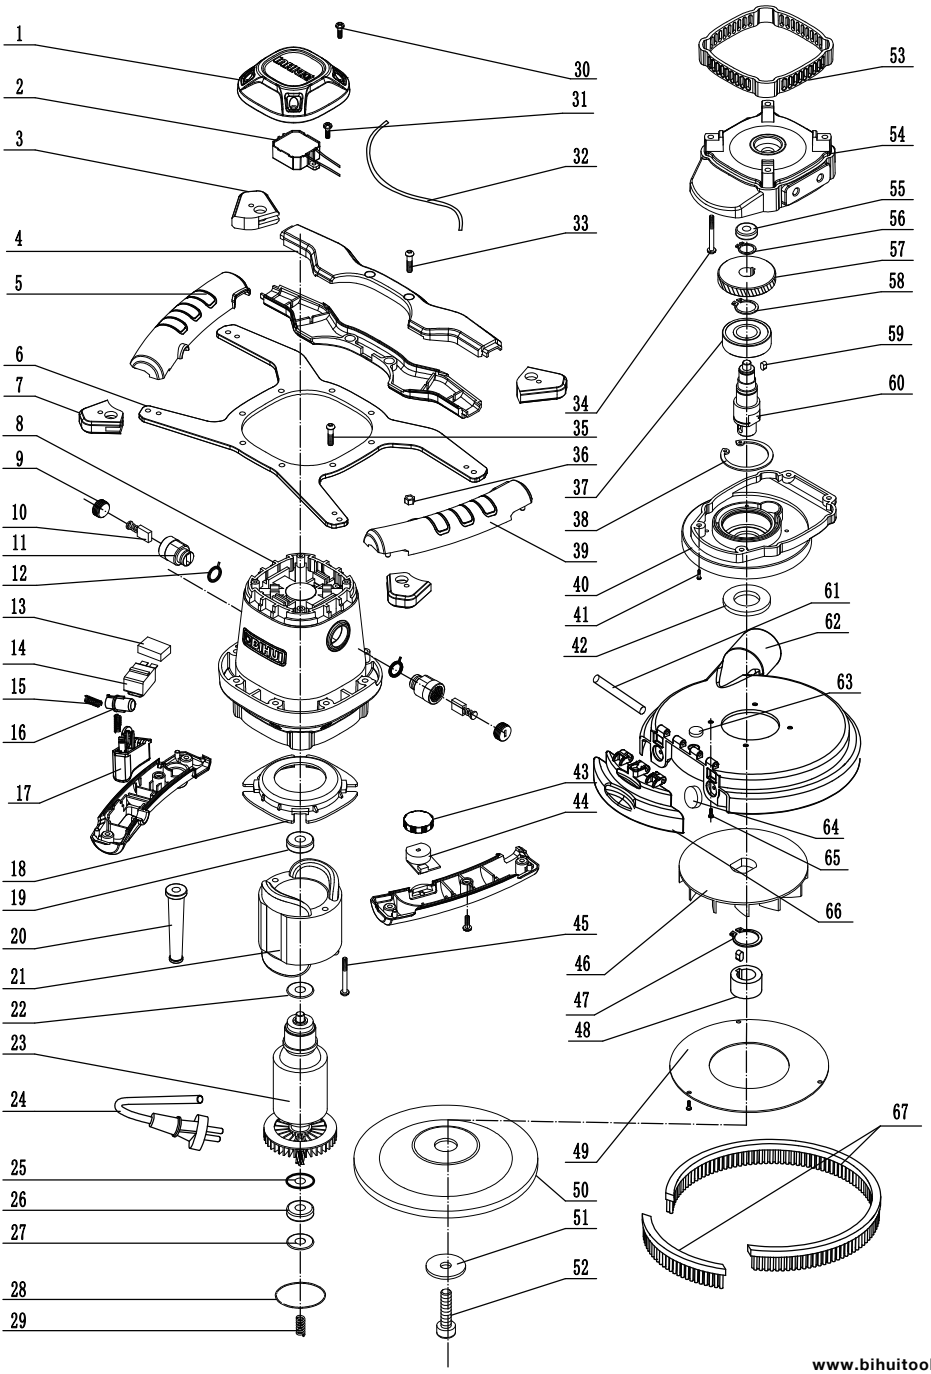

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

Spare Part List

1	Back cover	35	Plum blossom hexagonal screw
2	Soft start	36	Nut
3	Rear rubber corner protector	37	Deep groove ball bearing
4	Wire protection board	38	Hole retaining ring
5	Right joystick	39	Left joystick
6	Iron bracket	40	Lower gearbox
7	Front rubber corner protector	41	Cross groove pan head with washer screw
8	Shell	42	Wool felt
9	Brush grip cover	43	Speed control knob
10	Carbon brush	44	Potentiometer
11	Brush grip	45	Cross self tapping screw
12	Brush spring	46	Wind blade
13	Capacitance	47	Shaft ring
14	Switch	48	Axle sleeve
15	Switch spring	49	Gasket
16	Self-locking button	50	Diamond grinding wheel
17	Switch button	51	Flat gasket
18	Windshield ring	52	Hexagonal socket screw
19	Deep groove ball bearing	53	Outdoor decorative ring
20	Wire sheath	54	Upper gear box
21	Stator	55	Deep groove ball bearing
22	Shim	56	Shaft ring
23	Rotor	57	Big gear wheel
24	Power cord	58	Shaft ring
25	Shim	59	Flat key
26	Deep groove ball bearing	60	Output shaft
27	Wool felt	61	Cylindrical pin
28	O-ring	62	Protection cover
29	Oil slinging spring	63	Magnet
30	Cross groove pan head landing	64	Magnet
31	Cross groove pan head screw	65	Cross groove countersunk head screw
32	Lead wire	66	Side edge
33	Plum blossom hexagonal screw	67	Brush brush
34	Cross groove pan head screw		