
shift INSTRUCTION MANUAL

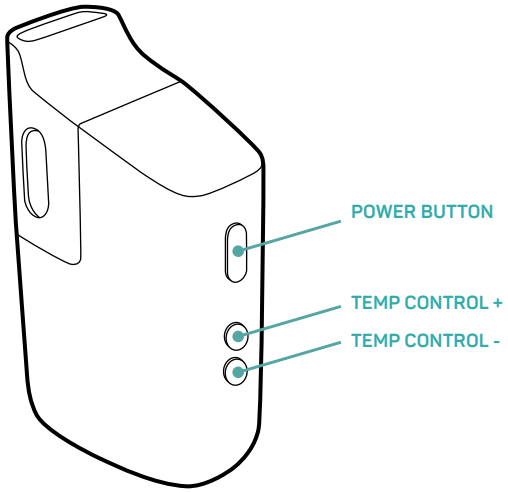

SPECS
Battery Capacity: 1600 mAh
Device Dimensions: 1.97 x 1.07 x 3.19" (50 x 27.3 x 81 mm)
Voltage: 5V/1A
Temperature Range: 320°F - 430°F
Charging: Micro USB

KIT INCLUDES
1x Silicone Mouthpiece Screen
1x USB Cable
1x Packing Tool
1x Cleaning Brush

CHARGING
Before using the Shift, fully charge the device using the included USB charging cable and a standard charging brick. You will see a "Charging" graphic appear on the OLED screen. The device is fully charged in approximately 1.5 hours. When the battery indicator reaches 100%, the device is fully charged and can be unplugged.

HELPFUL TIPS
Upon first use, it is recommended to run this device through a heating cycle without any material in the chamber to burn off any manufacturing residue which may affect taste or smell during normal use. Press and hold power and "-" buttons simultaneously for 2 seconds to switch between Fahrenheit and Celsius degree modes.

HOW TO LOAD WITH DRY HERB
Push top lip of mouthpiece away from the unit. Load ground herbs loosely into the chamber and snap the mouthpiece back in place. For best results, fill the chamber halfway but do not pack tightly. This allows for even heat distribution and room to stir herbs throughout usage.

HOW TO LOAD WAX AND THICK OILS
If you have an earlier version of this device, it may support wax concentrates. If your device did not include a quartz cup insert, then disregard wax functionality. Remove the mouthpiece and pull the silicone cap off of the quartz cup. Load wax or thick oil and replace the silicone cap. Place the quartz cup into the chamber and reattach the mouthpiece.

USING THE SHIFT
Once the heating chamber is filled, press the power button 5 times in rapid succession. The OLED screen will display the device's current temperature. Adjust to desired temperature manually using the "+" or "-" buttons. The indicator light glowing within the mouthpiece will be **RED** while heating up. Once the desired temperature is reached, the indicator light will turn **GREEN** and the device is ready to use. The Shift will automatically shut off after 4 minutes. To maximize efficiency, allow the unit to cool after each session and then stir herbs before the next cycle.

CLEANING
Push top lip of mouthpiece away from the unit. Remove spent material from the chamber using the stir tool. Use the cleaning brush for any remaining debris. To replace the silicone mouthpiece screen, remove the mouthpiece and pull silicone screen off using the tab. Replace with a new silicone screen ring and securely press into place.


WARNINGS Do not expose to extreme temperatures or direct sunlight. Do not drop the device or accessories. Do not drop or submerge in any liquid. Do not modify the electronics in any way. This device is intended for adults only. Do not sell or provide to minors. Keep all parts, concentrates, herbs, and liquids away from children and pets. This is not a medical device and is not intended to diagnose, treat, mitigate, cure, or prevent any ailment, disease, or other conditions. Consult a physician before use, especially if you suffer from heart disease or any other medical condition, or if you are pregnant or breastfeeding. Failure to follow any of these instructions could result in product damage, property damage, personal injury, and may void warranty. Visit PulsarShop.com for warranty information.

PulsarShop.com

PULSAR®

shift | INSTRUCTION MANUEL

CARACTÉRISTIQUES
Capacité de la batterie: 1600 mAh
Dimensions de l'appareil: 50 x 27,3 x 81 mm (1,97 x 1,07 x 3,19")
Tension: 5 V/1 A
Plage de température: 320 °F - 430 °F
Chargement: Micro USB

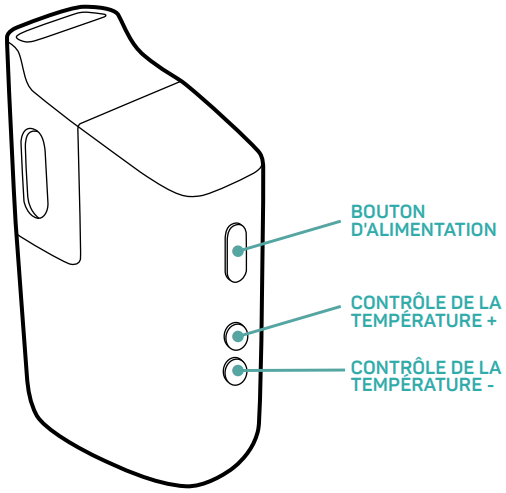

LE KIT COMPREND
1x Écran d'embout buccal en silicone
1x Câble USB
1x Outil d'emballage
1x Brosse de nettoyage

CHARGEMENT
Avant d'utiliser le Shift, chargez-le complètement à l'aide du câble USB fourni et d'un bloc de charge standard. Le message « Chargement » s'affichera sur l'écran OLED. La charge complète dure environ 1,5 heure. Lorsque l'indicateur de batterie atteint 100 %, l'appareil est complètement chargé et peut être débranché.

CONSEILS UTILES
Lors de la première utilisation, il est recommandé de faire chauffer l'appareil à vide afin d'éliminer tout résidu de fabrication susceptible d'altérer le goût ou l'odeur lors d'une utilisation normale. Appuyez simultanément sur le bouton d'alimentation et « - » pendant 2 secondes pour basculer entre les modes Fahrenheit et Celsius.

COMMENT CHARGER AVEC DES HERBES SÈCHES
Poussez le bord supérieur de l'embout buccal vers l'extérieur. Placez les herbes moulues dans le compartiment sans les tasser, puis remettez l'embout buccal en place. Pour un résultat optimal, remplissez le compartiment à moitié, sans trop tasser. Cela permet une répartition uniforme de la chaleur et permet de remuer les herbes pendant l'utilisation.

COMMENT CHARGER LA CIRE ET LES HUILES ÉPAISSES
Si vous possédez une version antérieure de cet appareil, il est possible qu'il prenne en charge les concentrés de cire. Si votre appareil ne comprenait pas d'insert en quartz, ignorez la fonction cire. Retirez l'embout buccal et retirez le capuchon en silicone du quartz. Chargez la cire ou l'huile épaisse et remettez le capuchon en silicone. Placez le quartz dans la chambre et remettez l'embout buccal.

EN UTILISANT LE SHIFT
Une fois la chambre de chauffe remplie, appuyez rapidement sur le bouton d'alimentation cinq fois. L'écran OLED affichera la température actuelle de l'appareil. Réglez manuellement la température souhaitée à l'aide des boutons « + » ou « - ». Le voyant lumineux situé dans l'embout buccal s'allumera en ROUGE pendant la chauffe. Une fois la température souhaitée atteinte, le voyant lumineux deviendra VERT: l'appareil sera prêt à être utilisé. Le Shift s'éteindra automatiquement au bout de 4 minutes. Pour une efficacité optimale, laissez l'appareil refroidir après chaque utilisation, puis remuez les herbes avant le cycle suivant.

NETTOYAGE
Poussez le bord supérieur de l'embout buccal pour le dégager de l'appareil. Retirez le matériau usagé de la chambre à l'aide de l'agitateur. Utilisez la brosse de nettoyage pour éliminer les débris restants. Pour remplacer la grille en silicone de l'embout buccal, retirez-la et retirez la grille à l'aide de la languette. Remplacez-la par une nouvelle bague en silicone et appuyez fermement pour la mettre en place.

AVERTISSEMENTS: Ne pas exposer à des températures extrêmes ni à la lumière directe du soleil. Ne laissez pas tomber l'appareil ni ses accessoires. Ne le laissez pas tomber ni ne l'immergez dans un liquide. Ne modifiez en aucune façon les composants électroniques. Cet appareil est destiné aux adultes uniquement. Ne pas vendre ni fournir aux mineurs. Tenez toutes les pièces, concentrés, herbes et liquides hors de portée des enfants et des animaux. Ceci n'est pas un dispositif médical et n'est pas destiné à diagnostiquer, traiter, atténuer, guérir ou prévenir une quelconque maladie, affection ou autre affection. Consultez un médecin avant utilisation, surtout si vous souffrez d'une maladie cardiaque ou de tout autre problème médical, ou si vous êtes enceinte ou allaitez. Non-respect de ces instructions peut entraîner des dommages au produit, des dommages matériels, des blessures corporelles et l'annulation de la garantie. Consultez PulsarShop.com pour plus d'informations sur l'autorisation.

PU-0314-21