


www.globalindustrial.com
1-800-645-2986

VESA MOUNT


ASSEMBLY INSTRUCTION

CONTENTS					
REF.	QTY.	DESCRIPTION	REF.	QTY.	DESCRIPTION
1	1	TILT MOUNT ASSEMBLY	H1	4	
			H2	4	
			H3	4	
2	1	MOUNTING BRACKET	H4	4	
			H5	1	
				1	SECURITY DRIVER 

1

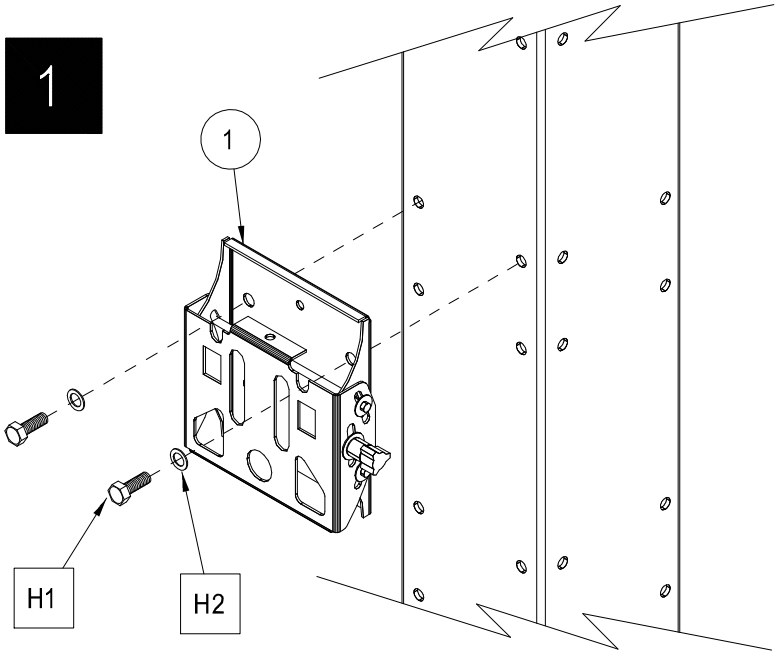


2

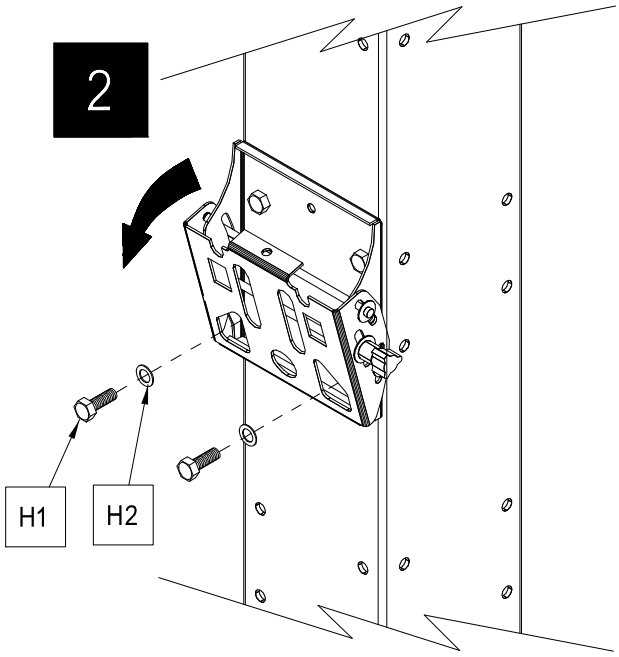


Attach Mounting Bracket to Flat Panel Monitor


Determine correct VESA-mount hole pattern by placing mounting bracket against back of monitor. Make sure mounting bracket is positioned with hook on the top. When mounting bracket is properly lined with holes on rear of monitor, insert (4) 10 mm screws (H3) using 3 complete turns for proper installation. Warning!: if screws are not tightly inserted or if screws bottom out, there is a risk of damaging screen or VESA mount.

Note: If hole pattern on back of monitor is recessed , attach mounting bracket using (4) 20 mm screws (H3) and (4) retaining spacers (H4).
Spacers must be inserted between mounting bracket and monitor.

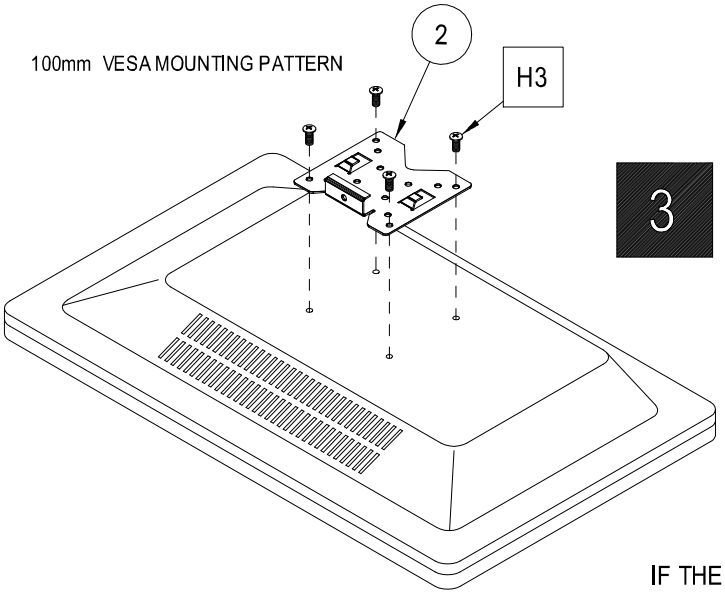

3

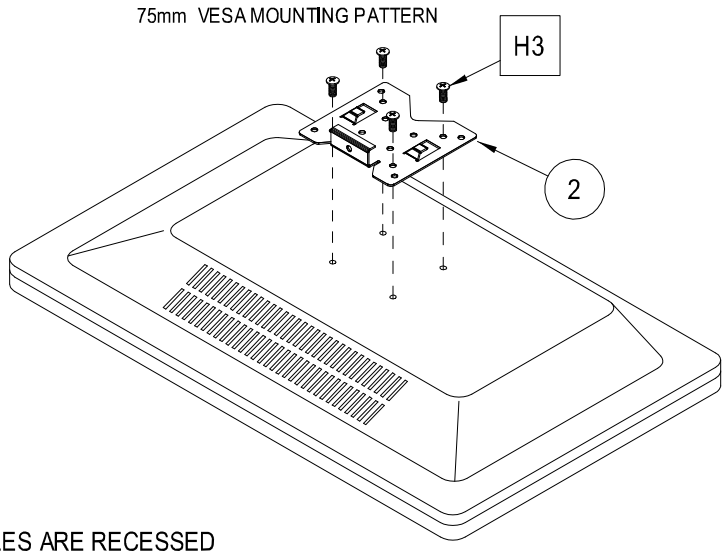

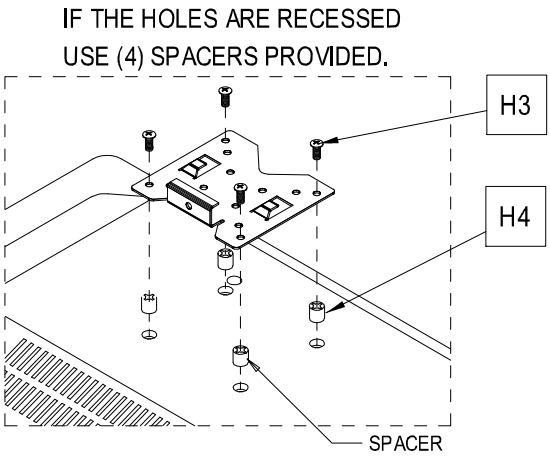


Installing and Removing Flat Panel Monitor


Attach monitor with mounting bracket to tilt mount assembly by lining up hook over flange of tilt mount. When properly lined on top of each other, insert and tighten socket pin screw (H5) using security driver. This will lock monitor to tilt mount assembly.
To remove flat screen from mounting bracket, simply loosen the socket pin screw and lift screen off mount.

Note: It is recommended to use 2 or 3 people for proper installation of flat panel monitor to tilt mount assembly.

Warning!: Failure to lock mounting bracket with screw can cause screen to come off mount if hit accidentally.

Caution: Do not over tighten screws. This may cause damage to mount or flat screen monitor.

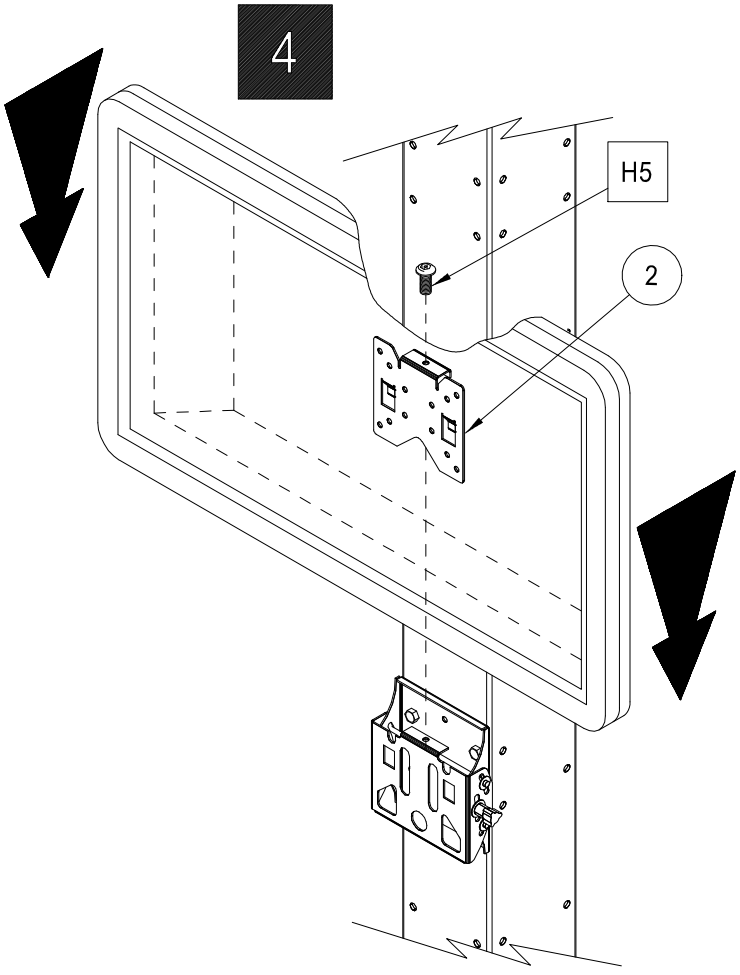

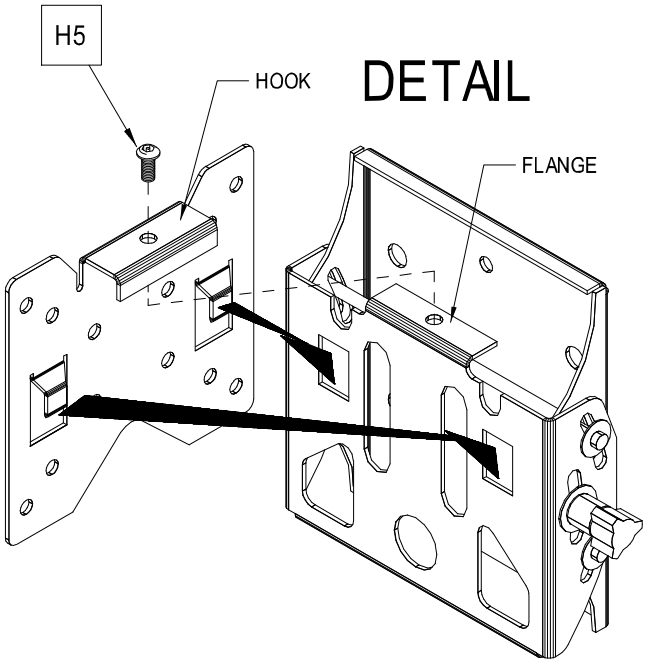

Adjusting Tilt Angle on Tilt Mount Assembly

Loosen the hand screw tension knob on right side of mount and adjust monitor angle as desired. Tighten knob to lock monior at desired angle.

Note: If knob is inaccessible while monitor is attached, remove monitor from mount and adjust knob to desired tension. Re-attach monitor to mount.

Flat panel monitor can be tilted up or down from top or bottom of screen to adjust tilt angle for optimal viewing. Tilt can be adjusted to a maximum of 15° downward or 5° upward.

Note: to adjust tension on tilt bracket, tighten tension screw on left side of mount using phillips screwdriver.

