
GLOBAL™ INDUSTRIAL

We can supply that.

User's manual	Manual del usuario	Manuel de l'utilisateur
Customer Service US: 1-800-645-2986	Servicio de atención al Cliente US: 1-800-645-2986	Service à la clientèle Canada: 888-645-2986

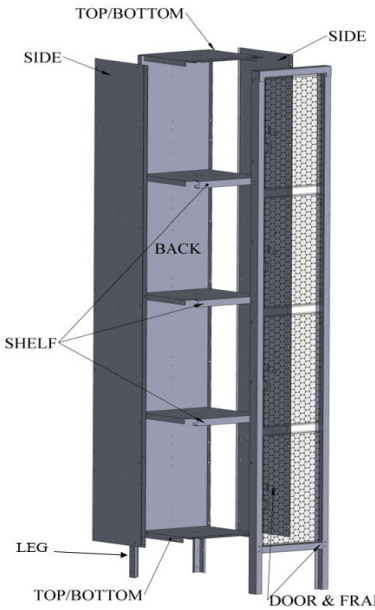

Before Assembly

Please read the complete instructions.

Check for missing or damaged parts.

Only use the specified hardware.


CAUTION: Some parts have sharp edges and corners, wear gloves during assembly.

Assembly will require the following tools:

- 2 drift pins (or 2 nail punches) for hole alignment
- 3/8" socket wrench


Lockers should be assembled on a flat, level surface and anchored according to the instructions found in Section 7 & 9.

Two people are required to remove the side panels from the packaging, with one person at each end

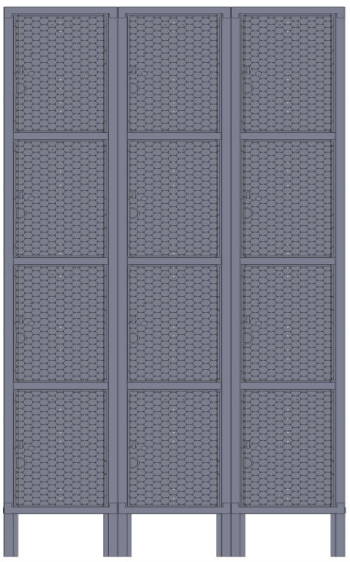


Locker Assembly


1. Bolt together top and bottom with bends facing down and the back with the bends facing up. Top and bottom are identical. For single and double-tier models, bolt hook to back.

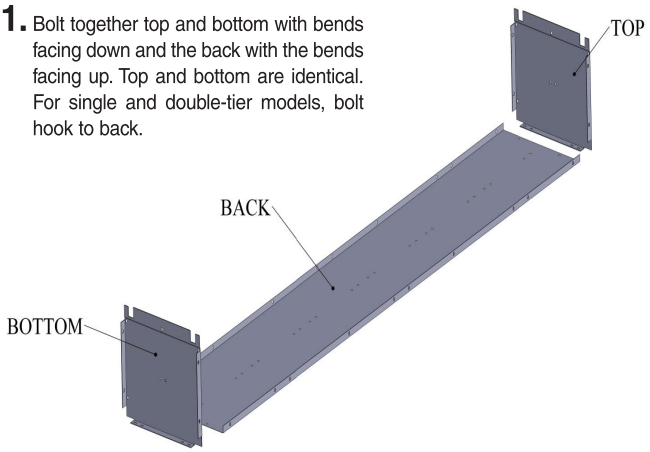


2. Bolt on side with bend in rear and facing in. Omit 2 bolts near bottom rear for legs. Install shelf by bolting to side with bend facing down and 45° bend in front. (See Section 8 Punching Patterns for single, double and 6-

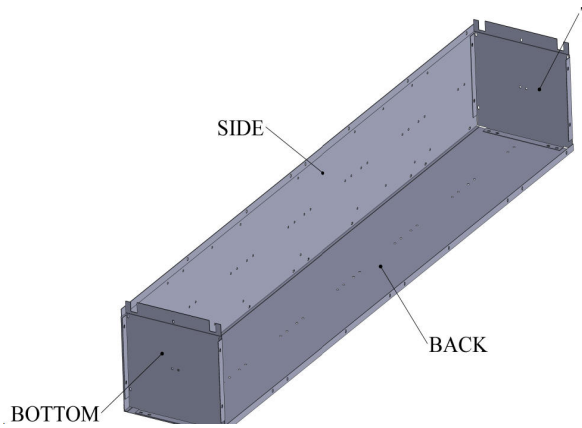

3. Bolt together tops, bottoms, and back with the side in between

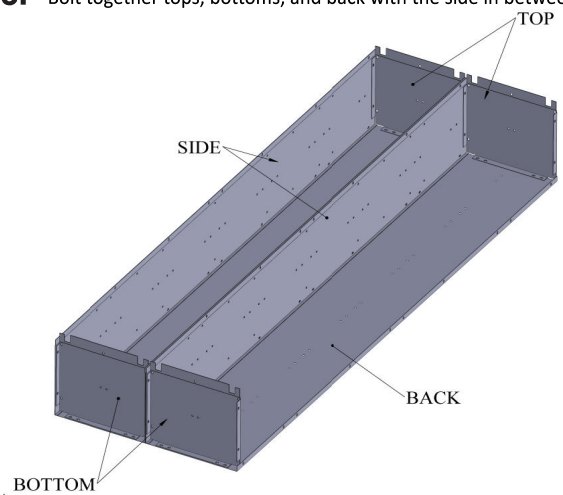


4. Repeat step 3 until bank of lockers is complete. Bolt on side

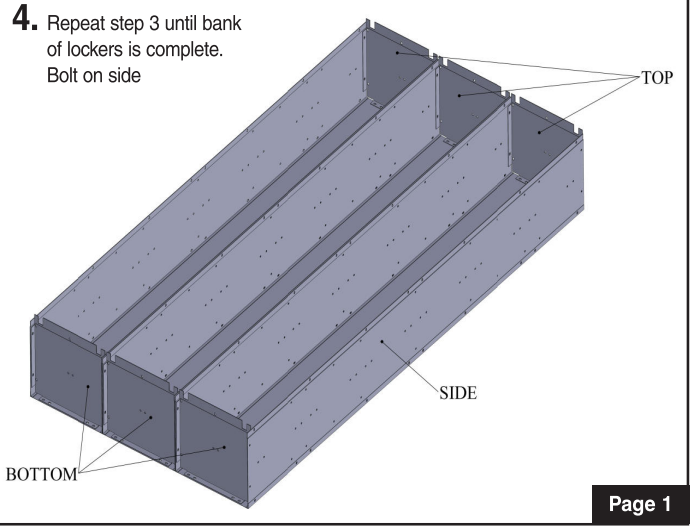


Three Wide Locker Assembly

5. Bolt on hooks and/or coat rod

- 18" deep, single-tier lockers include both a coat rod and back and side hooks
- 12" and 15" deep single and double-tier lockers include back, side and top double prong hooks
- Six-tier models do not include coat rods or hooks

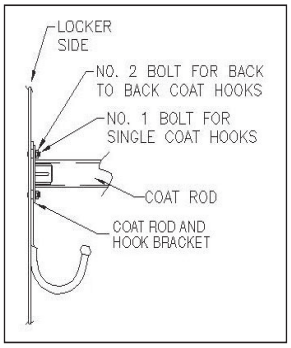

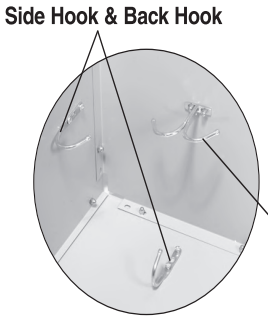



Coat Rod

6. Install Rear Legs


Insert one rear leg into each end of the locker. Secure each leg using two bolts.


Attach Door Frame Assembly


Attach the door frame to the locker.

Install Shelves


After the door frame has been attached, secure the sides of the shelves to the locker using bolts. Fasten the front of the shelves to the door frame using screws.

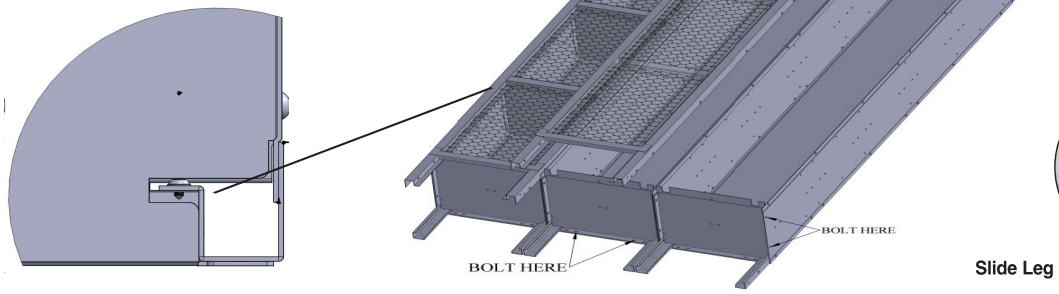

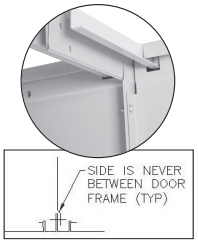

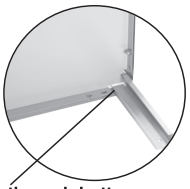


Slide Leg through bottom



Install bolt and nut at the red-lined locations only if the floor is even.

7. Assemble the Locker Feet

Bolt each locker foot to the leg of the locker.
Stand the locker upright in its final location.
Use a level to ensure it's even.
Adjust the rear legs so they touch the floor.
Tighten all bolts securely.

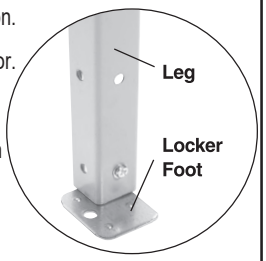


Anchor Lockers to the Floor

Individual Lockers: Use the locker foot on all four legs to anchor to the floor (floor anchors not included).
Locker Banks: Anchor the lockers at the two extreme ends.
Anchor intermediate lockers at maximum 36-inch (91 cm) intervals.

WARNING:
–FLOOR ANCHOR MUST HAVE A MINIMUM PULL-OUT VALUE OF 190 LBS.
–WALL ANCHOR MUST HAVE A MINIMUM PULL-OUT VALUE OF 150 LBS.


8. Punching Patterns

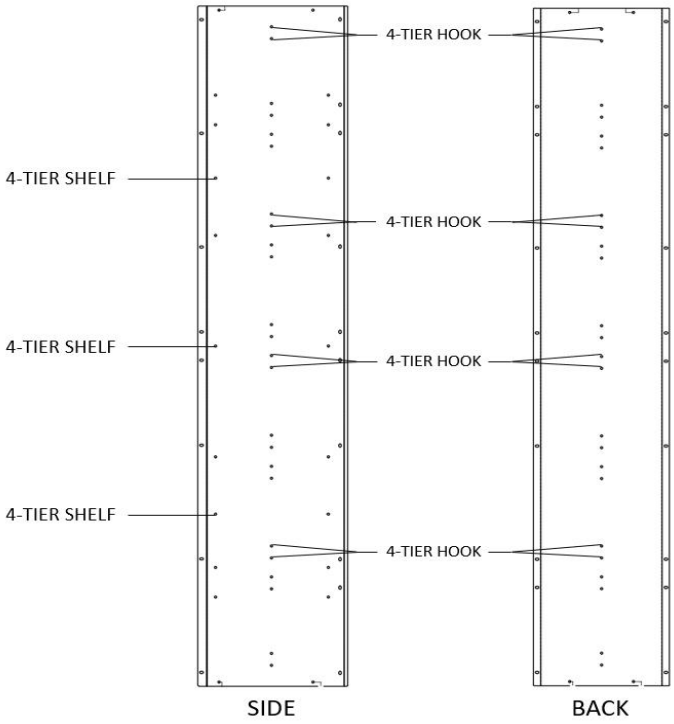

Three Wide Locker Assembly


For Non-Digital Lock Version

Place the hasp lock in the mounting position as shown below on the door frame. Use the bolts to secure it to the door frame, and tighten it with the nuts.

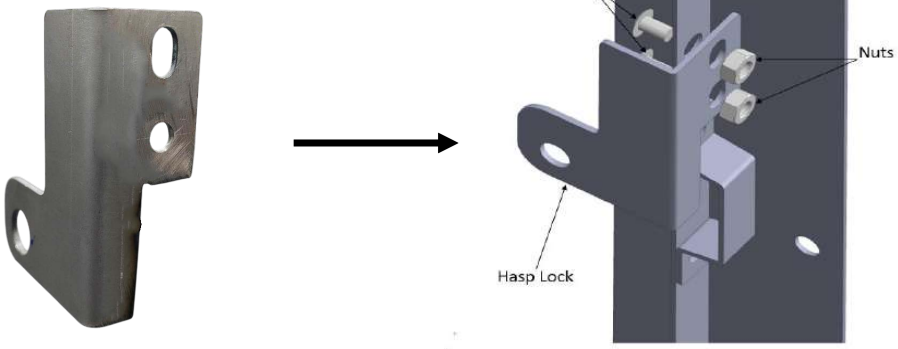


10. **Recommended Anchoring Methods**

FREE STANDING SINGLE ROW

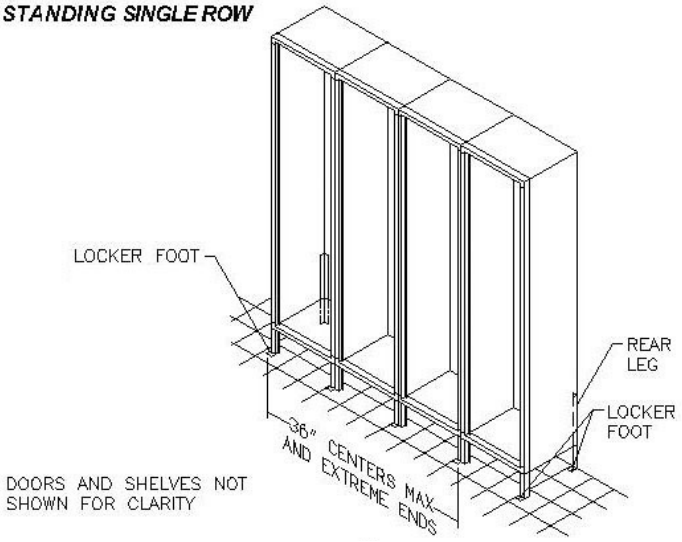

SINGLE ROW LOCKERS AGAINST A WALL

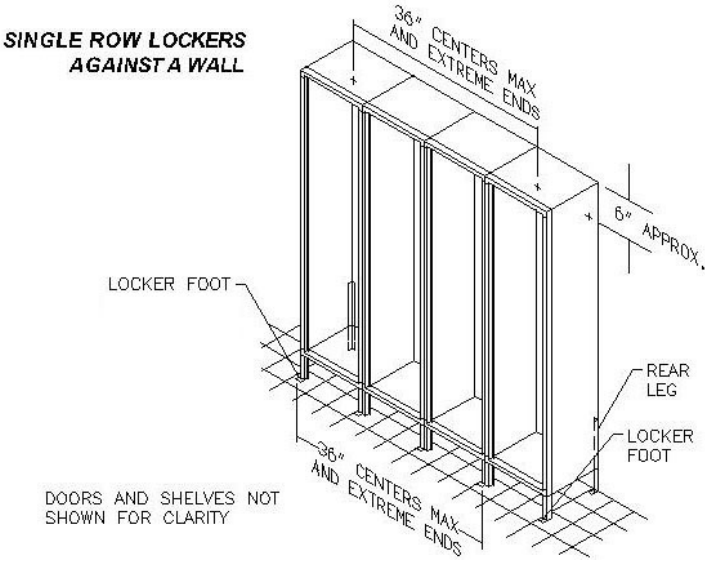

FREE STANDING DOUBLE ROW LOCKERS

