GLOBAL® INDUSTRIAL
We can supply that.®

User's manual	Manual del usuario	Manuel de l'utilisateur
Customer Service **US: 1-800-645-2986**	**Servicio de atención al Cliente** **US: 1-800-645-2986**	**Service à la clientèle** **Canada: 888-645-2986**

Pallet Rack Upright Frames, Starter Kits, and Add-ons Assembly Manual



Recommended Tools:

- 2x 9/16” (14 mm) wrenches
- Sharp, cutting tool (box cutter, safety razor, etc)
- PPE (Personal Protective Equipment)
- Torque wrench, air compressor, 9/16” drive impacts or equivalent
- Measuring Tape

QR Code to Video Tutorial:

PRIVACY.FLOWCODE.COM

This product meets ANSI MH16.1 "Design, Testing, And Utilization of Industrial Steel Storage Racks"

WARNING:

- All personnel should read and understand this manual before working with this product.
- Observe and obey all safety regulations when assembling, installing, and using the pallet rack. This includes all generally accepted safety rules, local building codes, and country/state-specific regulations for construction and storage.
- Do not install pallet racks outdoors, as they are designed solely for indoor warehouse usage. Do not store products unprotected in outdoor environments prior to installation. Do not store products in damp or corrosive environments that can damage the surface paint.
- Pallet racks should be assembled by trained or experienced personnel who are familiar with this product. At least two persons are required for the assembly of this product.
- All applicable drawings and instructions in this manual should be followed.
- Use necessary protective equipment such as gloves, safety shoes, hardhats, safety glasses, and anything else needed to prevent injury.
- Improper assembly and unapproved modifications/conversions (including but not limited to welding and cutting) of the pallet rack may cause injury, death, or damage to property and personnel.
- Do not use or replace parts, hardware, or accessories with ones not provided by Global Industrial. Doing so will void the warranty and absolve Global Industrial of any liability.

CAUTION:

- All nut and bolt connections should be tightened to the specified torque requirements. Do not over-tighten bolts!
- Aisle/work area should be kept clean and clear of all materials and debris during installation.
- Check overhead and surrounding clearance prior to raising components or the assembled uprights.
- Do not stand the upright or post until it is being used in a pallet rack assembly and supported by a beam.
- Be mindful of unsecured pivotable braces, which may create a pinch hazard.
- Storage rack should be installed only on an adequate concrete floor. Every column footplate of each pallet rack installation must be properly anchored to the floor. Consult with your professional engineer to ensure secure anchorage.
- Do not expose your storage rack to corrosive or abrasive substances or abnormal dampness.
- Never climb, stand, or step on racks before, during, or after assembly.
- Perform routine checks on pallet rack frames to identify any damages.

DISCLAIMER:

- If seismic conditions apply, verification of capacities must be confirmed with a seismic engineer. Global Industrial is not responsible for engineering, installation and/or application of this material. Global Industrial is not responsible for permits. It is the full responsibility of the customer to check the contents and quantities. The capacity rating (s) provided are for reference only. These ratings apply to static (non- seismic) conditions only.

PATENT PENDING

© 2024 Global Industrial

TABLE OF CONTENTS

WARNING, CAUTION, DISCLAIMER 1
RECOMMENDED TOOLS. 1
PRE-ASSEMBLY PREPARATIONS 3
FLOORING CONSIDERATIONS 3
ADDITIONAL RECOMMENDATIONS 3
PALLET RACK UPRIGHT ASSEMBLY 4
MAINTENANCE 6
REPLACING BRACES 7
REPLACEMENT PARTS. 7
PALLET RACK START KIT ASSEMBLY 8
PALLET RACK ADD-ON ASSEMBLY 9
FRAME CAPACITY CHART 10
PALLET BEAM UPRIGHTS, BEAMS, AND ACCESSORIES GUIDE 11
ASSEMBLY DIAGRAM. 12
WARRANTY INFORMATION 26

PRE-ASSEMBLY PREPARATIONS

Before assembling the pallet racks:

- Measure out the area where the pallet racks will be installed. Ensure adequate floor space and sufficient ceiling height prior to installation.
- Allow sufficient aisle spacing. Please keep in mind that the space between pallet racking should be greater than the intended work aisle spacing as items stored on the shelves may protrude into the aisle. It is generally recommended to have a safety distance of 18" on both sides of traffic routes, but this distance may vary depending on the size of the vehicles operated in the facility.
- When planning out the racking layout, the necessary safety distance between the racks and building components (such as columns and walls) must be observed.
- When planning out the racking layout, ensure adequate longitudinal flue space between rows as required by NFPA 13 and/or other local fire safety regulations. 6" spacing is recommended; however, please confirm with a professional engineer.

FLOORING CONSIDERATIONS

Before installing the pallet rack system, make sure that:

- The floor has an adequate load bearing capacity that can withstand the intended loads. Consult a specialist or professional if unsure. The customer is responsible for ensuring that this information is correct.
- The floor must be a reinforced concrete slab with a minimum thickness of 6". If magnesite screed is present on the surface, insulating plates and special ground anchors are required to prevent corrosion.
- Pallet racks should be installed square and plumb on the floor. Shimming may be necessary if floors are not level. Maximum allowed out-of-plumbness is ½” per every 10 feet of height.

NOTE: All values mentioned below are general recommendations in the warehouse industry. It is the customer's responsibility to consult with a qualified professional and determine the anchoring requirements.

ADDITIONAL RECOMMENDATIONS

- Install adequate lighting in every aisle. Better visibility will reduce the chances of workers bumping into pallet racks and damaging them.
- Install column/post protection devices. These accessories are sold separately and protect the pallet rack upright from damage caused by impact from forklifts. It is recommended to install these in high traffic areas.
- Install capacity signs to each pallet rack that states relevant information such as: maximum pallet load, average pallet weight, and maximum load per bay.


PALLET RACK UPRIGHT ASSEMBLY

For models: 298678, 298689, 298690, 298691, 298692, 298693, 298694

1 Disassemble the Package

Disassemble the pallet upright package. Using a box cutter or similar sharp utensil, gently cut off the straps holding the upright kit together.

Avoid scratching the protective paint on the components.

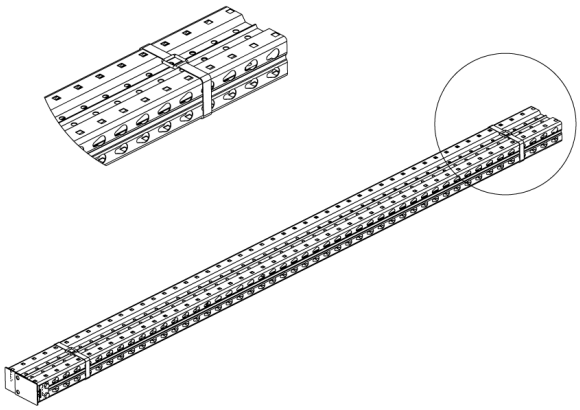


2 Lay Out and Check All Parts

Lay out all the components on the ground and identify them according to the parts list.
(Drawings of all upright models can be found on pages 12-25 of this manual. Refer to the corresponding model.)

Align the bottom footplates of the posts according to the diagram and spread the attached braces.

Confirm that all the parts are present and if any are missing or damaged, contact Global Industrial to request replacements.

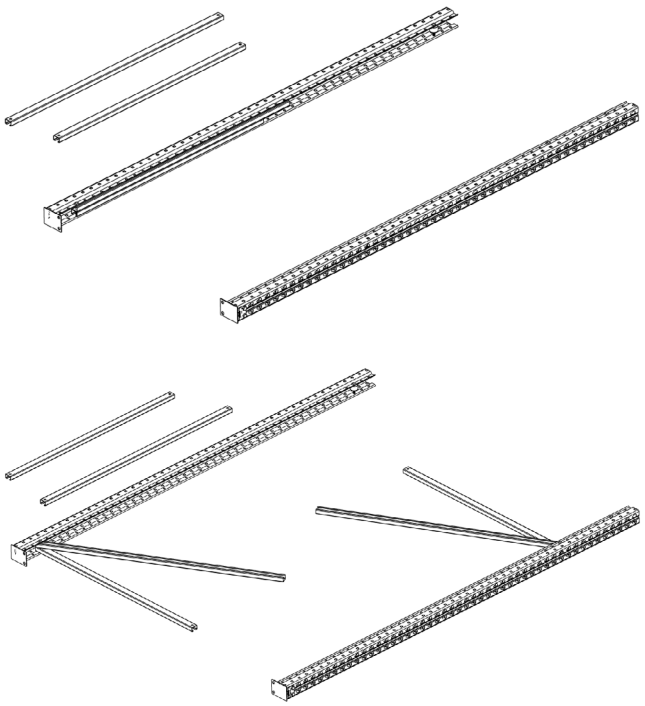

NOTE: Graphics are for illustration purposes only and may not accurately reflect the loose components in your purchased item.


3 Adjust Footplates

Confirm that the footplate is flush with the bottom of the post. If it is not, loosen the bolts and push the footplate in until it is flush with the bottom of the post. Retighten the bolts afterwards.

Bolts should be tightened following the below requirements:

Torque range: 33-43 ft. lbs. (45NM-59NM)
Max. torque: 43 ft. lbs (59NM)

NOTE: Visit the Global Industrial website to view our selection of optional footplate accessories. Be sure to consult with a professional engineer first to determine if they are suitable for your seismic conditions.

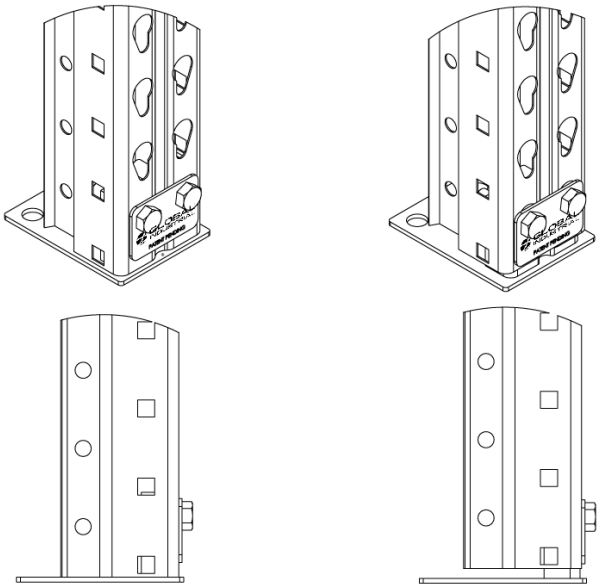

Flush | Not Flush


4 Connect the braces to the posts

Follow the assembly graphics to connect the two posts together using the braces and hardware. The bolt should go through the post and brace(s)/spacer and is secured with the nut. The holes on the posts are marked to indicate where the bolts are inserted.


The shorter side of the shoulder bolt head should be touching the lip of the open end of the post.

NOTE: Some pre-inserted bolts may need to be removed to attach an additional brace into the correct position.

NOTE: The open "C" side of the brace should always face outwards, with the back of the brace touching either the back of another brace or a rubber bushing.

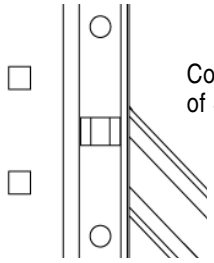


Correct Orientation of Shoulder T Bolt

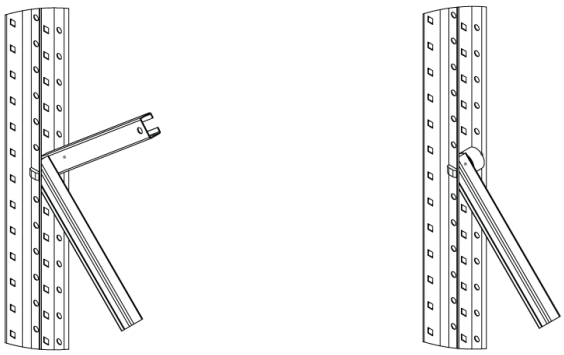

2x Brace Configuration | 1 Brace + Rubber Bushing Configuration

5 Tighten all bolts

Confirm that the upright assembly matches the diagram shown in the graphics. Ensure all bolts are sufficiently tightened before using the upright panel in a pallet rack assembly.

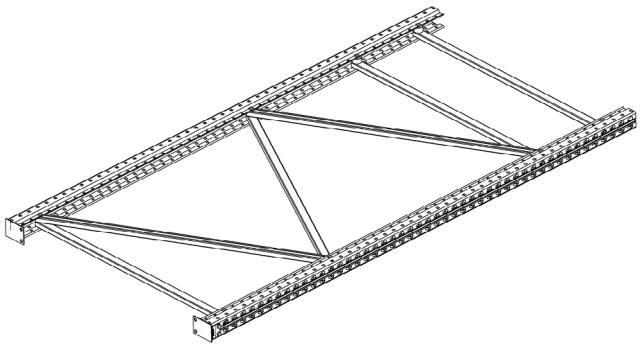

Bolts should be tightened following the below requirements:

Torque range: 33-43 ft. lbs. (45NM-59NM)
Max. torque: 43 ft. lbs (59NM)

Do not over-tighten bolts!

MAINTENANCE

Perform a regularly scheduled maintenance program. At a minimum this program should include the following:

- Check for missing or damaged hardware including bolts, nuts, and beam locking devices. Replace any missing or damaged items with Global Industrial supplied/ approved hardware. Check that all bolts and fasteners are snug and tight.
- Check for damage to any components, including beams and columns. Damaged items should be repaired or replaced.
- Check to ensure that all racks are plumb, level, and square.
- Check to make sure that the rack is being used for its intended purpose. Maintain a set of installation drawings on site for review. Check the weight of the product being stored to ensure that it does not exceed original design weights.
- Be on the lookout for areas that have excessive damage or repeated damage and take corrective action. For instance, ends of rack rows often experience damage from fork trucks entering the aisle and cutting the corner too quickly. This problem can be addressed through the use of guard rails or other column protective devices.
- Maintain good housekeeping. Clear, clean aisles are essential to the safety of your facility.


REPLACING BRACES

If there is any visible bending or damage to any of the braces, particularly at the first-beam level, they should be replaced as soon as possible. Damaged braces will impact the structural integrity of the pallet rack and alter the static load capacity.

To replace the brace:

- Remove all weight on the pallet rack around the affected pallet upright. All racking must be unloaded on all vertical bays on both sides of the upright.
- Unscrew the nuts and remove the shoulder bolts that are connecting the brace to the pallet upright.
- Replace the damaged brace with one provided by Global Industrial.
- Reattach the shoulder bolts and nuts and tighten them to the recommended torque range.

Torque range: 33-43 ft. lbs. (45NM-59NM)
Max. torque: 43 ft. lbs (59NM)

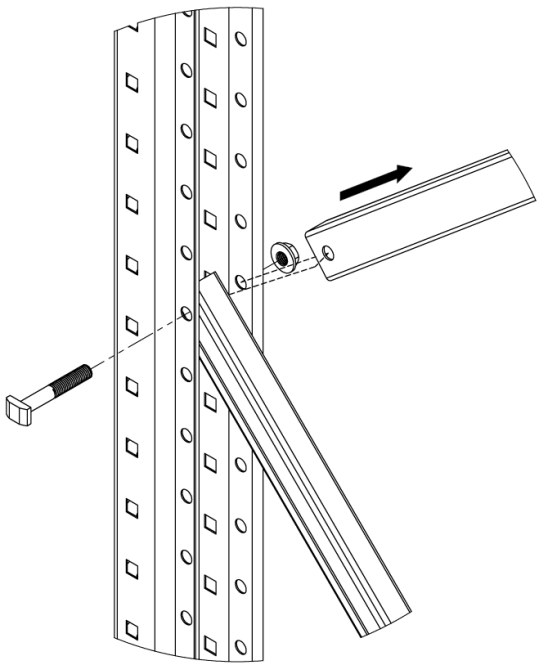

REPLACEMENT PARTS

Part Name	Part Number
Diagonal bracing for 42" frame	298812
Horizonal bracing for 42" frame	298813
Diagonal bracing for 48" frame	298814
Horizonal bracing for 48" frame	298815
Footplate (includes a pair of bolts)	298816
Hardware kit for 1x brace: 2 nuts, 2 bolts, 2 rubber bushings	298817


WARNING: Do not use or replace parts, hardware, or accessories with ones not specified in this manual. Using unapproved parts will void the warranty and absolve Global Industrial of any liability.

PALLET RACK START KIT ASSEMBLY

1 Connecting the Uprights

Stand two upright assemblies up and space them apart so that the distance between them is approximately the same as the length of the beams being installed.

Position the beam so that it is at the desired height.

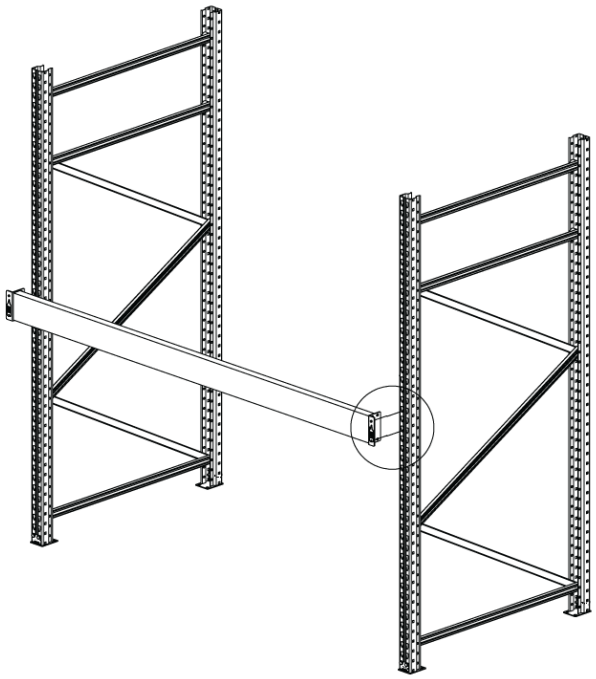


WARNING: Do not leave any of the uprights standing up without any support. A person should be holding onto it until it is secured to a beam.


2 Attaching the Beam

Position the two rivets on each side of the beam on the desired upright post height.

Push the rivets downwards to securely seat them in the upright holes.

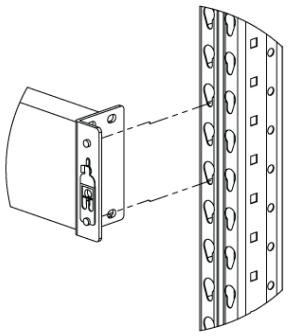


NOTE: To remove a beam, pull back the tab on the beam clip before pushing upwards to un-hook the rivets from the upright post.

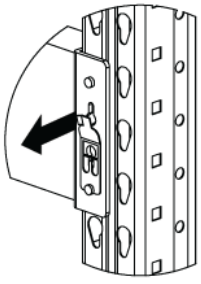

3 Attaching the Other Beams

Attach the remaining beams to the upright assemblies using the same procedure as the previous step.


A minimum of four beams is required between every two pallet uprights for a structurally stable pallet rack.

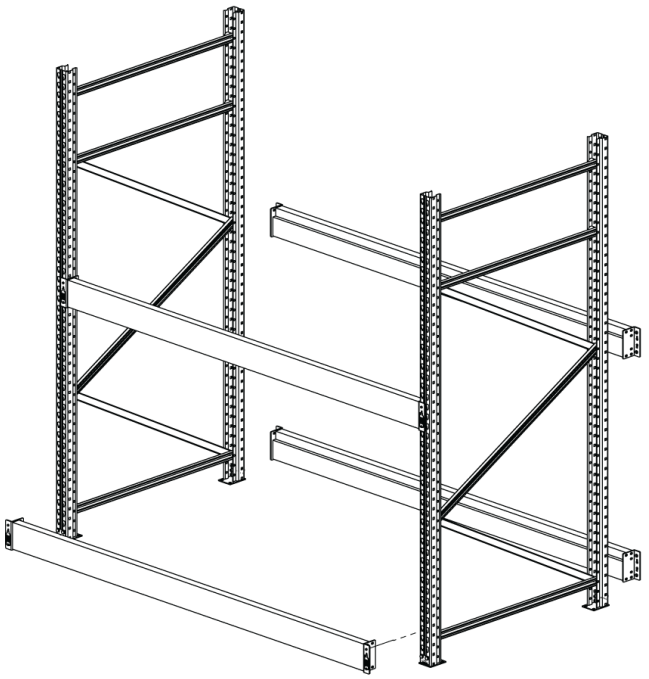

DISCLAIMER: It is necessary to secure the footplates of the pallet rack with suitable floor anchors (not included) before using the pallet rack. Consult with a professional engineer to determine which floor anchors are required for the floor of the warehouse where the pallet rack is to be installed in.

4 Add-ons: Pallet Rack Expansion


To expand the pallet rack, attach another upright assembly with a minimum of four beams to the end of the existing assembly.

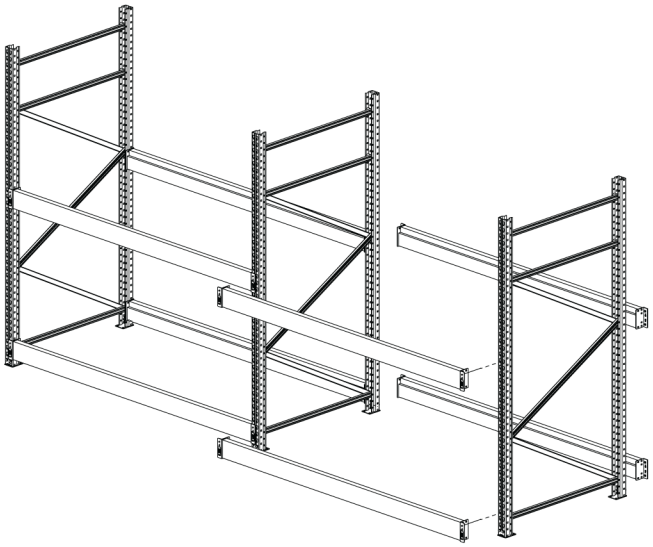

FRAME CAPACITY CHART

The pallet rack upright frame weight capacity is determined by the height between levels. The higher the height between levels, the less the pallet rack upright capacity will be.

To determine the height between levels, measure the distance between the storage levels. Maximum unsupported length is the maximum beam spacing or the distance between the floor and the top of the first beam (whichever is greater).

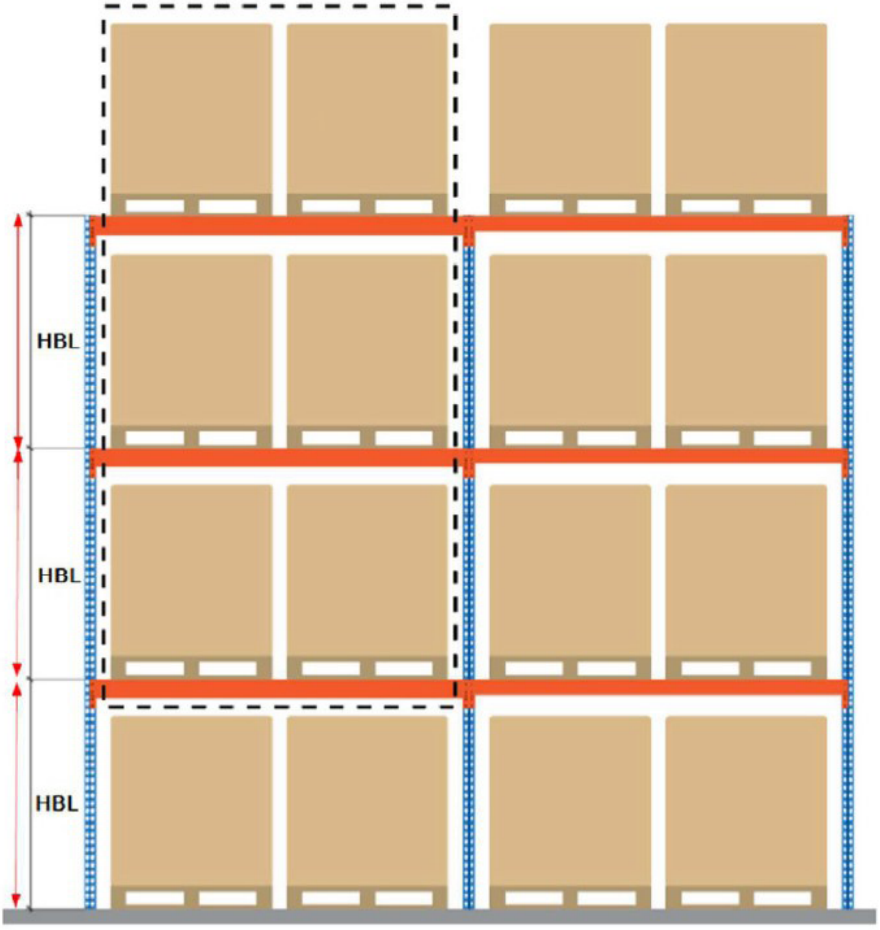

Please view the upright frame capacity chart below to determine if your application preferences meet the requirements for this upright frame model:

Height Between Levels (HBL)	Capacity (lbs)
36"	33,000
42"	32,500
48"	31,800
54"	31,100
60"	30,600
66"	29,800
72"	28,900
78"	28,200

PALLET BEAM UPRIGHTS, BEAMS, AND ACCESSORIES GUIDE

Pallet Rack Uprights

Model Number	Dimensions D x H	Post Dimensions W x D	Weight (lbs)	Assembly Diagram
298678	42"D x 96"H	3 x 3"	62	pg. 12
298689	48"D x 96"H	3 x 3"	64	pg. 14
298690	42"D x 120"H	3 x 3"	77	pg. 16
298691	48"D x 120"H	3 x 3"	79	pg. 18
298692	42"D x 144"H	3 x 3"	92	pg. 20
298693	48"D x 144"H	3 x 3"	94	pg. 22
298694	42"D x 192"H	3 x 3"	121	pg. 24

Unslotted Steel Pallet Rack Beam


Model Number	Width (in)	Beam Height (in)	Shelf Capacity (lb)	Gauge
245970	48	3-5/16	6590	16
597001	96	3-5/16	3230	16
245972	96	4-1/32	5030	16
245973	96	5-1/8	7160	16
245975	108	5-1/8	6420	16
245976	120	5-1/8	5630	16
597007	144	6	5702	15


Pallet Rack Accessories

Accessories	Model Number	Description
Wall Spacer	413101	6" wall spacer w/ hardware; 4 pcs/ctn
	413102	12" wall spacer w/ hardware; 4 pcs/ctn
Row Spacer	413103	6" row spacer w/ hardware; 4 pcs/ctn
	413104	12" row spacer w/ hardware; 4 pcs/ctn
Fork Clearance Bar	413105	Pallet Rack Fork Clearance Bar, 42" D
	413106	Pallet Rack Fork Clearance Bar, 48" D
Pallet Support Crossbar	413107	Pallet Support Crossbar, 42" D; 4 pcs/ctn
	413108	Pallet Support Crossbar, 48" D; 4 pcs/ctn
Backstop	413109	Teardrop Pallet Rack Backstop, 48" L, 6" Offset
	413110	Teardrop Pallet Rack Backstop, 96" L, 6" Offset
	413111	Teardrop Pallet Rack Backstop, 108" L, 6" Offset
	413112	Teardrop Pallet Rack Backstop, 120" L, 6" Offset
	413113	Teardrop Pallet Rack Backstop, 144" L, 6" Offset
Pallet Stopper	413114	Pallet Stopper for 12" Row Spacer, 4 screws
	413115	Pallet Stopper for 18" Row Spacer, 4 screws
	413116	Pallet Stopper for 24" Row Spacer, 4 screws
Footplate	413117	2 pcs Pallet Rack Footplate, 5" x 8" x 2-9/36", 3/8" Thick, 4 sets Nuts & Bolts
	413118	2 pcs Pallet Rack Footplate, 5" x 8" x 11-4/5", 3/8" Thick, 12 sets Nuts & Bolts
	413119	2 pcs Pallet Rack Footplate, 8" x 8" x 11-4/5", 3/8" Thick, 12 sets Nuts & Bolts
End Protector	413120	2 pcs End Protector, Single Round Head (Left & Right), Yellow, 42" D; 2 pcs/ctn
	413121	2 pcs End Protector, Single Round Head (Left & Right), Yellow, 48" D; 2 pcs/ctn
	413122	End Protector, Double Round Head, Yellow, 42" D; 1 pcs/ctn
	413123	End Protector, Double Round Head, Yellow, 48" D; 1 pcs/ctn
Pallet Racking Guard	413124	Pallet Racking Guard, 42" W x 20" H
	337323R	Pallet Racking Guard, 48" W x 24" H
Wire Decking	798654	Pallet Rack Wire Decking, 46"W x 42"D(2500 lbs cap)
	798657	Pallet Rack Wire Decking, 46"W x 48"D (2500 lbs cap)
Anchor Bolt	796365	Anchor Bolt 1/2-13 x 3-3/4"; 50 pcs/package

Assembly Diagram

Model No. 298678
Pallet Rack Upright Frame 42"D x 96"H

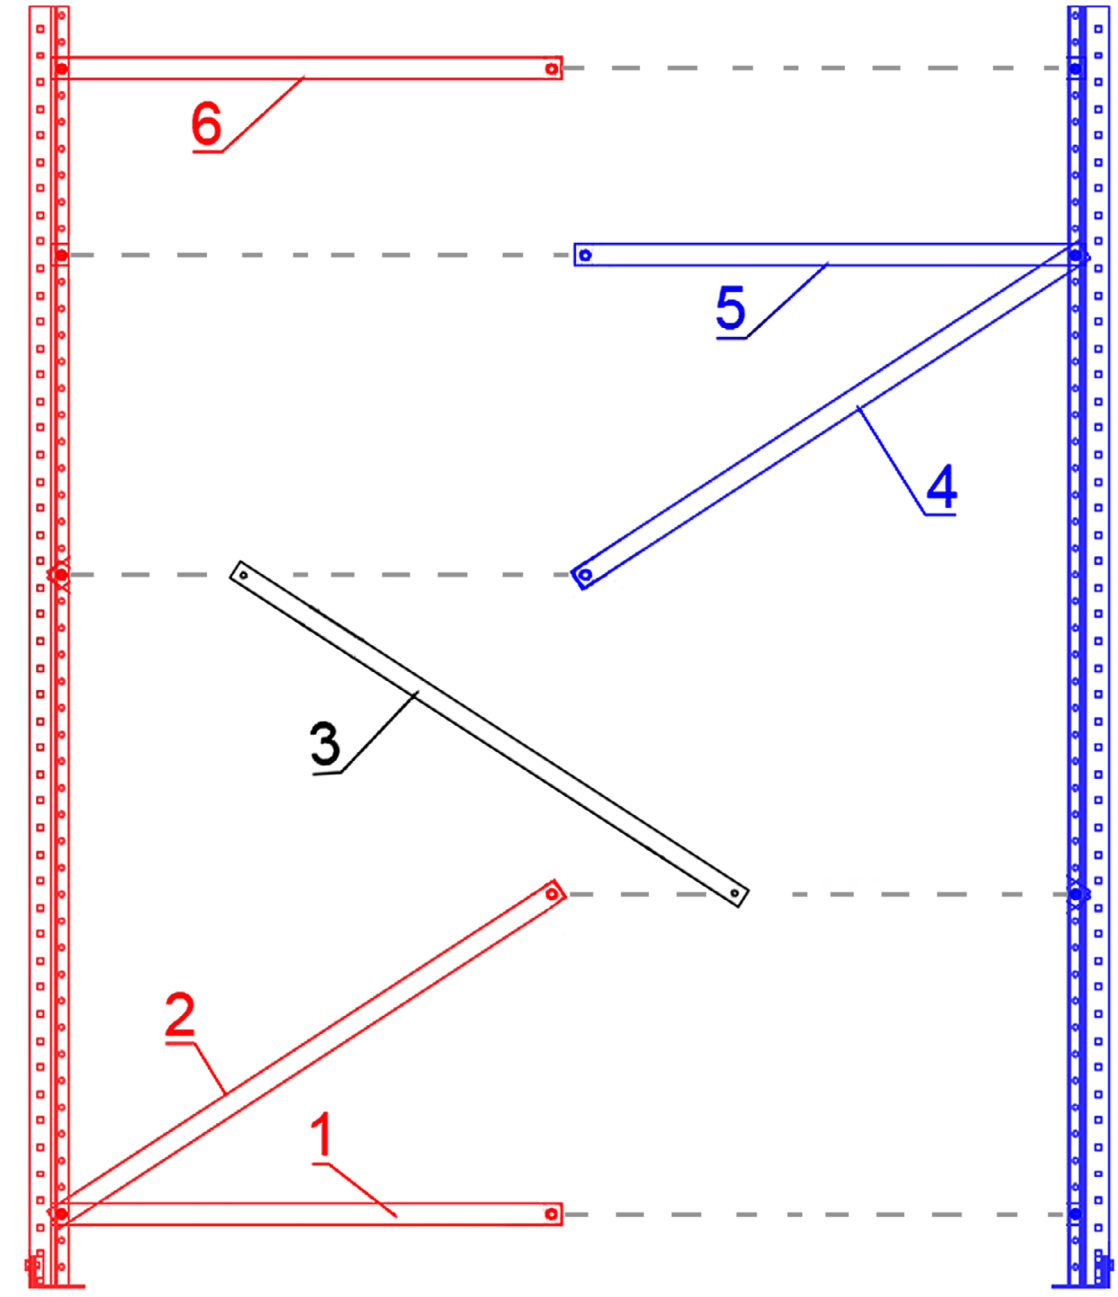

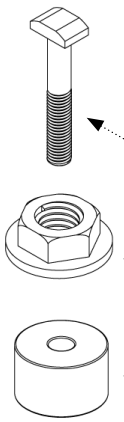


PART NAME	QTY (total)	BREAKDOWN
Footplate	2	
Footplate Hex Bolt [M10 x 1.5, 20mm]	4	
Washer Plate	2	
96" Post	2	
Diagonal Brace for 42" Frame	3	2 attached, 1 loose
Horizontal Brace for 42" Frame	3	3 attached
Shoulder T-Bolt [M10 x 1.5, 65mm] 800 MPa Tensile Strength	8	3 attached, 5 loose
Flanged Nut [M10 x 1.5]	8	3 attached, 5 loose
Rubber Bushing	4	1 attached, 3 loose

Note: Loose refers to unattached components


Assembly Diagram


Model No. 298678
Pallet Rack Upright Frame 42"D x 96"H

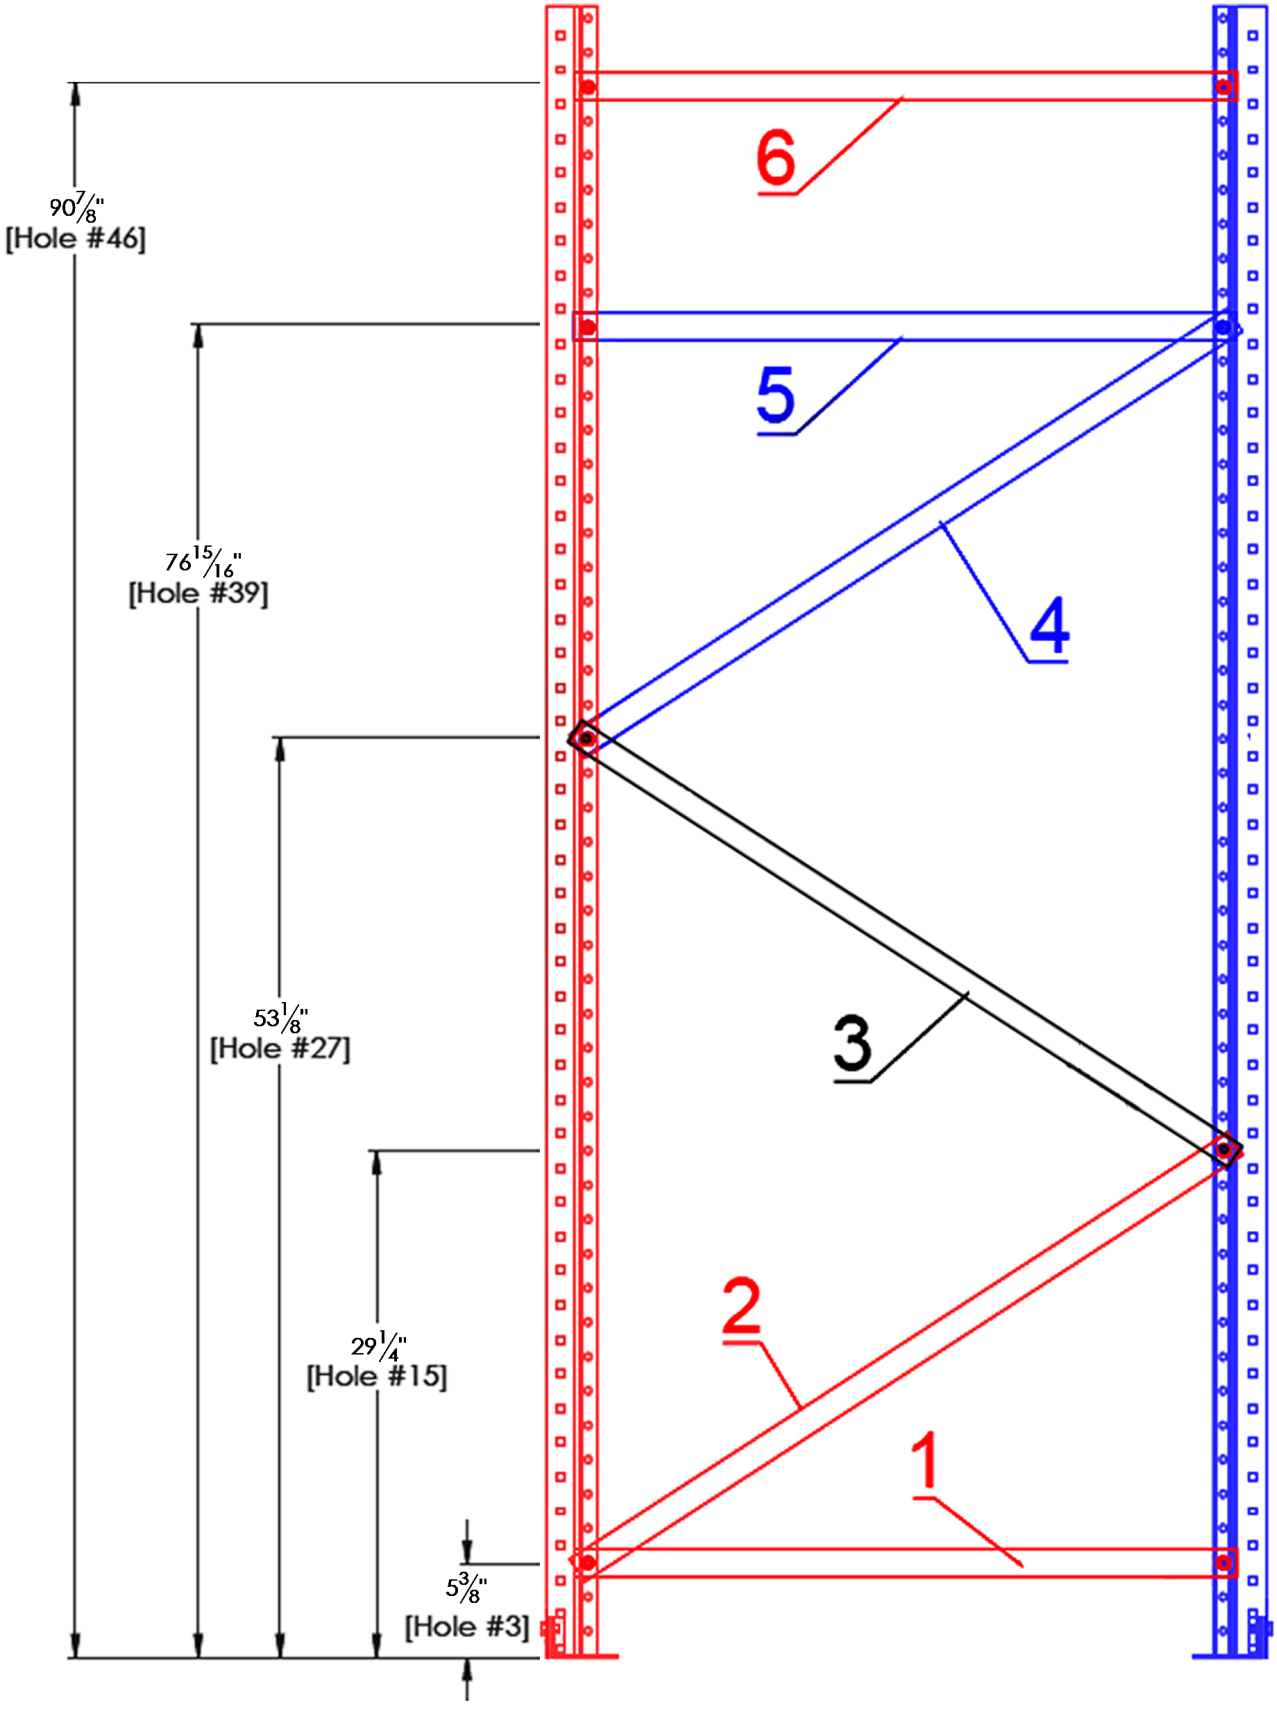

Assembly Diagram

Model No. 298689
Pallet Rack Upright Frame 48"D x 96"H

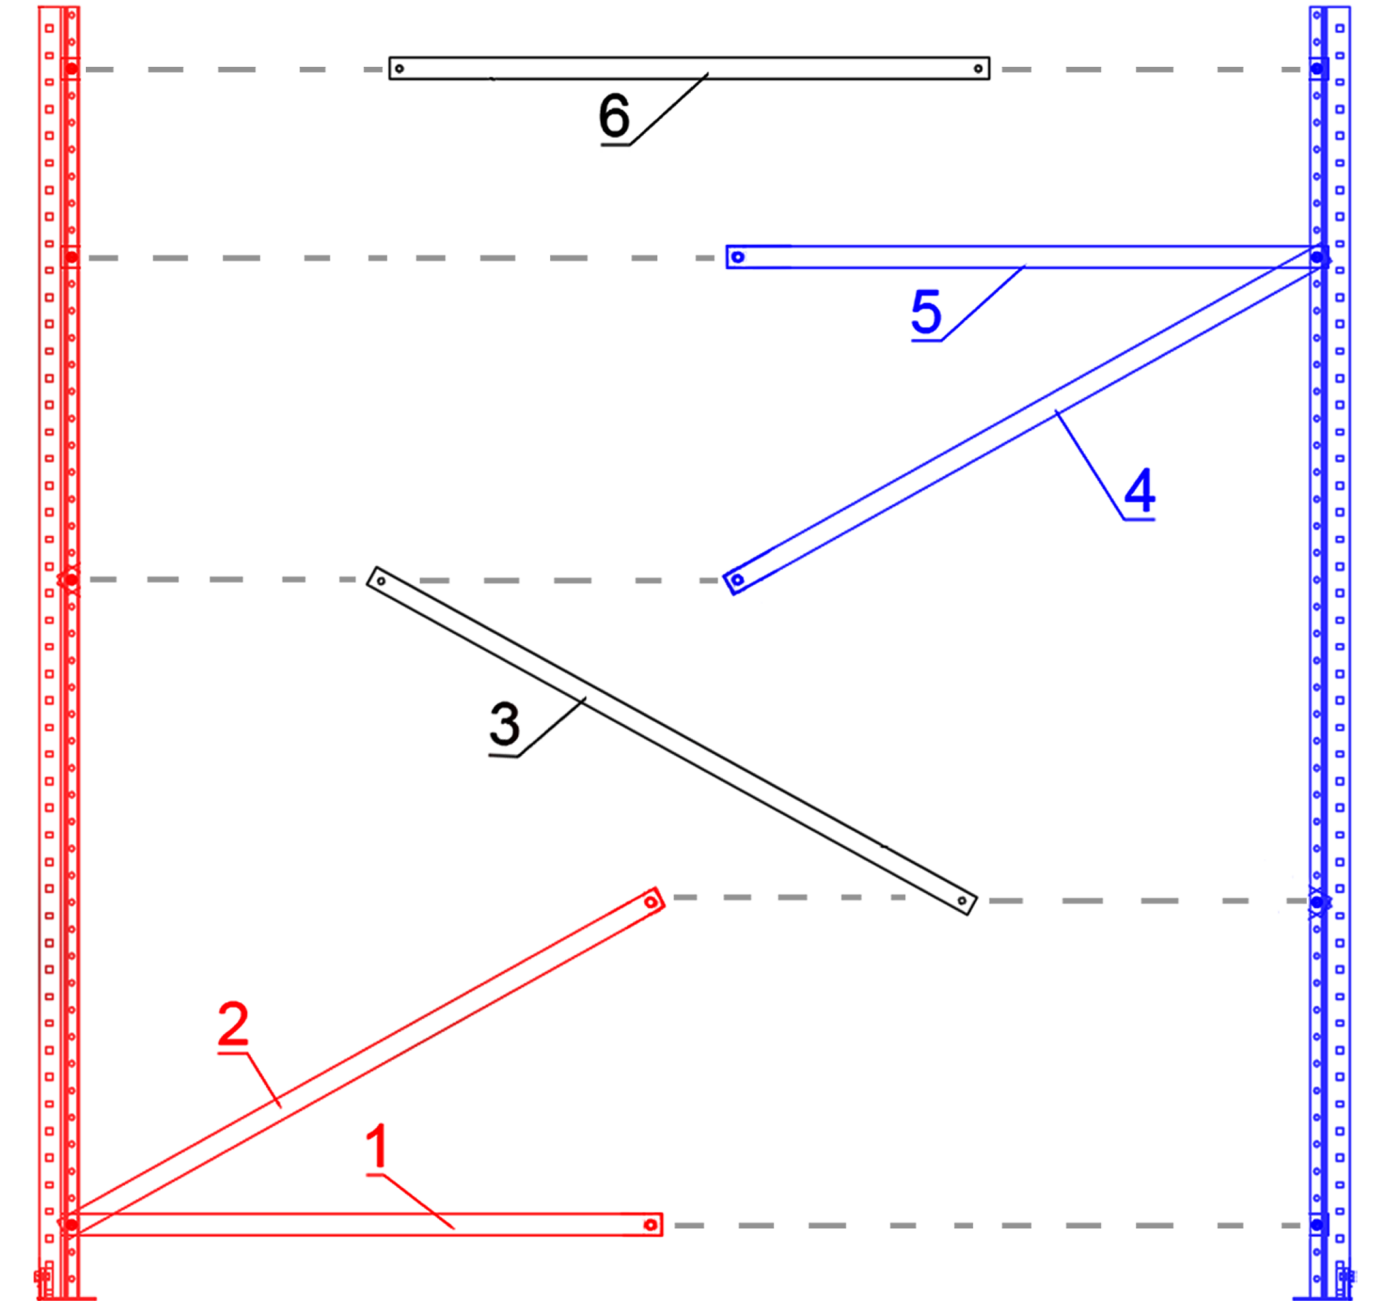

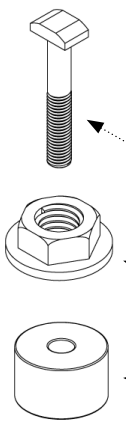


PART NAME	QTY (total)	BREAKDOWN
Footplate	2	
Footplate Hex Bolt [M10 x 1.5, 20mm]	4	
Washer Plate	2	
96" Post	2	
Diagonal Brace for 48" Frame	3	2 attached, 1 loose
Horizontal Brace for 48" Frame	3	2 attached, 1 loose
Shoulder T-Bolt [M10 x 1.5, 65mm] 800 MPa Tensile Strength	8	2 attached, 6 loose
Flanged Nut [M10 x 1.5]	8	2 attached, 6 loose
Rubber Bushing	4	4 loose

Note: Loose refers to unattached components


Assembly Diagram


Model No. 298689
Pallet Rack Upright Frame 48"D x 96"H

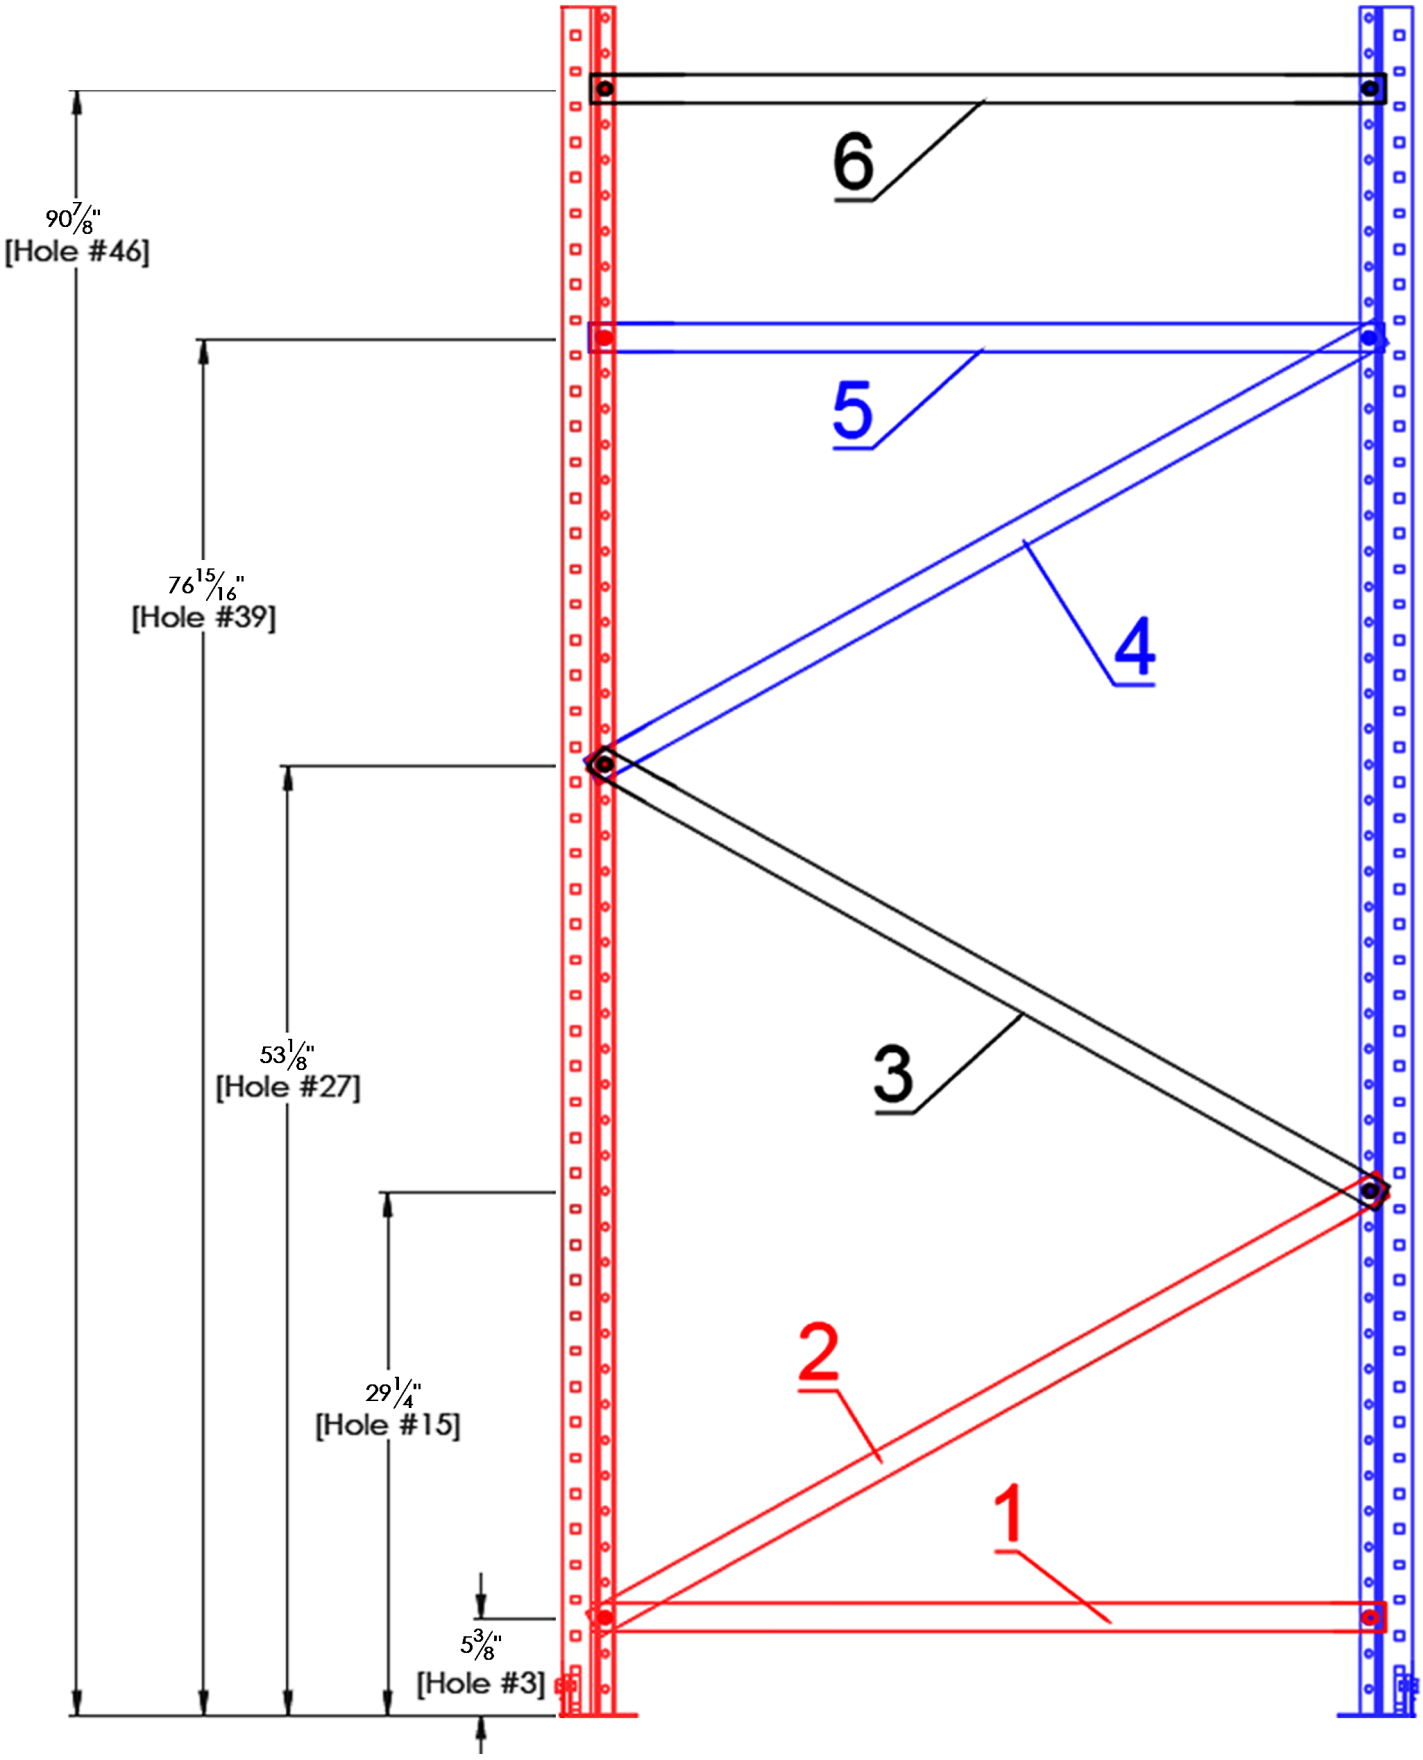

Assembly Diagram

Model No. 298690
Pallet Rack Upright Frame 42"D x 120"H

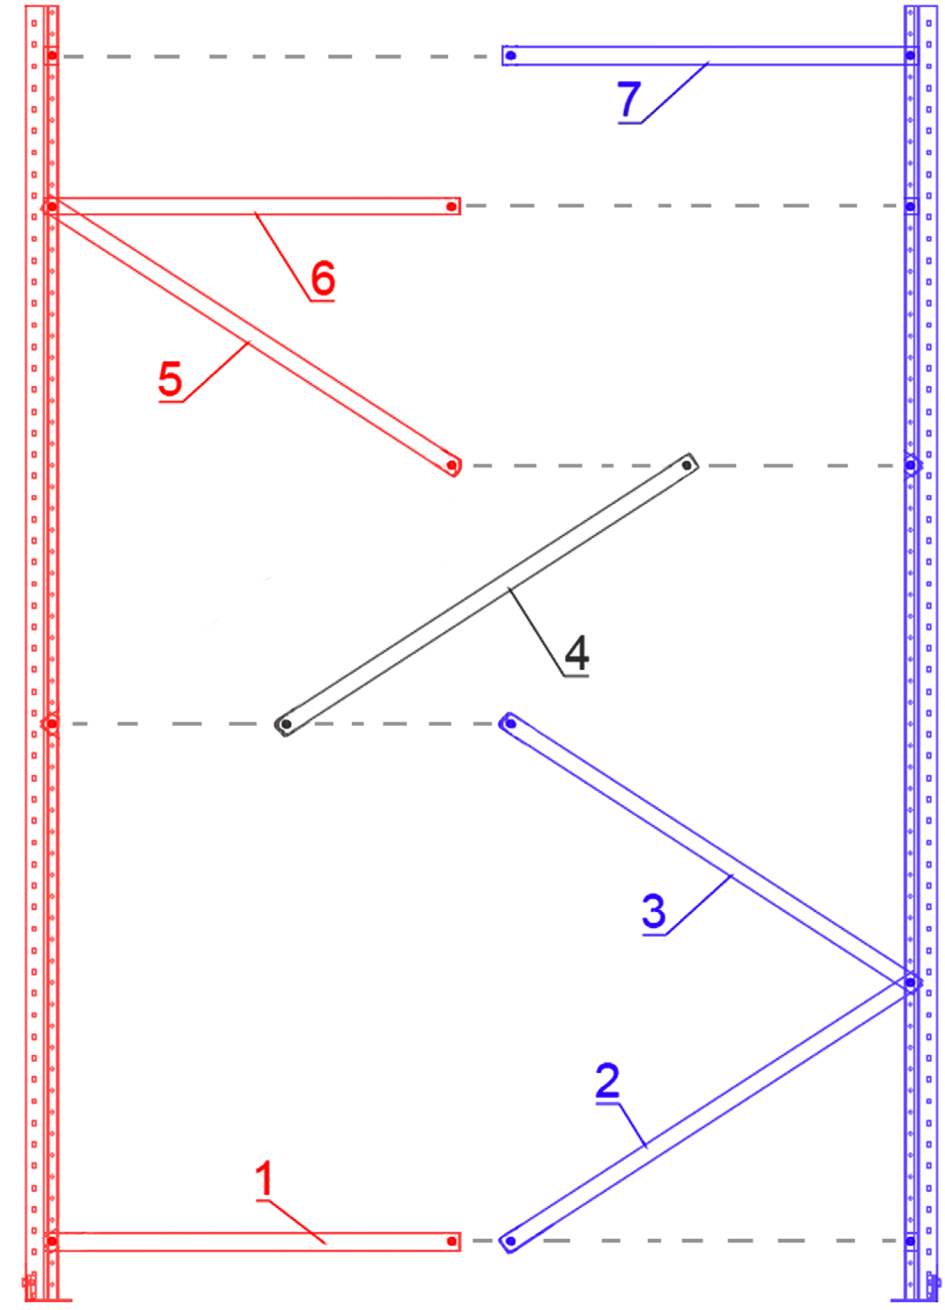

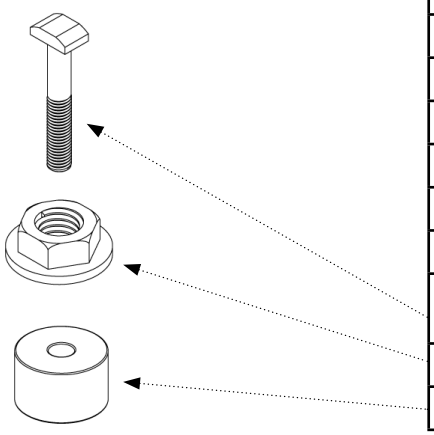


PART NAME	QTY (total)	BREAKDOWN
Footplate	2	
Footplate Hex Bolt [M10 x 1.5, 20mm]	4	
Washer Plate	2	
120" Post	2	
Diagonal Brace for 42" Frame	4	3 attached, 1 loose
Horizontal Brace for 42" Frame	3	3 attached
Shoulder T-Bolt [M10 x 1.5, 65mm] 800 MPa Tensile Strength	9	4 attached, 5 loose
Flanged Nut [M10 x 1.5]	9	4 attached, 5 loose
Rubber Bushing	4	1 attached, 3 loose

Note: Loose refers to unattached components


Assembly Diagram


Model No. 298690
Pallet Rack Upright Frame 42"D x 120"H

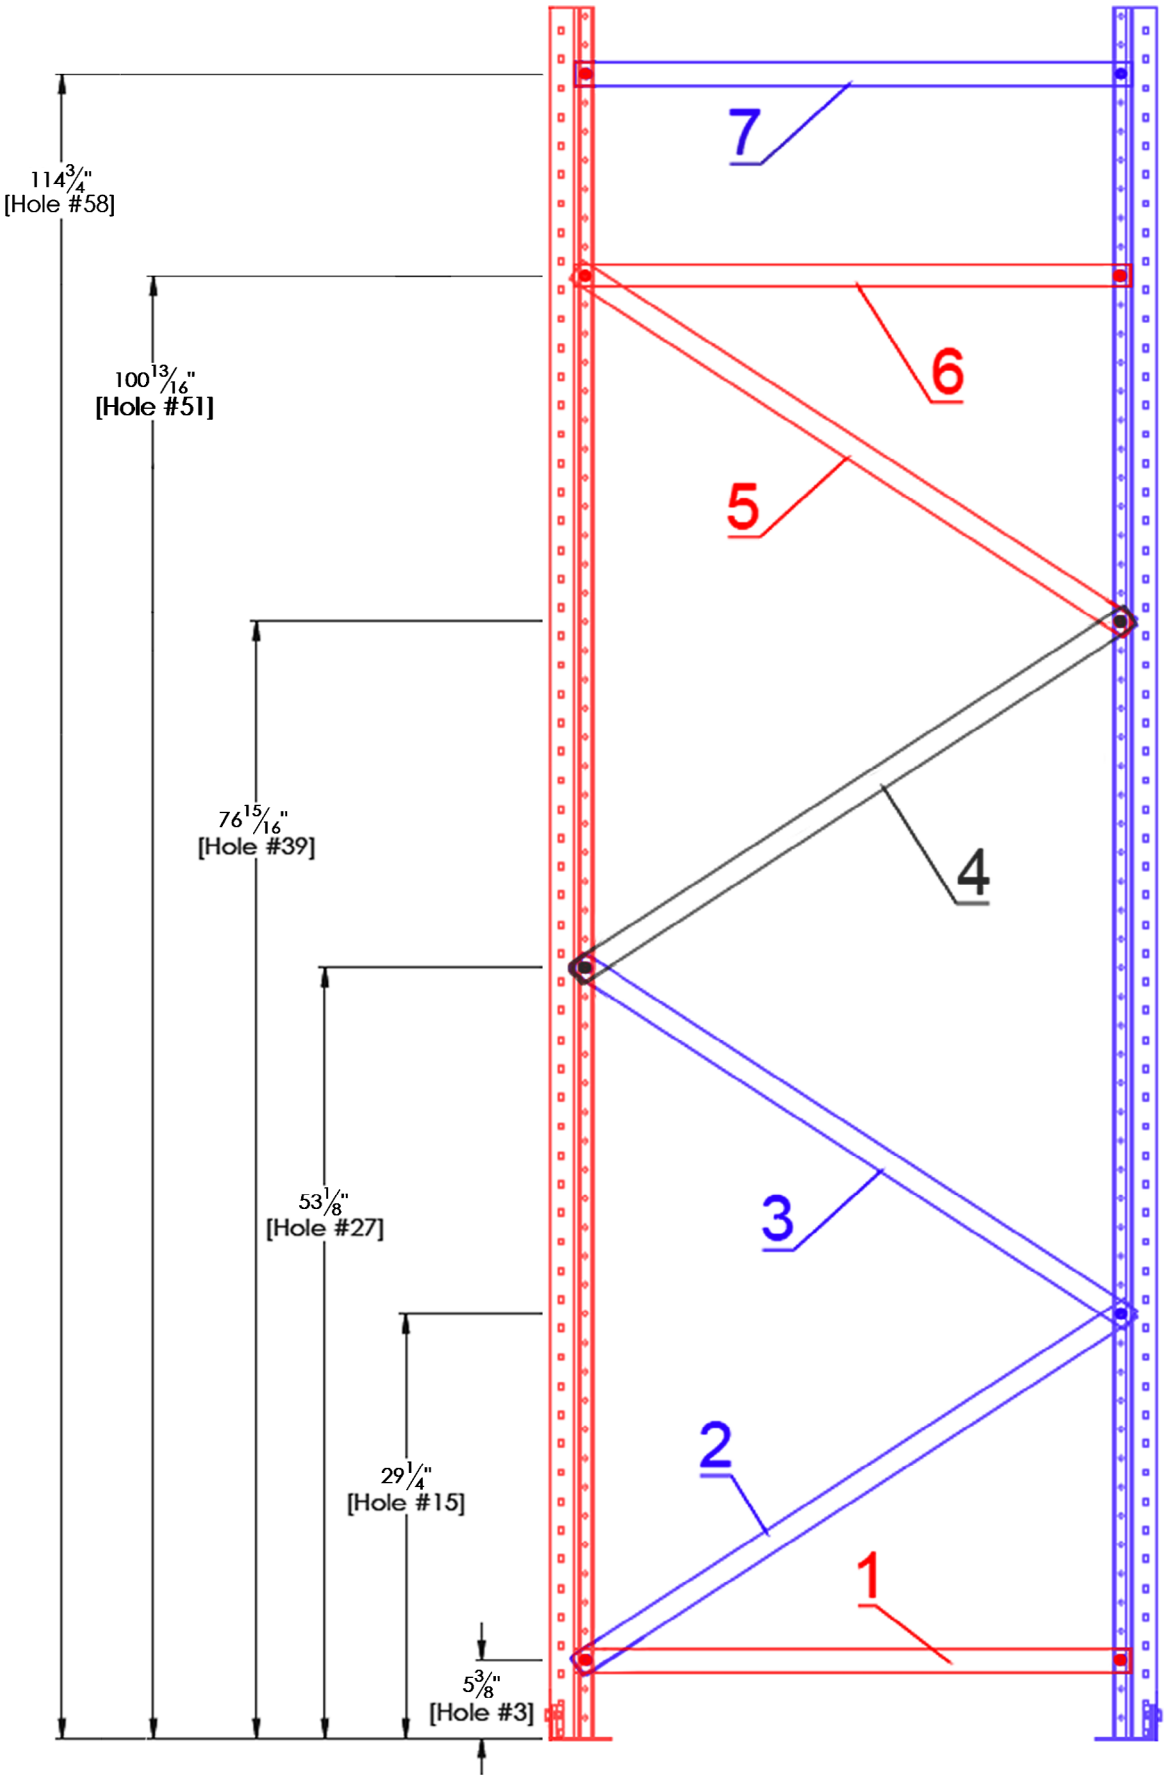

Assembly Diagram

Model No. 298691
Pallet Rack Upright Frame 48"D x 120"H

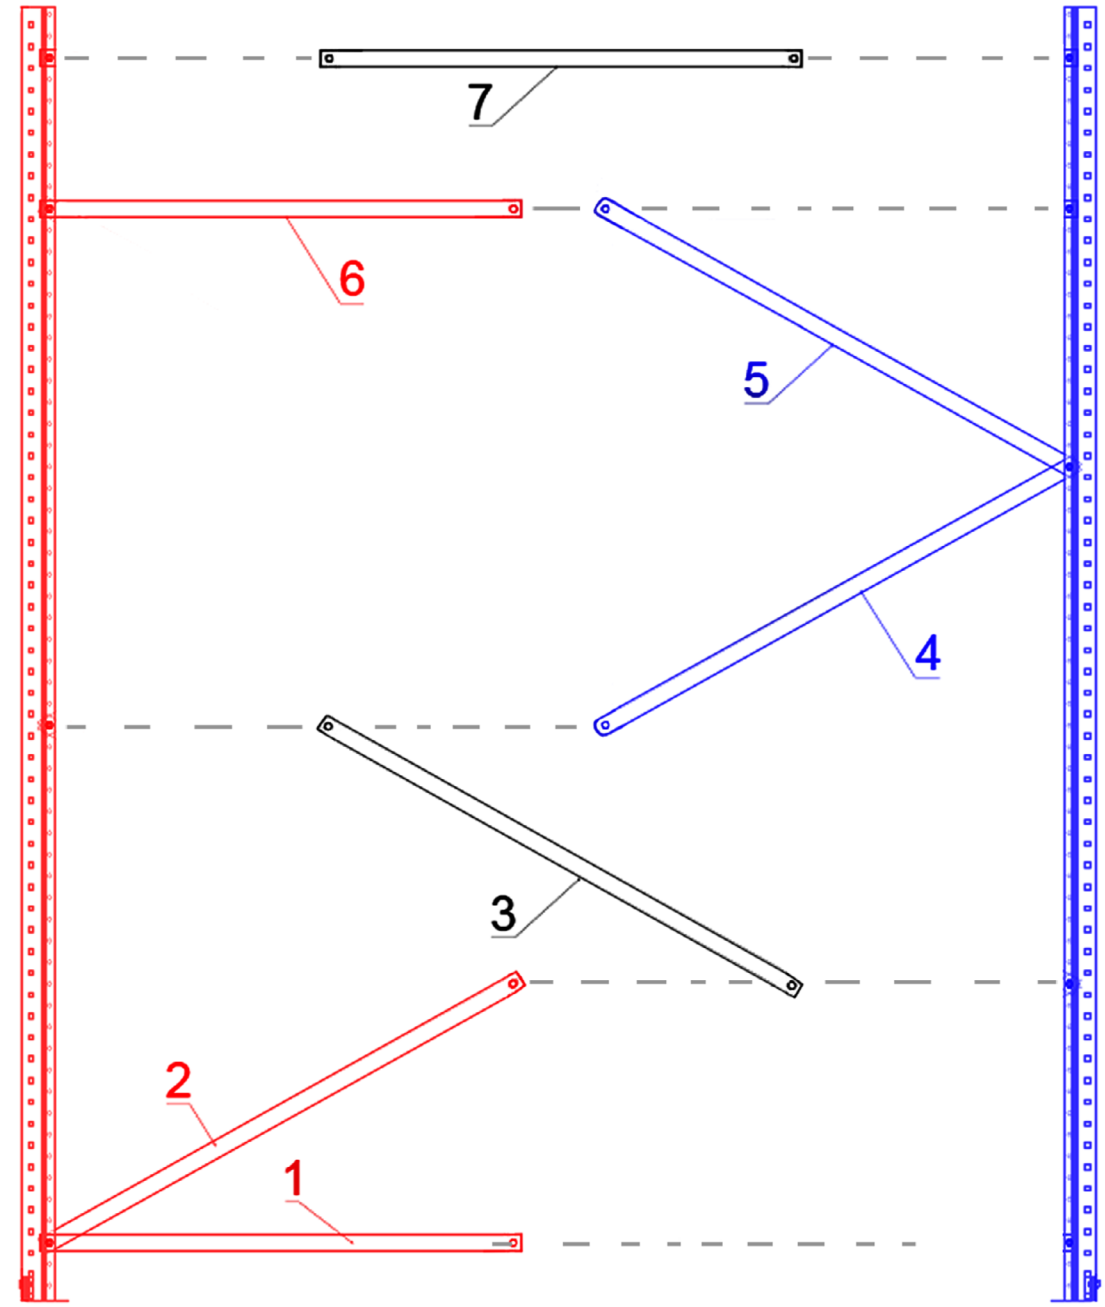

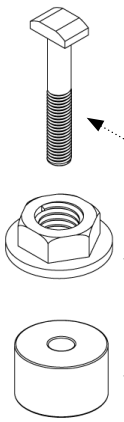


PART NAME	QTY (total)	BREAKDOWN
Footplate	2	
Footplate Hex Bolt [M10 x 1.5, 20mm]	4	
Washer Plate	2	
120" Post	2	
Diagonal Brace for 48" Frame	4	3 attached, 1 loose
Horizontal Brace for 48" Frame	3	2 attached, 1 loose
Shoulder T-Bolt [M10 x 1.5, 65mm] 800 MPa Tensile Strength	9	3 attached, 6 loose
Flanged Nut [M10 x 1.5]	9	3 attached, 6 loose
Rubber Bushing	4	4 loose

Note: Loose refers to unattached components


Assembly Diagram


Model No. 298691
Pallet Rack Upright Frame 48"D x 120"H

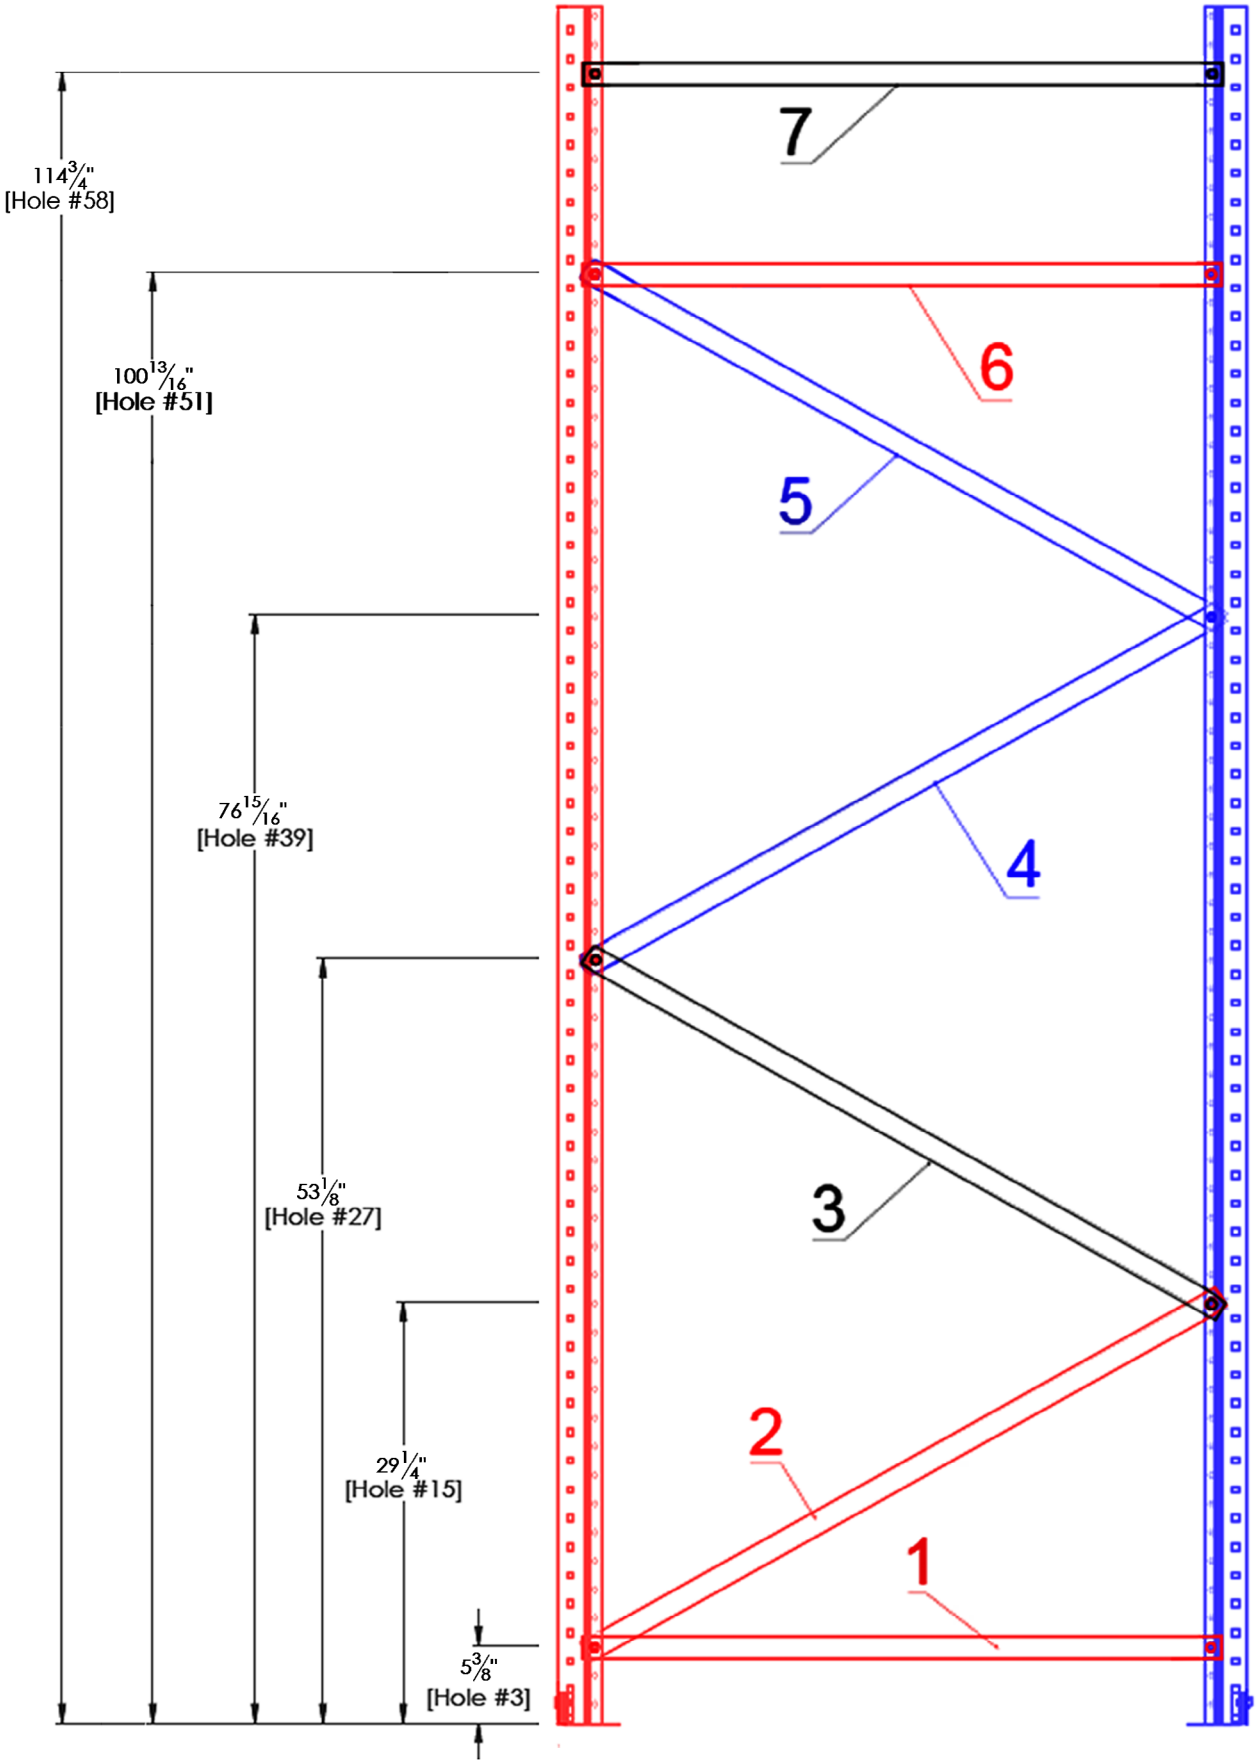

Assembly Diagram

Model No. 298692
Pallet Rack Upright Frame 42"D x 144"H

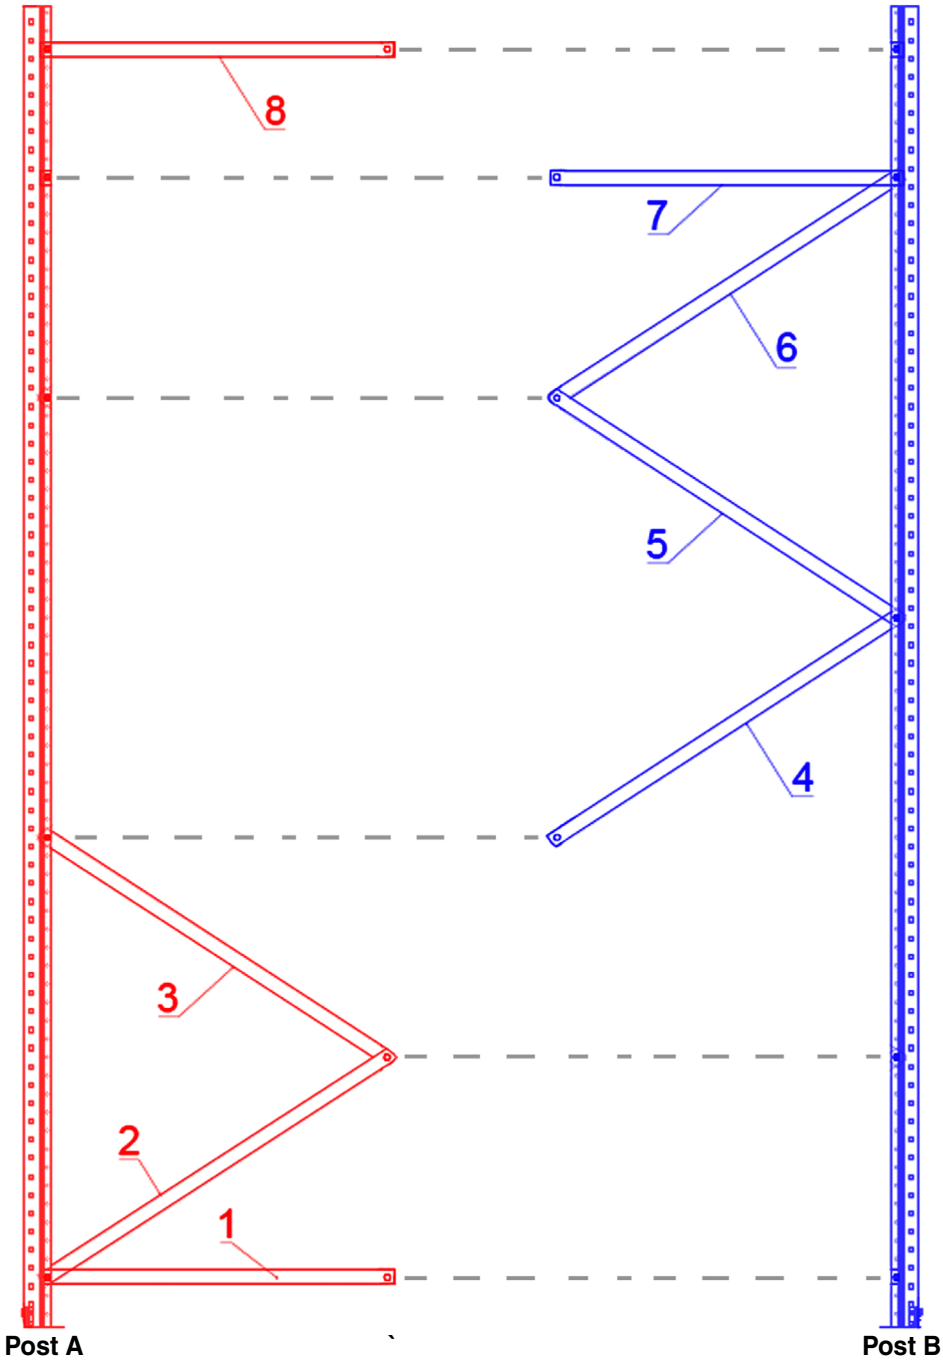

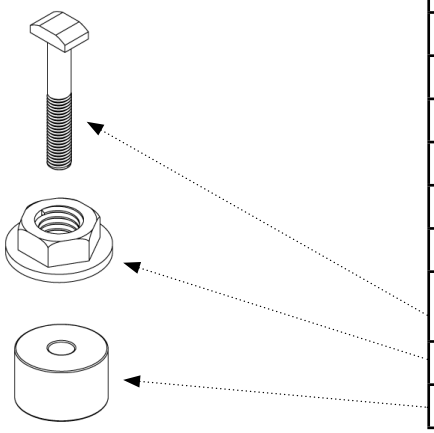


PART NAME	QTY (total)	BREAKDOWN
Footplate	2	
Footplate Hex Bolt [M10 x 1.5, 20mm]	4	
Washer Plate	2	
144" Post	2	
Diagonal Brace for 42" Frame	5	5 attached
Horizontal Brace for 42" Frame	3	3 attached
Shoulder T-Bolt [M10 x 1.5, 65mm] 800 MPa Tensile Strength	10	5 attached, 5 loose
Flanged Nut [M10 x 1.5]	10	5 attached, 5 loose
Rubber Bushing	4	1 attached, 3 loose

Note: Loose refers to unattached components

Assembly Diagram


Model No. 298692


Pallet Rack Upright Frame 42"D x 144"H

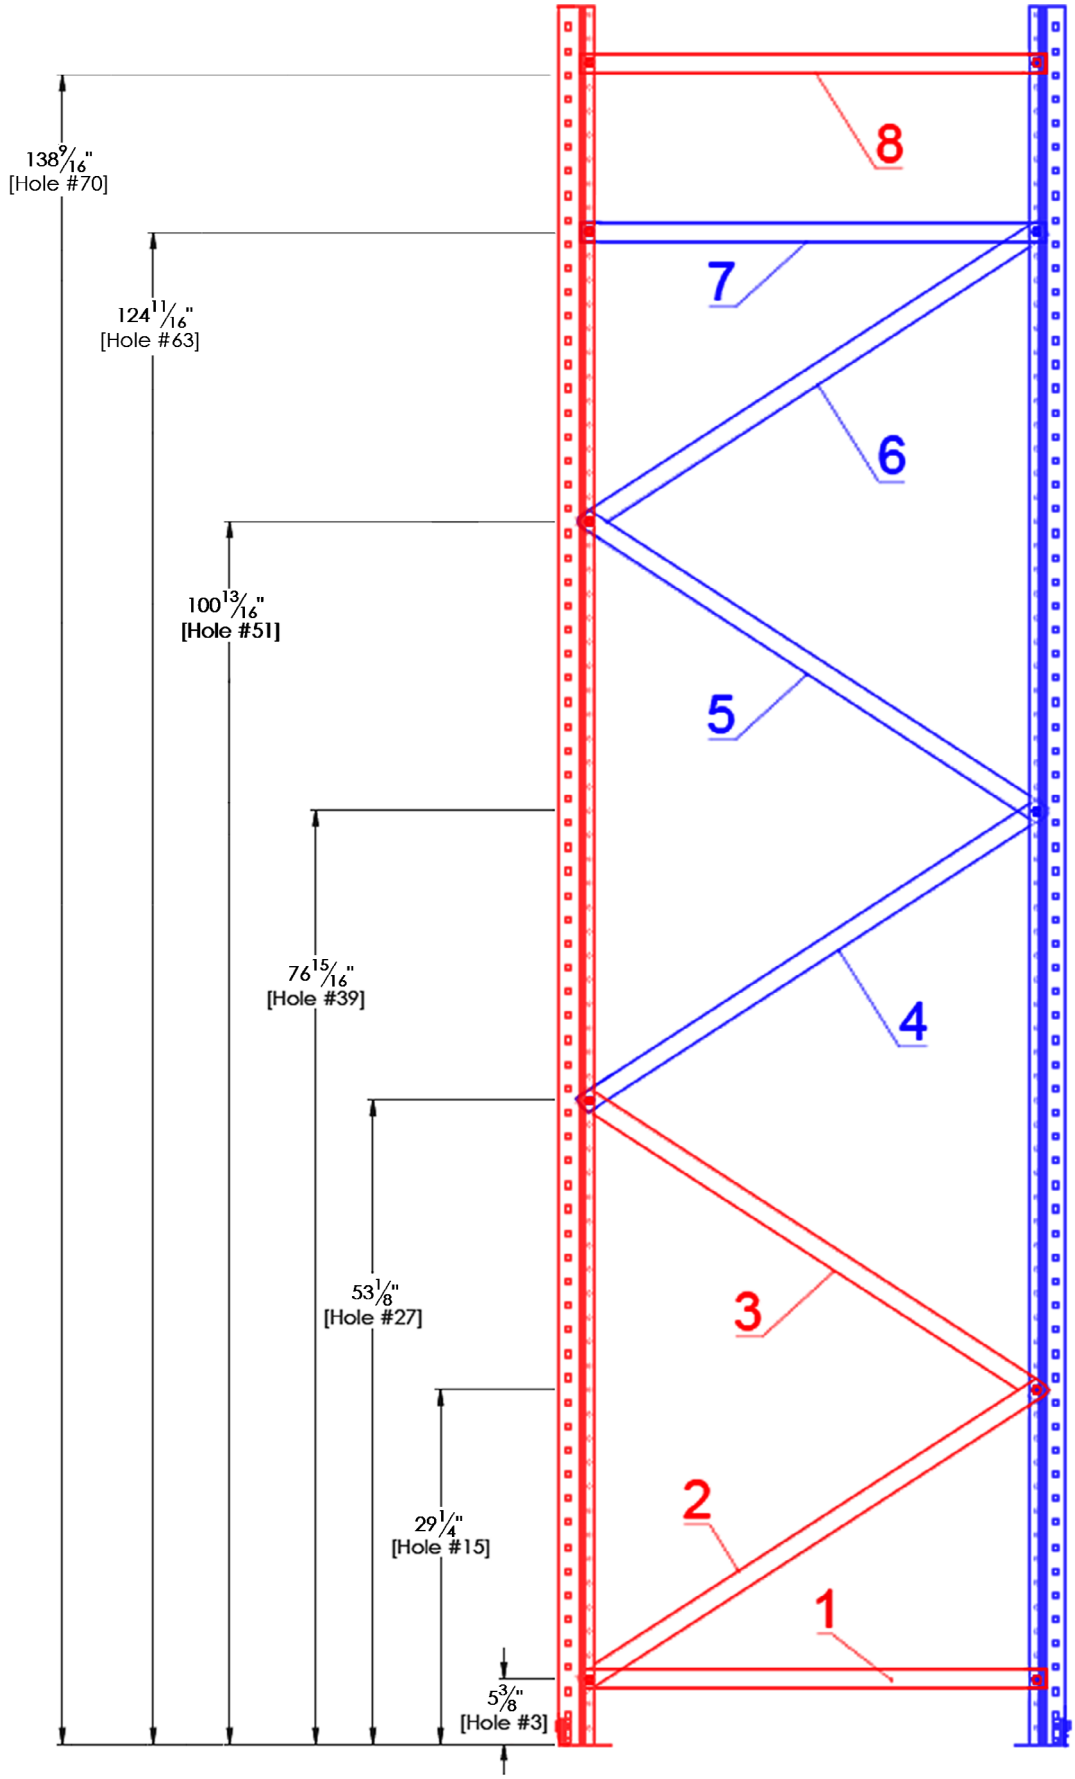

Assembly Diagram

Model No. 298693
Pallet Rack Upright Frame 48"D x 144"H

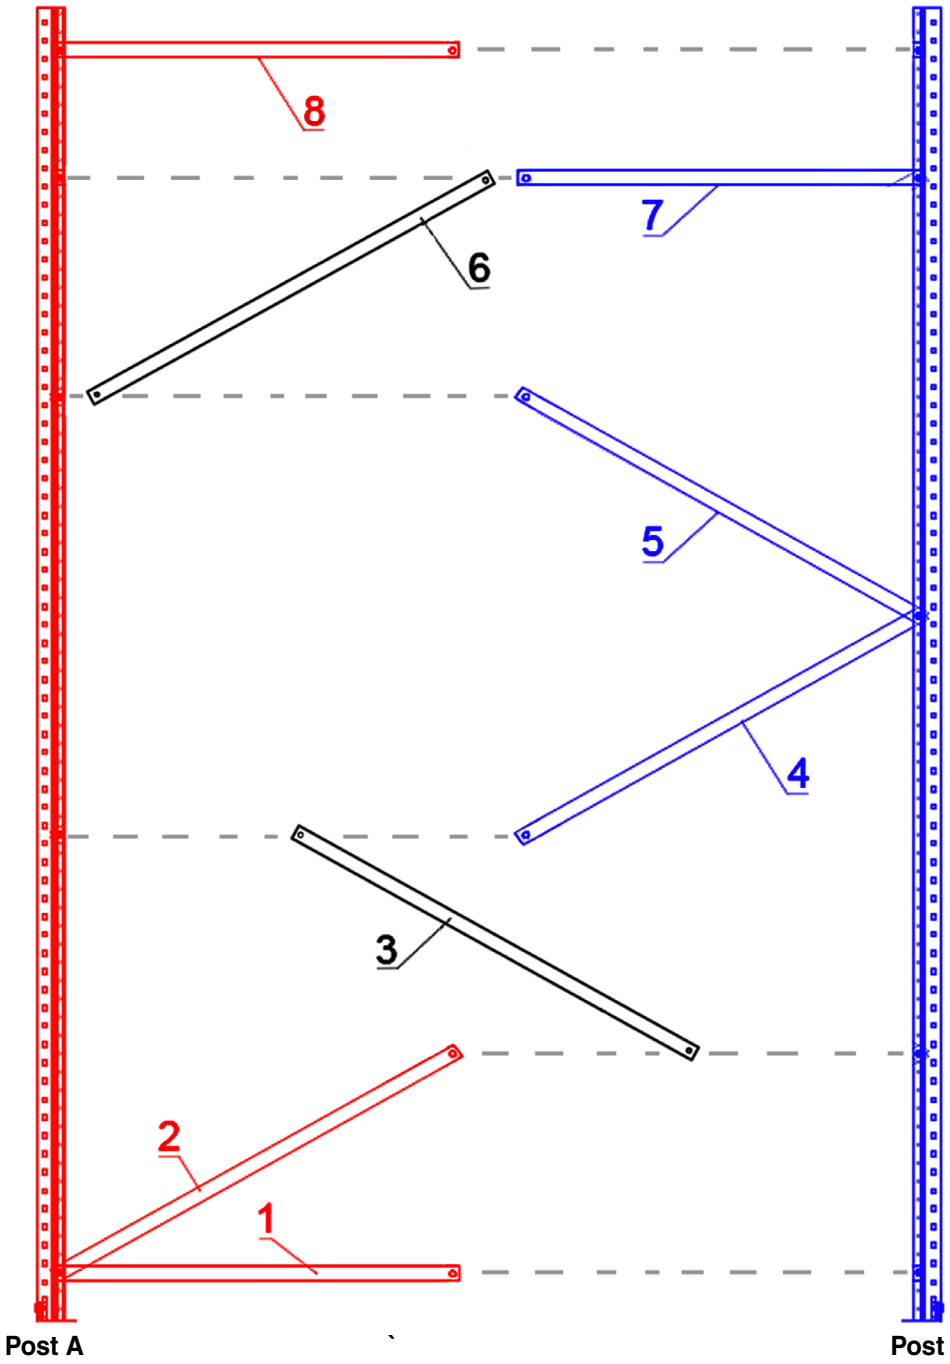

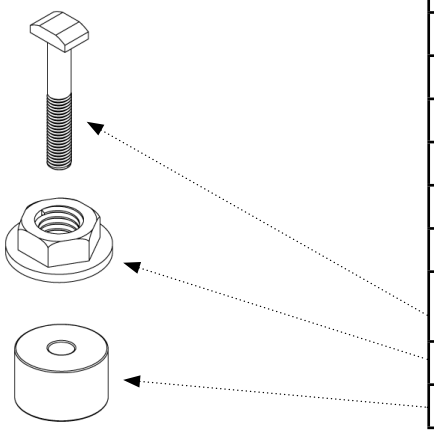


PART NAME	QTY (total)	BREAKDOWN
Footplate	2	
Footplate Hex Bolt [M10 x 1.5, 20mm]	4	
Washer Plate	2	
144" Post	2	
Diagonal Brace for 48" Frame	5	3 attached, 2 loose
Horizontal Brace for 48" Frame	3	3 attached
Shoulder T-Bolt [M10 x 1.5, 65mm] 800 MPa Tensile Strength	10	4 attached, 6 loose
Flanged Nut [M10 x 1.5]	10	4 attached, 6 loose
Rubber Bushing	4	1 attached, 3 loose

Note: Loose refers to unattached components


Assembly Diagram


Model No. 298693
Pallet Rack Upright Frame 48"D x 144"H

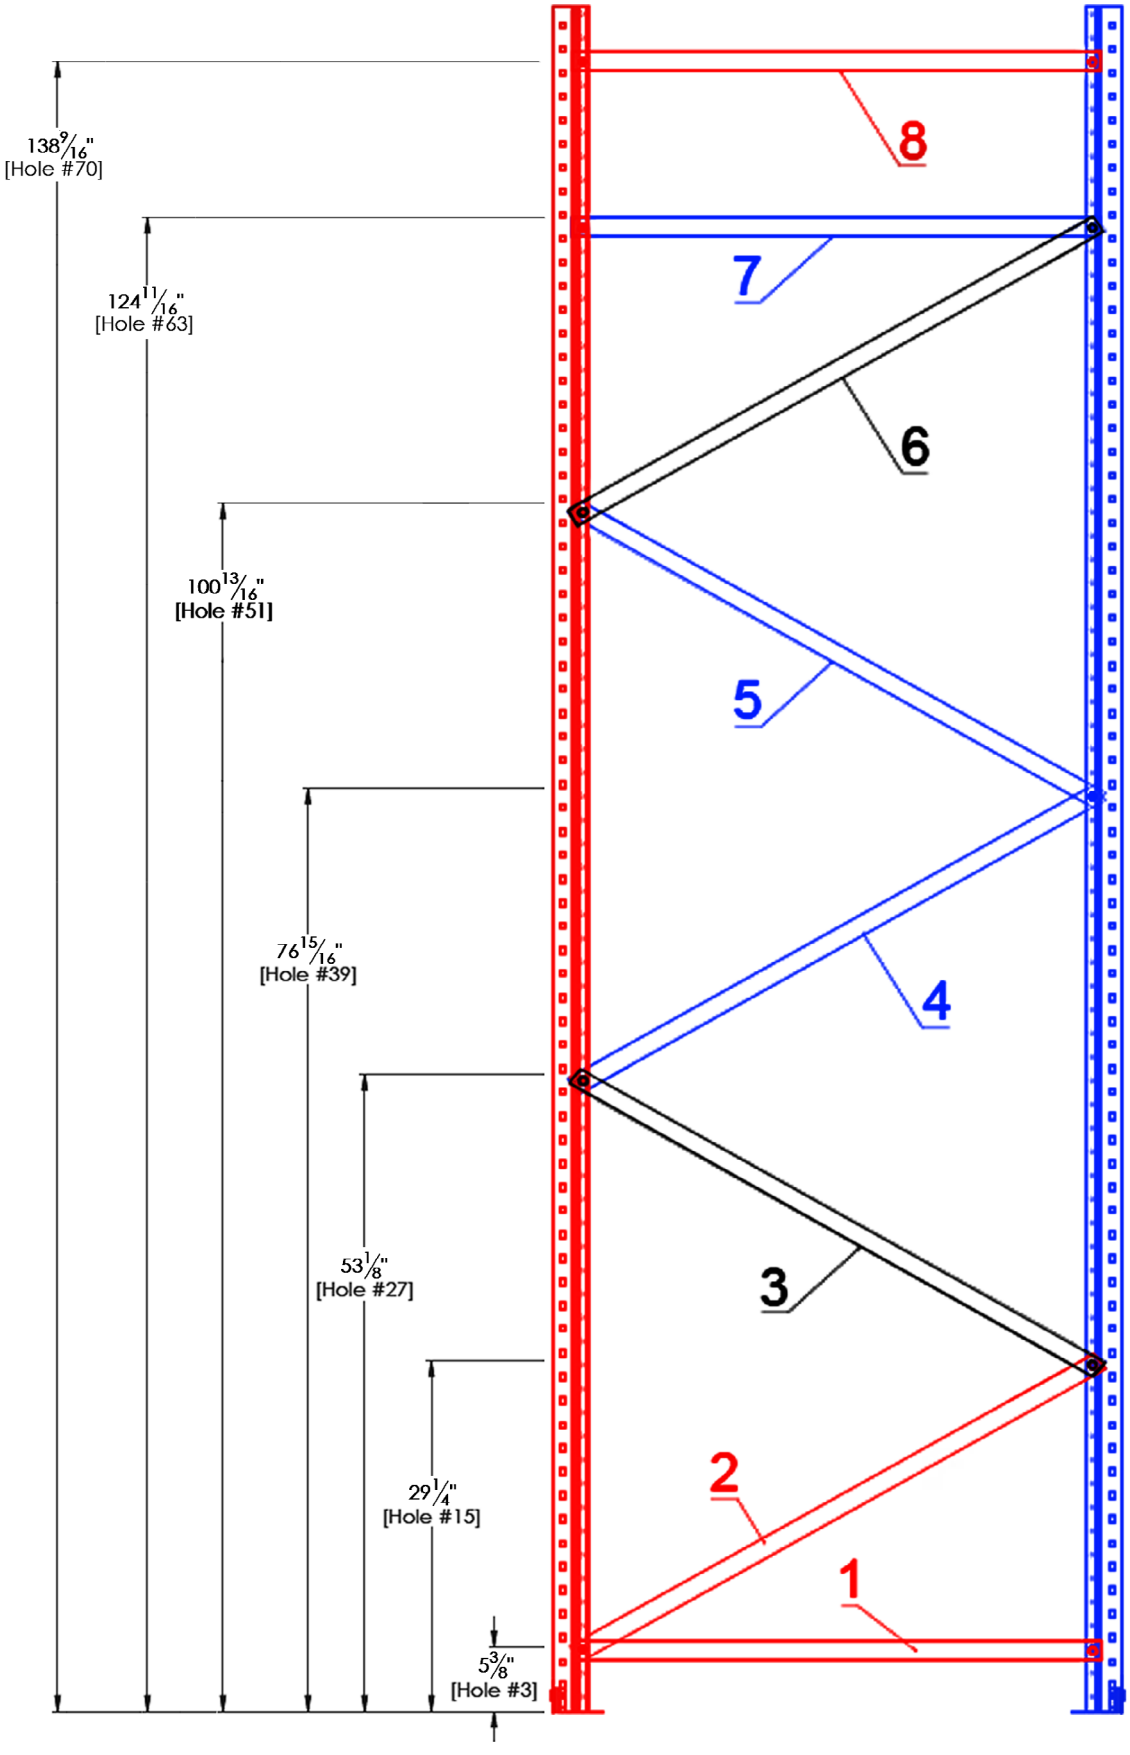

Assembly Diagram

Model No. 298694
Pallet Rack Upright Frame 42"D x 192"H

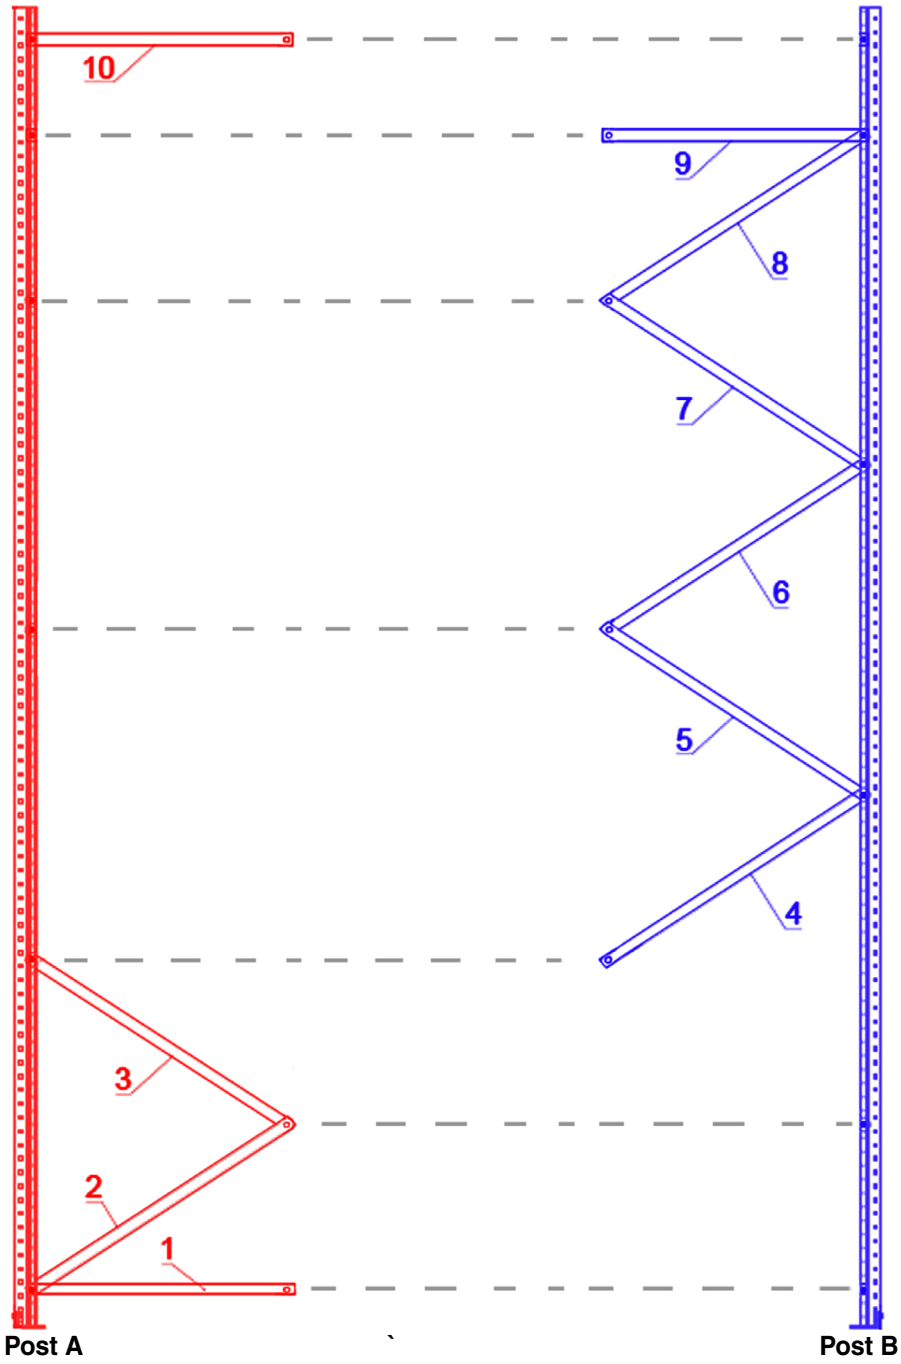

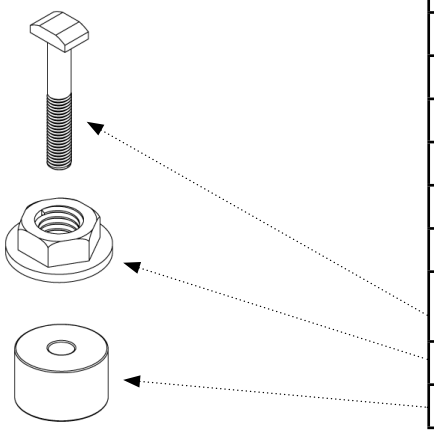


PART NAME	QTY (total)	BREAKDOWN
Footplate	2	
Footplate Hex Bolt [M10 x 1.5, 20mm]	4	
Washer Plate	2	
144" Post	2	
Diagonal Brace for 48" Frame	7	7 attached
Horizontal Brace for 48" Frame	3	3 attached
Shoulder T-Bolt [M10 x 1.5, 65mm] 800 MPa Tensile Strength	12	6 attached, 6 loose
Flanged Nut [M10 x 1.5]	12	6 attached, 6 loose
Rubber Bushing	4	1 attached, 3 loose

Note: Loose refers to unattached components

Assembly Diagram

Model No. 298694
Pallet Rack Upright Frame 42"D x 192"H

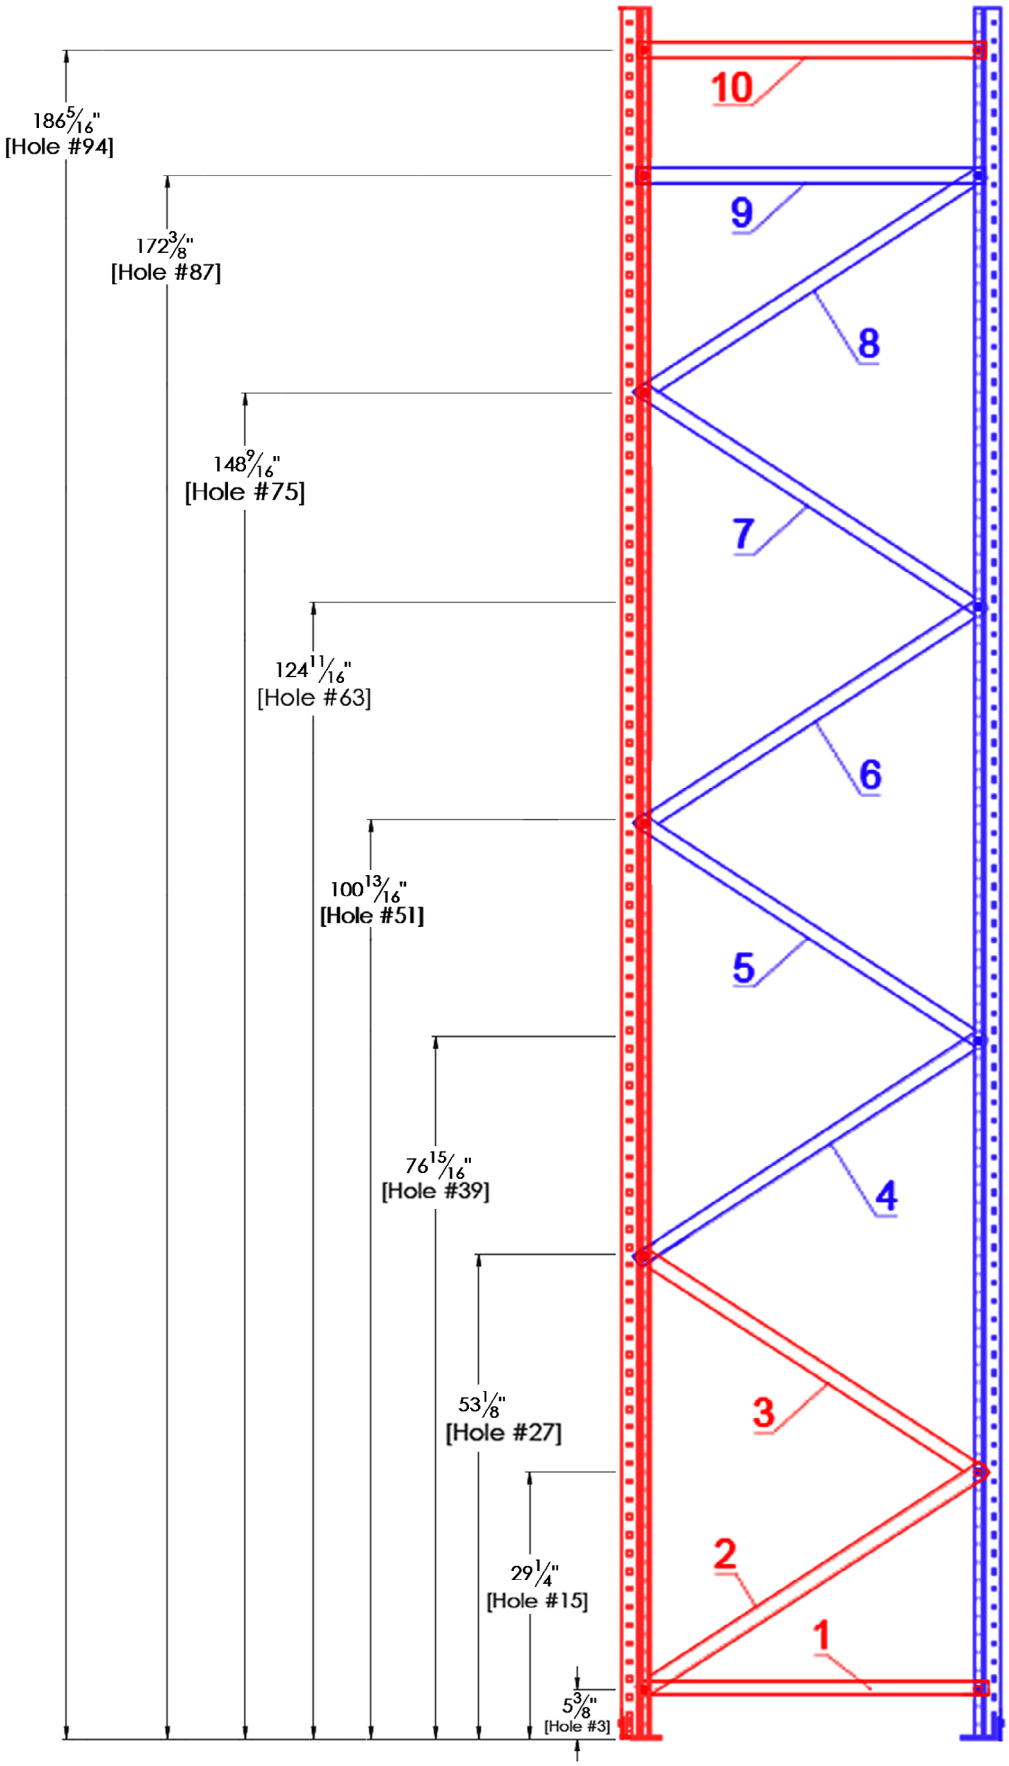



We can supply that.®

Over 1,000,000 products. Industrial strength service.

We can supply that.

REGISTER ONLINE AT
http://www.globalindustrial.com/wr or http://www.globalindustrial.ca/wr
Global Limited 2 Year Warranty

1. LIMITED WARRANTY

Global Equipment Company Inc. (DBA Global Industrial) ("Global") hereby warrants to you, the original purchaser and end user ("you" or "your"), that the products that you purchased which accompany this Limited Warranty ("Products") shall be free from defects in materials and workmanship under normal use consistent with the accompanying documentation for 2 years commencing upon the date of purchase (the "Warranty Period").

Global will repair or replace any Product determined to be defective and which has been returned, as set forth in section 3 herein, to Global. A Product may be replaced with a new or used product and/or current or prior revision. Where Global determines in its sole judgment that repair or replacement of such Product is not reasonable, Global will keep the non-conforming Product and refund to you the amount you paid for such Product. Returned Products shall be subject to the balance of the Warranty Period otherwise applicable. Any reconditioned parts used by Global shall be subject to all the same provisions as otherwise applicable to new parts.

THE FOREGOING DESCRIBES THE SOLE LIABILITY OF GLOBAL, AND YOUR SOLE REMEDY, FOR ANY BREACH OF WARRANTY. IF YOU DO NOT AGREE WITH THE TERMS OF THIS LIMITED WARRANTY, YOU MUST RETURN THE PRODUCTS UNUSED AND IN THEIR ORIGINAL PACKAGING WITHIN THREE (3) DAYS AND YOUR PURCHASE PRICE WILL BE REFUNDED.

2. WARRANTY EXCLUSIONS AND LIMITATION OF LIABILITY

This Limited Warranty does not cover: (i) defects or damages resulting from acts of God, casualty, accident, misuse or abuse, overloading, exceeding the recommended weight capacity, neglect, alterations, modification, service or repair by other than Global or its independent third party service providers, including without limitation by you; (ii) improper assembly or installation or deinstallation, operation or maintenance, improper connections with peripherals or other causes not arising out of defects in the materials or workmanship of Products; (iii) any Product for which the warranty sticker has been removed, modified or defaced; (iv) shipping containers, batteries, cabinets, media, software or accessories; (v) normal wear and tear; (vi) damage to or loss of repaired or replaced Products during shipping by Global except when such damage or loss is caused by poor or inadequate packaging by Global; or (vii) Products purchased outside the United States or Canada.

UNDER NO CIRCUMSTANCES WILL GLOBAL BE LIABLE FOR ANY LOSS OF USE, INTERRUPTION OF BUSINESS OR ANY INDIRECT, SPECIAL, INCIDENTAL, PUNITIVE OR CONSEQUENTIAL DAMAGES OF ANY KIND (INCLUDING LOST PROFITS) REGARDLESS OF THE FORM OF ACTION WHETHER IN CONTRACT, TORT (INCLUDING NEGLIGENCE), STRICT PRODUCT LIABILITY OR OTHERWISE, EVEN IF GLOBAL HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. IN NO EVENT SHALL THE TOTAL LIABILITY OF GLOBAL HEREUNDER EXCEED THE GREATER OF $50 OR THE AMOUNT YOU ACTUALLY PAID FOR THE PRODUCT GIVING RISE TO SUCH LIABILITY, REGARDLESS OF THE CAUSE OF ACTION, IN CONTRACT, TORT, STRICT LIABILITY OR OTHERWISE. NOT ALL JURISDICTIONS ALLOW SUCH LIMITATIONS OF DAMAGES SO THE FOREGOING LIMITATIONS MAY NOT APPLY TO YOU.

3. PROCEDURE FOR WARRANTY SERVICE

Prior to returning any Products to Global for warranty service, you must first contact Global, by telephone at (800) 645-2986 (US) or (888) 645-0878 (Canada) to confirm that such Products are covered by this Limited Warranty. If such Products are so covered, you shall obtain from Global a return materials authorization ("RMA") number and shipping instructions prior to any shipment of such Products to Global, and you must include such RMA number with any corresponding Product shipment, along with a true and correct copy of the original receipt showing the date of Product purchase by you, and a detailed, written description of any associated Product problems.

Please note that you are responsible for all shipping charges incurred in returning an item for exchange or repair. Global shall pay for return shipping of repaired and/or replaced Products to addresses within the United States and Canada only, and return shipments to all other addresses outside of the United States or Canada is your responsibility. If Global determines that any Product is not covered by this Limited Warranty, you must pay all parts, labor charges and return shipping for such Product.

4. WARRANTY DISCLAIMER AND LIMITATIONS

EXCEPT AND TO THE EXTENT EXPRESSLY SET FORTH ABOVE THERE ARE NO WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO, ANY WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE AND GLOBAL EXPRESSLY DISCLAIMS ALL WARRANTIES NOT STATED HEREIN.

EXCEPT AND TO THE EXTENT EXPRESSLY SET FORTH ABOVE, THE PRODUCTS ARE PROVIDED ON AN "AS IS" BASIS, AND GLOBAL MAKES NO ADDITIONAL WARRANTIES, EXPRESS, IMPLIED, ARISING FROM COURSE OF DEALING OR USAGE OF TRADE, OR STATUTORY, AS TO THE PRODUCTS OR ANY MATTER WHATSOEVER. THIS IS A LIMITED WARRANTY AND IS THE ONLY WARRANTY MADE BY GLOBAL. THE AGENTS, EMPLOYEES, DISTRIBUTORS, AND DEALERS OF GLOBAL ARE NOT AUTHORIZED TO MAKE MODIFICATIONS TO THIS LIMITED WARRANTY, OR MAKE ADDITIONAL WARRANTIES BINDING ON GLOBAL. ACCORDINGLY, ADDITIONAL STATEMENTS SUCH AS DEALER ADVERTISING OR PRESENTATION, WHETHER ORAL OR WRITTEN, DO NOT CONSTITUTE WARRANTIES BY GLOBAL AND SHOULD NOT BE RELIED UPON. GLOBAL DOES NOT WARRANT THAT THE PRODUCTS WILL OPERATE WITHOUT FAILURE, OR THAT THE PRODUCTS WILL MEET YOUR NEEDS OR EXPECTATIONS. NOT ALL JURISDICTIONS ALLOW SUCH WARRANTY LIMITATIONS SO THE FOREGOING LIMITATIONS MAY NOT APPLY TO YOU.

5. CHOICE OF LAW AND JURISDICTION

FOR PURCHASES WITHIN THE US - This Limited Warranty shall be subject solely to the laws of the State of New York as applied to contracts entered into in the State of New York between New York residents. Any dispute arising hereunder shall be subject to the sole jurisdiction of the State and Federal Courts located in Nassau County, New York. The parties hereby consent to the personal jurisdiction of such courts.

FOR PURCHASES WITHIN CANADA - This Limited Warranty shall be subject solely to the laws of the Province of Ontario. Any dispute arising hereunder shall be subject to the sole jurisdiction of Ontario, Canada. The parties hereby consent to the personal jurisdiction of such courts.

REGISTRARSE EN LÍNEA EN
http://www.globalindustrial.com/wr or http://www.globalindustrial.ca/wr
Garantía global limitada de 2 años

1. GARANTÍA LIMITADA

Global Equipment Company Inc. (DBA Global Industrial) ("Global") por la presente garantiza al comprador original y usuario final ("usted" o "su"), que los productos adquiridos por usted que incluyen esta Garantía limitada ("Productos ") se considerarán libres de defectos respecto de sus materiales y mano de obra en condiciones normales de uso de conformidad con la documentación adjunta durante 2 años a partir de la fecha de compra (el" Plazo de duración de la garantía ").

Global reparará o reemplazará todo producto calificado como defectuoso y que hubiere sido devuelto a Global, según lo establecido en la sección 3 de la presente garantía. Un Producto puede ser reemplazado por un producto nuevo o usado y/o quedar sujeto a una revisión actual o previa. En los casos que Global establezca, a su exclusivo criterio, la inviabilidad de la reparación o el reemplazo de dicho Producto, Global conservará el Producto no conforme y le reembolsará a usted el monto abonado por dicho Producto. De ser aplicable, los Productos devueltos estarán sujetos al tiempo restante del "Plazo de Duración de la Garantía. Todas las piezas reacondicionadas utilizadas por Global estarán también sujetas a dichas disposiciones mencionadas anteriormente, aplicables de igual modo a las piezas nuevas, si correspondiere.

LA CLÁUSULA MENCIONADA ANTERIORMENTE DESCRIBE LA RESPONSABILIDAD EXCLUSIVA DE GLOBAL, Y SU ÚNICO RECURSO, POR CUALQUIER INCUMPLIMIENTO DE LA PRESENTE GARANTÍA. SI USTED NO ESTÁ DE ACUERDO CON LOS TÉRMINOS Y CONDICIONES DE LA PRESENTE GARANTÍA LIMITADA, USTED DEBERÁ DEVOLVER LOS PRODUCTOS SIN HABERLOS UTILIZADO Y EN SU EMBALAJE ORIGINAL EN EL PLAZO DE TRES (3) DÍAS Y USTED RECIBIRÁ EL REEMBOLSO DEL DINERO DE SU COMPRA.

2. EXCLUSIONES DE LA PRESENTE GARANTÍA Y LIMITACIÓN DE RESPONSABILIDAD

La presente Garantía limitada no cubre los siguientes supuestos: (i) defectos o daños causados por fuerza mayor, accidentes, uso inapropiado o excesivo, sobrecarga que supere la capacidad del peso recomendado, negligencia, alteraciones, modificación, reparación o mantenimiento realizados por proveedores técnicos independientes o ajenos a Global, entre los que se incluyen las siguientes acciones realizadas por usted ; (ii) ensamblaje o instalación o desinstalación inadecuados, operación o mantenimiento, conexiones periféricas, funcionamiento o mantenimiento incorrectos, o cualquier otra causa que no surja de un defecto en los materiales o en la mano de obra del Producto; (iii) todo Producto que no contenga el sticker de garantía o cuando dicho sticker haya sido retirado, modificado o esté dañado; (iv) contenedores de envío, baterías, gabinetes, medios, software o accesorios; (v) desgaste normal por el paso del tiempo; (vi) daño o pérdida de los Productos reparados o reemplazados durante el envío por parte de Global en los casos en que dicho daño o pérdida se hubieren producido por un mal o inadecuado embalaje por parte de Global; o (vii) Productos adquiridos fuera de los Estados Unidos o Canadá.

EN NINGÚN CASO GLOBAL SERÁ RESPONSABLE POR LA PÉRDIDA DE USO, INTERRUPCIÓN DE NEGOCIOS O CUALQUIER TIPO DE DAÑO INDIRECTO, ESPECIAL, INCIDENTAL, PUNITIVO O CONSECUENTE (INCLUIDA LA PÉRDIDA DE GANANCIAS), INDEPENDIENTEMENTE DEL TIPO DE ACCIÓN LEGAL, YA SEA EMANADOS DE UN CONTRATO, DE UN ACTO ILÍCITO (INCLUIDA LA CULPA), RESPONSABILIDAD OBJETIVA SOBRE EL PRODUCTO U OTROS. LO ANTERIOR SE APLICARÁ AÚN EN LOS CASOS EN QUE GLOBAL HAYA SIDO ADVERTIDA SOBRE LA POSIBILIDAD DE DICHOS DAÑOS. EN NINGÚN CASO, EN VIRTUD DE LA PRESENTE GARANTÍA, EL MONTO INDEMNIZATORIO POR RESPONSABILIDAD DE GLOBAL PODRÁ EXCEDER LOS USD 50.00 O LA SUMA QUE USTED HAYA PAGADO POR EL PRODUCTO OBJETO DE DICHA RESPONSABILIDAD, INDEPENDIENTEMENTE DE LA CAUSAL DE LA ACCIÓN LEGAL, POR EL CONTRATO, ACTO ILÍCITO, RESPONSABILIDAD OBJETIVA U OTRAS. DADO QUE NO EN TODAS LAS JURISDICCIONES RIGEN DICHAS LIMITACIONES EN LAS INDEMNIZACIONES, LAS LIMITACIONES ANTERIORES PUEDEN NO SER APLICABLES EN SU CASO.

3. PROCEDIMIENTO PARA EL SERVICIO DE GARANTÍA

Antes de devolver un Producto a Global para obtener el servicio de garantía, Usted debe contactar a Global, por teléfono al (800) 645-2986 (Estados Unidos) ó 888) 645-0878 (Canadá) a los fines de confirmar que dicho Producto esté contemplado en la presente Garantía Limitada. Si dicho Producto estuviera cubierto por la Garantía, usted recibirá un número de autorización de devolución de materiales de Global (en adelante, "ADM") y las instrucciones de envío previas al envío del Producto mencionado a Global. Usted deberá incluir su número de ADM con el envío del Producto correspondiente, junto con una copia fiel del recibo original que incluya la fecha de la compra del Producto realizada por usted.

Por favor tenga en cuenta que usted será responsable de todos los gastos de envío resultantes de la devolución de un artículo para su reemplazo o reparación. Global deberá abonar el envío de devolución del Producto reparado o reemplazado a direcciones dentro de Estados Unidos y Canadá solamente. Los gastos de envío a todas las demás direcciones fuera de Estados Unidos y Canadá quedan bajo su responsabilidad. En el caso de que Global estableciera que un Producto no se encuentra contemplado en la presente Garantía Limitada, usted deberá pagar todos los repuestos, la mano de obra y los gastos de envío por la devolución de dicho Producto

4. EXCLUSIONES Y LIMITACIONES DE LA GARANTÍA

SALVO EN LA MEDIDA EXPRESAMENTE ESTABLECIDA ANTERIORMENTE, NO EXISTEN DENTRO DE LA PRESENTE GARANTÍAS EXPRESAS O IMPLÍCITAS, INCLUIDAS, AUNQUE SIN LIMITACIÓN, GARANTÍAS IMPLÍCITAS DE COMERCIABILIDAD O IDONEIDAD PARA UN PROPÓSITO DETERMINADO Y GLOBAL RECHAZA CUALQUIER TIPO DE GARANTÍA NO INCLUIDA EN LA PRESENTE.

SALVO EN LA MEDIDA EXPRESAMENTE ESTABLECIDA ANTERIORMENTE, LOS PRODUCTOS SON ENTREGADOS EN EL "ESTADO EN QUE SE ENCUENTRAN". GLOBAL NO OFRECE GARANTÍA ALGUNA, NI EXPRESA NI IMPLÍCITA, QUE PUDIERA SURGIR DURANTE EL TRANSCURSO DE UNA NEGOCIACIÓN O EL USO O QUE SEAN ESTABLECIDAS POR LEY, EN LO QUE RESPECTA A LOS PRODUCTOS O A CUALQUIER OTRO ASUNTO. LA PRESENTE CONSTITUYE UNA GARANTÍA LIMITADA Y ES LA ÚNICA GARANTÍA OTORGADA POR GLOBAL. LOS MANDATARIOS, EMPLEADOS, DISTRIBUIDORES Y COMERCIANTES DE GLOBAL NO PODRÁN REALIZAR MODIFICACIONES A LA PRESENTE GARANTÍA LIMITADA NI PRESTAR GARANTÍAS ADICIONALES QUE OBLIGUEN LEGALMENTE A GLOBAL. EN CONSECUENCIA, TODA DECLARACIÓN ADICIONAL, TALES COMO PUBLICIDADES O PRESENTACIONES DEL COMERCIANTE, YA SEAN ORALES O ESCRITAS, NO CONSTITUIRÁN GARANTÍAS OTORGADAS POR GLOBAL Y NO DEBERÁN CONSIDERARSE VÁLIDAS. GLOBAL NO GARANTIZA QUE LOS PRODUCTOS FUNCIONEN SIN FALLAS O QUE SATISFAGAN SUS NECESIDADES O EXPECTATIVAS. DADO QUE NO EN TODAS LAS JURISDICCIONES RIGEN DICHAS LIMITACIONES EN LAS INDEMNIZACIONES, LAS LIMITACIONES DE LA CLÁUSULA PUEDEN NO SER DE APLICACIÓN EN SU CASO.

5. ELECCIÓN DE LA LEGISLACIÓN Y JURISDICCIÓN

PARA COMPRAS REALIZADAS DENTRO DE LOS ESTADOS UNIDOS, la presente Garantía Limitada estará sujeta únicamente a las leyes del Estado de Nueva York, según se aplica a los contratos celebrados en el Estado de Nueva York entre residentes del Estado de Nueva York. Toda controversia que surja en virtud de la presente Garantía quedará sujeta a la sola jurisdicción de los Tribunales Estatales y Federales ubicados en el Condado de Nassau, Nueva York.

Por medio de la presente Garantía, las partes acuerdan someterse a la jurisdicción personal de dichos tribunales. PARA COMPRAS REALIZADAS EN CANADÁ - La presente Garantía Limitada quedará sujeta únicamente a las leyes de la Provincia de Ontario. Toda controversia que surja en virtud de la presente Garantía quedará sujeta a la sola jurisdicción de Ontario, Canadá. Por medio de la presente Garantía, las partes acuerdan someterse a la jurisdicción personal de dichos tribunales.

INSCRIVEZ-VOUS EN LIGNE AU
http://www.globalindustrial.com/wr or http://www.globalindustrial.ca/wr
Garantie globale limitée de 2 ans

1. GARANTIE LIMITÉE

Global Equipment Company Inc. (DBA Global Industrial) («Global») vous garantit, l'acheteur initial et à l'utilisateur («vous» ou «votre»), que les produits que vous avez achetés et qui accompagnent cette garantie limitée («produits») sont exempts de tout défaut de matériaux et fabrication dans des conditions normales d'utilisation conformément à la documentation suivant pour une période deux ans débutant à la date d'achat (la «période de garantie»).

Global réparera ou remplacera tout produit jugé défectueux et qui a été retourné, tel que stipulé à la section 3 ci-dessous, à Global. Un produit peut être remplacé par un produit neuf ou usagé et/ou par une révision actuelle ou antérieure. Lorsque global détermine à son seul jugement que la réparation ou le remplacement de ce produit n'est pas raisonnable, Global gardera le produit non conforme et vous remboursera le montant que vous avez payé pour ce produit. Les produits retournés sont soumis au reste de la période de garantie applicable par ailleurs. Toutes les pièces reconditionnées utilisées par Global sont soumises à toutes les mêmes dispositions que celles qui s'appliquent autrement aux nouvelles pièces.

CE QUI PRÉCÈDE DÉCRIT LA RESPONSABILITÉ EXCLUSIVE DE GLOBAL, ET VOTRE SEUL RECOURS, POUR TOUT MANQUEMENT À LA GARANTIE. SI VOUS N'ÊTES PAS D'ACCORD AVEC LES TERMES DE CETTE GARANTIE LIMITÉE, VOUS DEVEZ RETOURNER LES PRODUITS INUTILISÉS ET DANS LEUR EMBALLAGE D'ORIGINE DANS LES TROIS (3) JOURS ET VOTRE PRIX D'ACHAT SERA REMBOURSÉ.

2. EXCLUSIONS DE GARANTIE ET LIMITATION DE RESPONSABILITÉ

La présente garantie limitée ne couvre pas: (i) les défauts ou dommages résultant d'actes de Dieu, d'accident, de mauvais usage ou d'abus, de surcharge, du dépassement de la capacité de poids recommandée, de négligence, des altérations, modification, service ou réparation par autre que Global ou ses fournisseurs de services tiers indépendants, y compris sans vos limites; (ii) d'un montage ou d'une installation ou d'une désinstallation, d'un fonctionnement ou d'un entretien incorrects, des connexions incorrectes avec des périphériques ou d'autres causes ne résultant pas de défauts dans les matériaux ou la fabrication de produits; (iii) tout produit pour lequel la vignette de garantie a été enlevée, modifiée ou défigurée; (iv) des conteneurs, piles, armoires, supports, logiciels ou accessoires d'expédition; (v) d'une usure normale; (VI) des dommages ou la perte de produits réparés ou remplacés pendant l'expédition par Global, sauf si ces dommages ou pertes sont causés par des emballages pauvres ou inadéquats par Global; ou (vii) des produits achetés en dehors des États-Unis ou du Canada.

GLOBAL NE POURRA EN AUCUN CAS ÊTRE TENU RESPONSABLE DE TOUTE PERTE D'UTILISATION, D'INTERRUPTION D'ACTIVITÉ OU DE TOUT DOMMAGE INDIRECT, SPÉCIAL, ACCIDENTEL, PUNITIF OU CONSÉCUTIF DE QUELQUE NATURE QUE CE SOIT (Y COMPRIS LES PERTES DE PROFITS), QUELLE QUE SOIT LA FORME D'ACTION CONTRACTUELLE, DÉLICTUELLE (Y COMPRIS LA NÉGLIGENCE), LA RESPONSABILITÉ STRICTE DU PRODUIT OU AUTRE, MÊME SI GLOBAL A ÉTÉ AVISÉ DE LA POSSIBILITÉ DE TELS DOMMAGES. EN AUCUN CAS LA RESPONSABILITÉ ENTIÈRE CI-DESSOUS DE GLOBAL NE DÉPASSERA CE QUI EST PLUS ÉLEVÉ ENTRE $50 OU LE MONTANT QUE VOUS AVEZ EFFECTIVEMENT PAYÉ POUR LE PRODUIT DONNANT LIEU À CETTE RESPONSABILITÉ, INDÉPENDAMMENT DE LA CAUSE D'ACTION, DANS LE CONTRAT, LE DÉLIT, LA RESPONSABILITÉ STRICTE OU AUTREMENT. TOUTES LES JURIDICTIONS N'AUTORISENT PAS CES LIMITATIONS DE DOMMAGES, DE SORTE QUE LES LIMITATIONS QUI PRÉCÈDENT PEUVENT NE PAS S'APPLIQUER À VOUS.

3. PROCÉDURE DE SERVICE SOUS GARANTIE

Avant de retourner tous les produits à Global pour le service de garantie, vous devez d'abord contacter Global, par téléphone au (800) 645-2986 (US) ou (888) 645-0878 (Canada) pour confirmer que ces produits sont couverts par cette garantie limitée. Si ces produits sont ainsi couverts, vous obtiendrez de Global un numéro d'autorisation de retour de matériel («ARM») et des instructions d'expédition avant toute expédition de ces produits à global et vous devez inclure ce numéro ARM avec n'importe quelle expédition correspondante de produit, ainsi qu'une copie exacte et correcte du reçu original indiquant la date d'achat de l'achat de votre produit, ainsi qu'une description détaillée et écrite de tout problème de produit associé.

Veuillez noter que vous êtes responsable de tous les frais d'expédition engagés pour retourner un article pour un échange ou une réparation. Global doit payer pour l'expédition de retour des produits réparés et/ou remplacés aux adresses aux États-Unis et au Canada seulement ainsi que pour les expéditions de retour à toutes les autres adresses à l'extérieur des États-Unis ou du Canada en revient de votre responsabilité. Si Global détermine que n'importe quel produit n'est pas couvert par cette garantie limitée, vous devez payer toutes les pièces, frais de main-d'œuvre et expédition de retour pour ce produit.

4. DÉNI DE GARANTIE ET LIMITATIONS

SAUF ET DANS LA MESURE EXPRESSÉMENT ÉNONCÉE CI-DESSUS IL N'Y A AUCUNE GARANTIE, EXPRESSE OU IMPLICITE, Y COMPRIS MAIS SANS S'Y LIMITER À TOUTE GARANTIE DE QUALITÉ MARCHANDE OU D'ADAPTATION À UN USAGE PARTICULIER ET GLOBAL DÉCLINE EXPRESSÉMENT TOUTES LES GARANTIES NON MENTIONNÉES DANS LE PRÉSENT DOCUMENT.

SAUF ET DANS LA MESURE EXPRESSÉMENT ÉNONCÉE CI-DESSUS, LES PRODUITS SONT FOURNIS SUR UNE BASE «TEL QUEL» ET GLOBAL NE FAIT AUCUNE GARANTIE ADDITIONNELLE, EXPRESSE, IMPLICITE, DÉCOULANT DE COURS DE TRAITEMENT OU D'UTILISATION DU COMMERCE OU STATUTAIRE, QUANT AUX PRODUITS OU QUELQUE MATIÈRE QUE CE SOIT. IL S'AGIT D'UNE GARANTIE LIMITÉE ET EST LA SEULE GARANTIE FAITE PAR GLOBAL. LES AGENTS, LES EMPLOYÉS, LES DISTRIBUTEURS ET LES CONCESSIONNAIRES DE GLOBAL NE SONT PAS AUTORISÉS À APPORTER DES MODIFICATIONS À CETTE GARANTIE LIMITÉE, OU À FAIRE DES GARANTIES SUPPLÉMENTAIRES CONTRAIGNANTES POUR GLOBAL. PAR CONSÉQUENT, DES DÉCLARATIONS SUPPLÉMENTAIRES TELLES QUE LA PUBLICITÉ OU LA PRÉSENTATION DES CONCESSIONNAIRES, QU'ELLES SOIENT ORALES OU ÉCRITES, NE CONSTITUENT PAS DES GARANTIES GLOBALES ET NE DEVRAIENT PAS ÊTRE INVOQUÉES. GLOBAL NE GARANTIT PAS QUE LES PRODUITS FONCTIONNERONT SANS DÉFAILLANCE, OU QUE LES PRODUITS RÉPONDRONT À VOS BESOINS OU À VOS ATTENTES. PAS TOUTES LES JURIDICTIONS NE PERMETTENT DE TELLES LIMITATIONS DE GARANTIE AINSI LES LIMITATIONS CI-DESSUS PEUVENT NE PAS S'APPLIQUER À VOUS.

5. CHOIX DE LA LOI ET DE LA JURIDICTION

POUR LES ACHATS AUX ÉTATS-UNIS : cette garantie limitée est soumise aux seules lois de l'état de New York, telles qu'appliquées aux contrats conclus dans l'état de New York entre les résidents de New York. Tout litige découlant des présentes est soumis à la seule compétence de l'État et des tribunaux fédéraux situés dans le comté de Nassau, New York. Les parties consentent par la présente à la compétence personnelle de ces tribunaux.

POUR LES ACHATS AU CANADA : cette garantie limitée est assujettie uniquement aux lois de la province de l'Ontario. Tout différend découlant des présentes est assujetti à la seule compétence de la province de l'Ontario, au Canada. Les parties consentent par la présente à la compétence personnelle de ces tribunaux


75
GLOBAL INDUSTRIAL
ANNIVERSARY