


SRL-R Device Bracket Assembly and Installation

User Instruction Manual

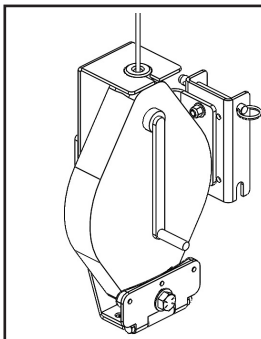

DESCRIPTION:





Allows for mounting the FallTech 3-Way/SRL-R onto the FallTech Confined Space Davit Arm or Tripod.

⚠ WARNING

All manufacturer's instructions, labels and warnings must be read before use and followed at all times for proper use, maintenance and inspection. Please see FallTech user manuals for instructions and requirements; MCS30 for the Davit System, MCS03 for the 3-Way SRL-Rs, MCS01 for the 11' Tripod, and MCS06 for the 8' Tripod.

3-Way/SRL-R Davit Bracket Assembly

1. Remove the bolt and washer from the bracket and fold down the lower flap as shown in Figure 1.
2. Pass the cable of the SRL-R through the notch at the top of the bracket as shown in Figure 2.
3. Align the SRL-R orifice with the circular opening in the bracket and insert it through the bracket as shown in Figure 3.
4. Fold the lower flap up, insert the bolt with washer ensuring it passes through the bracket flap as well as the handle area of the SRL-R as shown in Figure 4. Tighten the bolt using a 15/16" socket or wrench.

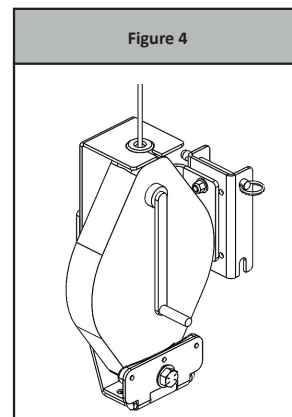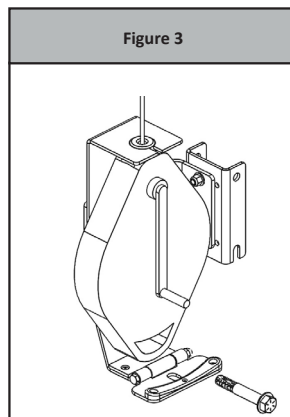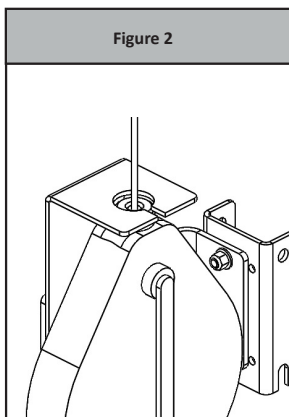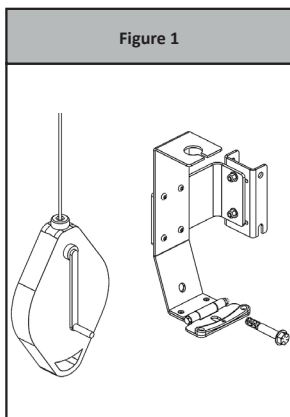

SRL-R Bracket Install onto Davit Device Receiver Bracket

1. Remove the top detent pin from the FallTech Universal Device Receiver Bracket.
2. Place the notch in the SRL-R bracket over the bottom bar of the FallTech Universal Device Receiver Bracket as shown in Figure 4.
3. Rotate the SRL-R bracket to align the upper holes as shown in Figure 5.
4. Insert the provided detent pin ensuring it goes through both sides of the bracket as shown in Figure 6.

