




Hygienic Solutions at Work

Curved Stainless Steel Shower Rod

Code 1145-CRV: Stainless Shower rod, brushed finish, for standard 60" tub.

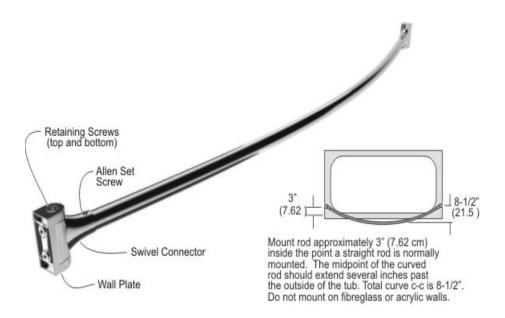

Specifications:

Site location: Provides elegant and practical use of space in a shower curtain enclosure. **Features:** Die cast brushed finish on all hardware components. 1" diameter stainless steel rod in brushed finish.

Installation: Assemble curved shower rod. Hand tighten retaining screws. Do not tighten set screws at this time. Measuring Placement: Hold rod up to desired position, one person at each end, to check height and location. Be sure that rod is level. With a pencil lightly trace the top and bottom of the wall plate. Set rod down. Remove retaining screws. Separate the wall plates from the rod. Leave swivel connectors on the rod. Place wall plates back on the wall at pencil marks. Mark screw holes at 12 and 6 o'clock positions. Set wall plate aside. Read anchor instructions carefully. Drill screw holes as marked. Install 4 anchors unless a hole is on a stud. Mount wall plates, Screw in to anchors. Place rod, with swivel connectors attached and set screw holes facing up into wall plates. Screw in retaining screws. Tighten. Adjust rod. Be sure that each end of rod is into the connector far enough to engage set screws and make solid contact. Tighten set screws with allen wrench.

Helpful Hints: Put a drop of thread fastener such as silicone on each of the set screws and retaining screws to prevent them from working loose. If mounting above the tile line leave enough room to use screw driver on the bottom retaining screws.

Description and specifications applicable on date issued. Frost reserves the right to make improvements or changes without notice.

