




Expedition Truck Cap Molle Panel Instructions

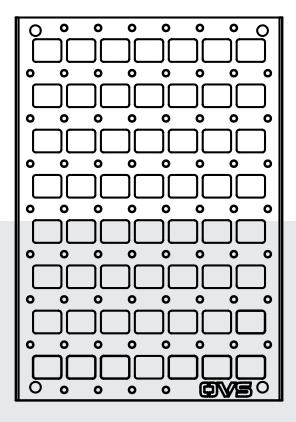

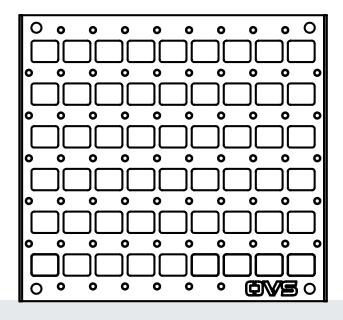

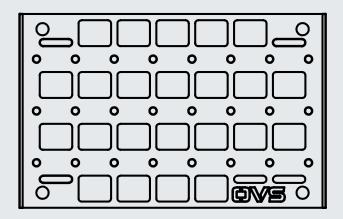

CAREFULLY READ INSTRUCTIONS PRIOR TO THE FIRST USE OF THE EXPEDITION TRUCK CAP MOLLE PANELS

SET-UP & CARE INSTRUCTIONS

GET TO KNOW YOUR MOLLE PANELS

Bulkhead Molle Panels

2x Molle Panels

8x Mounting Brackets

8x Sliding Channel Plates

16x Hex Bolts

23x Washers

8x Lock Washers

8x Hex Nuts

Under Side Doors Molle Panels

2x Molle Panels

8x Mounting Brackets

8x Sliding Channel Plates

16x Hex Bolts

26x Washers

8x Lock Washers

8x Hex Nuts

Side Frame Doors Molle Panels

2x Molle Panels

8x Mounting Brackets

8x Sliding Channel Plates

16x Hex Bolts

24x Washers


8x Lock Washers

8x Hex Nuts

DO NOT EXCEED 25 LBS OF CARGO LOADS ON THE MOLLE PANELS.

BULKHEAD MOLLE PANELS

Identify the bulkhead on your Expedition Truck Cap. It will be located toward the front of your vehicle and will have Molle-Pal Channels that you will be mounting your panels onto.

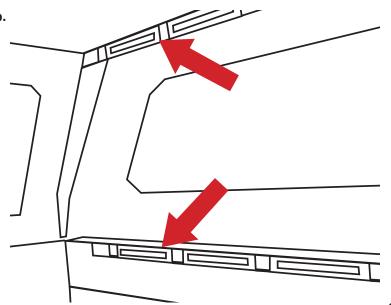


Slide 2 Sliding Channel Plates into the Molle-Pal Channels on the bottom and 2 on the top











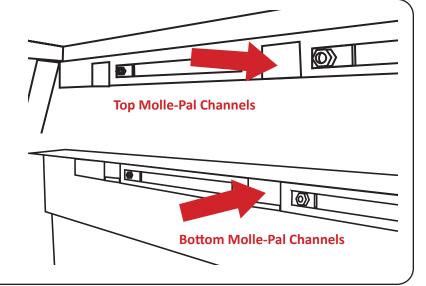

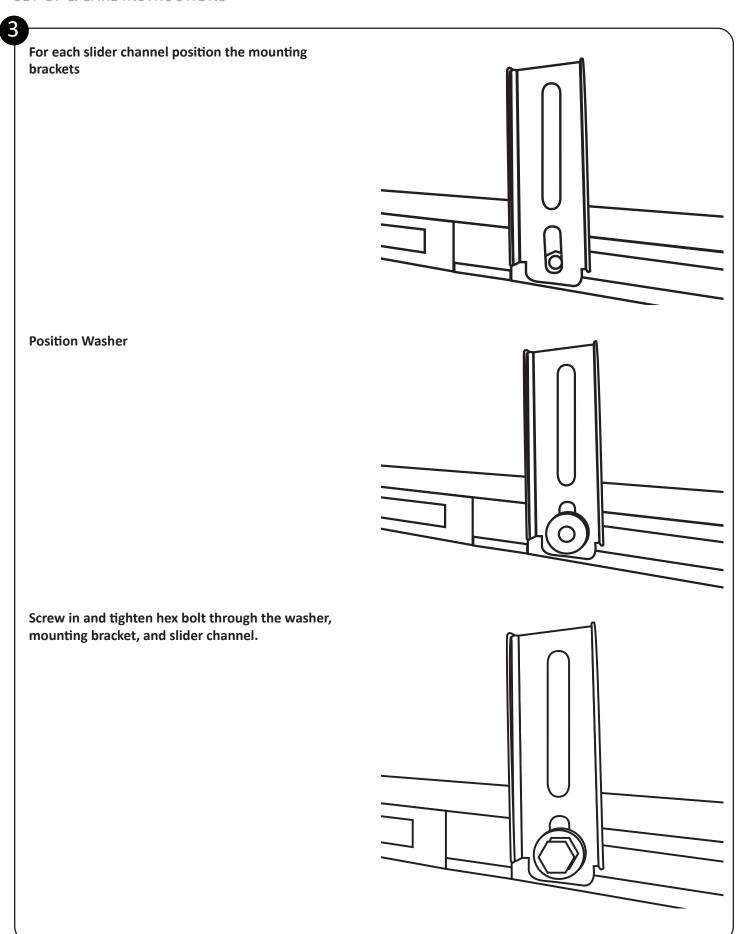

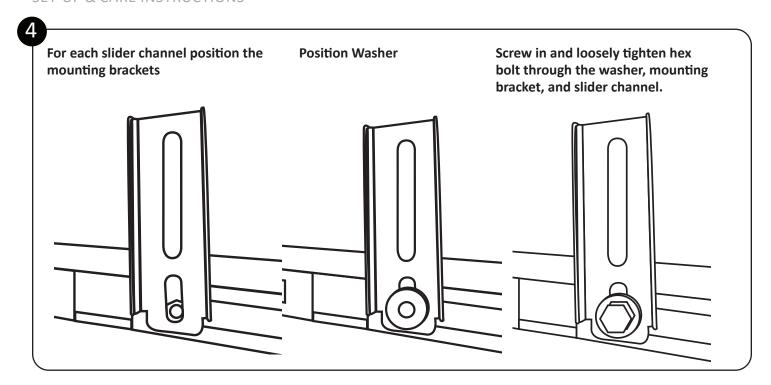

Position the Molle Panels


Insert the Hex Bolt through the washer,

then through the molle panel,

then through the mounting bracket


and complete the configuration with the hex nut and washer combo.

Proceed to tighten all nuts and bolts to complete on all brackets.

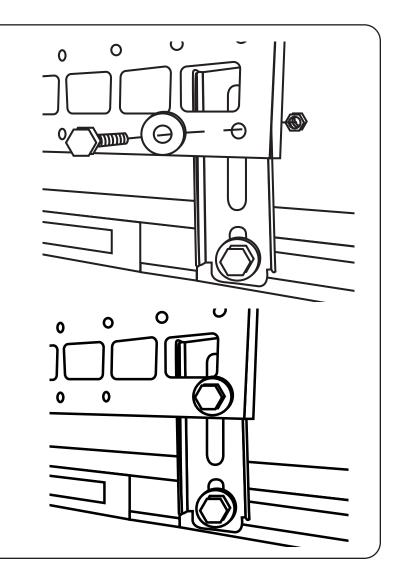


UNDER SIDE DOORS


Identify the door Molle-Pal Channels on your **Expedition Truck Cap**

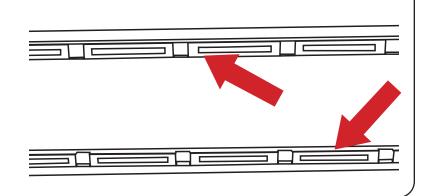


Slide 2 Channel Slider Plates into the Molle-Pal **Channel Sliders**

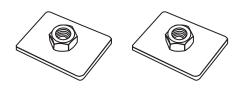




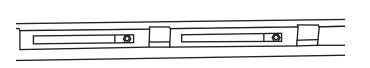


Position the Mounting Brackets onto the Slider **Channel Plates**

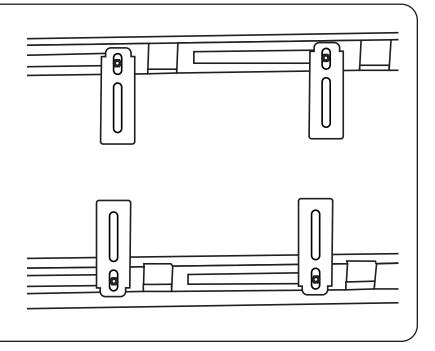


Insert the hex bolt through the washers then insert through the mounting brackets and loosely tighten

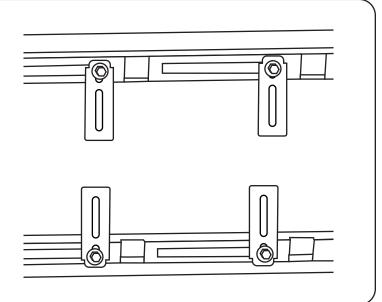

Insert the hex bolt through the washers then insert through the mounting brackets and loosely tighten hex nut

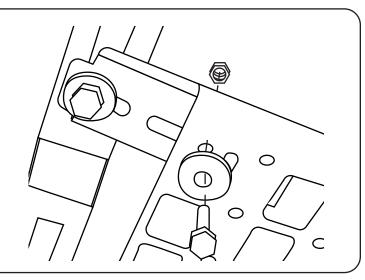


Proceed to tighten all nuts and bolts to complete on all brackets.

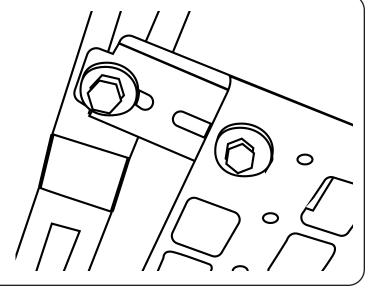



SIDE FRAME PANELS


Identify the Side Frame Molle-Pal Channels on your **Expedition Truck Cap**

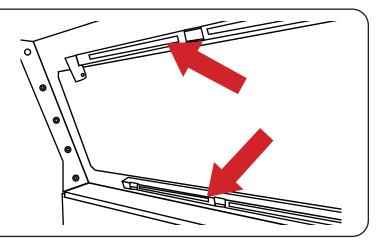


Slide 2 Channel Slider Plates into the Molle-Pal **Channel Sliders**

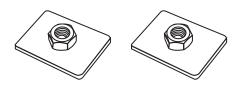

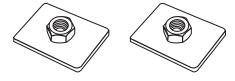


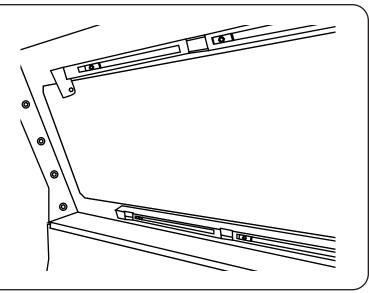


Position Mounting Bracket aligned to the channel slider plates

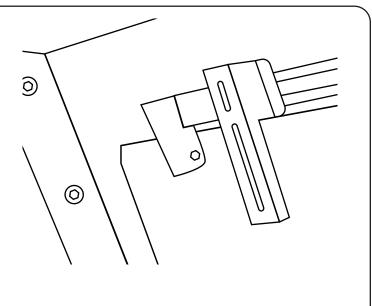

Insert washer and hex bolt combo and loosely tighten mounting bracket to the molle-pal channel

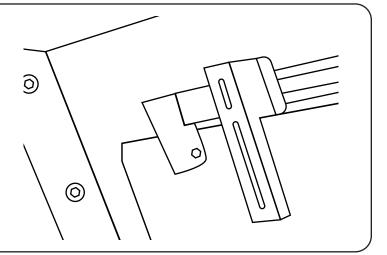


Insert washer and hex bolt combo and loosely tighten mounting bracket to the molle-pal channel

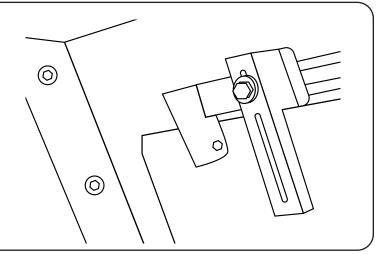

Position Molle Panel to the bracket

Insert hex bolt, washer combo through the Molle Panel and Mounting bracket then loosely secure with washer and hex nut combo

Proceed to tighten all nuts and bolts to complete on all brackets.

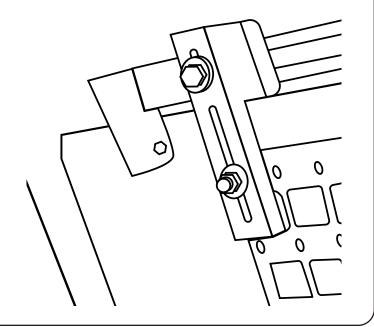

Expedition Cap Molle Panels

SET-UP & CARE INSTRUCTIONS

CLEANING

Clean with cold water and sponge or wash cloth.

STORING

Keep stored in cool place with foam or packaging to ensure the panels don't get damaged.

⚠ WARNINGS

Load Capacity:

Do not exceed the maximum recommended load capacity of

Overloading may cause damage to the panel, mounting hardware, or truck cap structure.

Secure Installation:

Ensure all bolts, brackets, and fasteners are tightened to specification before use.

Periodically inspect hardware and re-tighten as needed especially after off-road use.

Weight Distribution:

Distribute weight evenly across the panel surface to prevent stress or deformation.

Avoid mounting heavy items high on the cap, which can affect vehicle handling and stability.

Off-Road Use:

Rough terrain and vibration can loosen mounting points. Inspect panels and attachments before and after every trail or off-road trip.

Accessory Compatibility:

Only use MOLLE-compatible pouches, mounts, or accessories designed for vehicle applications.

Avoid sharp or abrasive items that can damage panel coating or finish.

Vehicle Clearance:

Verify that attached gear does not interfere with doors, windows, or cap operation.

Check for clearance when parking in garages or under low structures.

Weather Resistance:

While panels are built from corrosion-resistant materials, regular cleaning and maintenance are recommended. Remove dirt, salt, or debris that can accelerate corrosion or wear.

Modification Warning:

Do not drill, cut, or weld the MOLLE panels or truck cap without manufacturer approval. Unauthorized modifications may void warranty and

compromise safety.

Personal Safety:

Ensure all attached gear is secured to prevent items from dislodging while driving.

Do not stand, climb, or hang from MOLLE panels.

10. Periodic Inspection:

Check panels, mounts, and accessories every 30 days or after heavy use for cracks, rust, or loose connections. Replace any damaged parts immediately.



DO YOU NEED OUR HELP?



CUSTOMER SUPPORT 833-226-4863

SALES@OVERLANDVEHICLESYSTEMS.COM













CHECK OUT OUR SOCIAL!

WANT TO SHOW US YOUR RIG?