



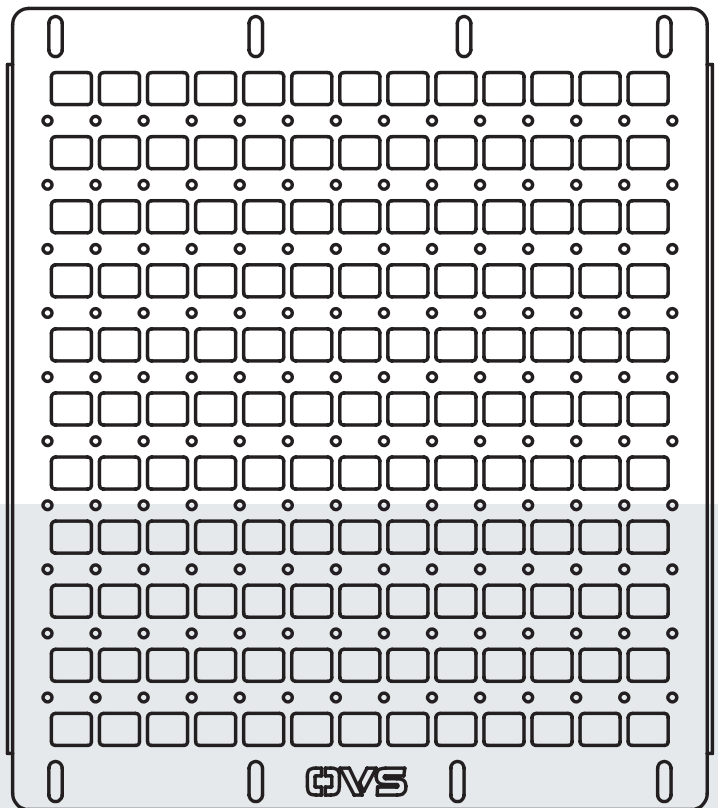

Universal Molle Panel Instructions

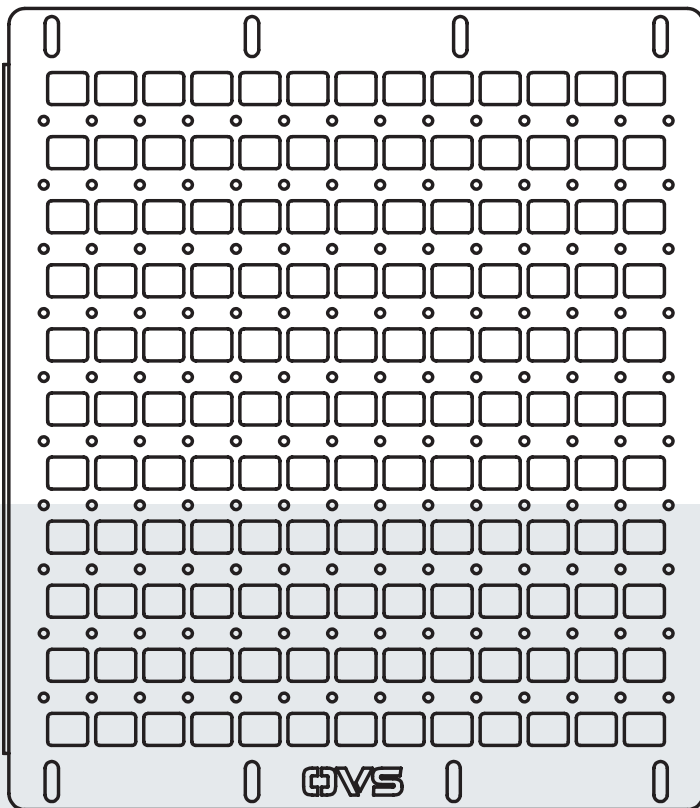

**CAREFULLY READ INSTRUCTIONS PRIOR
TO THE FIRST USE OF THE
UNIVERSAL MOLLE PANELS**

Universal Molle Panels

SET-UP & CARE INSTRUCTIONS

GET TO KNOW YOUR MOLLE PANELS


2x Molle Panels
16x Sliding Channel Plates
32x Hex Bolts
32x Washers
32x Hex Nuts

DO NOT EXCEED 25 LBS OF CARGO LOADS ON THE MOLLE PANELS.

BULKHEAD INSTALLATION


1

When installing the molle panels onto your truck cap, identify the Molle Pal Channels

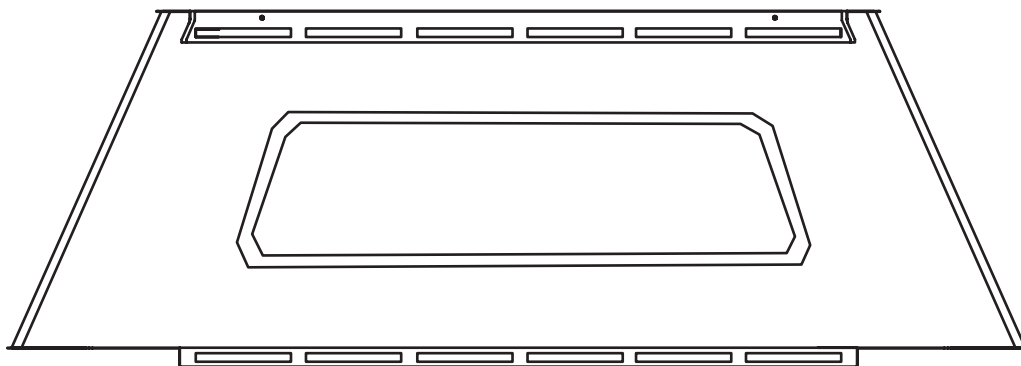

2

Slide 2 Sliding Channel Plates into the Molle-Pal Channels on the bottom and 2 on the top

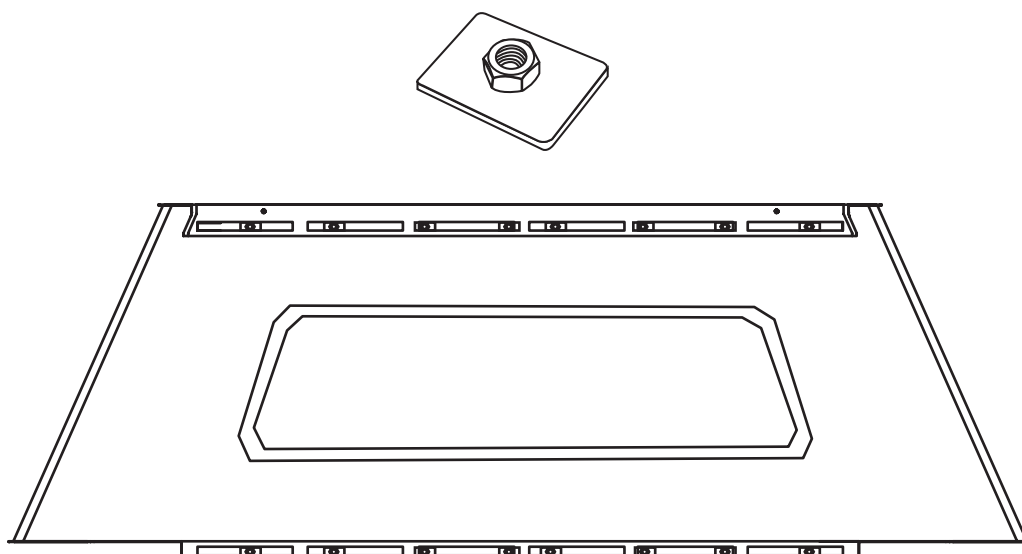


Universal Molle Panels

SET-UP & CARE INSTRUCTIONS


3

Place the molle panels where the channel slider plates are.

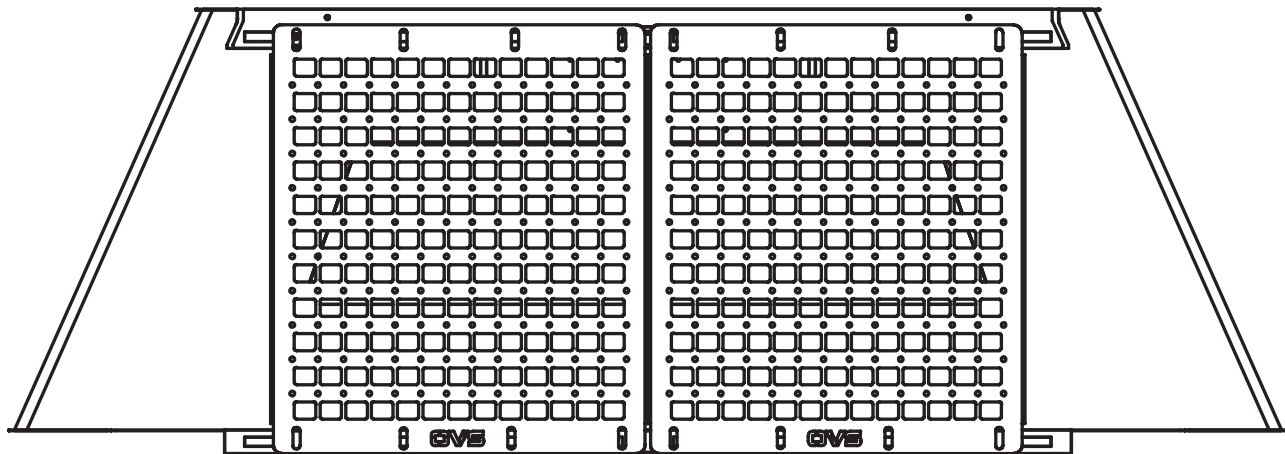

4


Insert the washer and nut combo to secure the molle panels to the Molle-Pal Channels

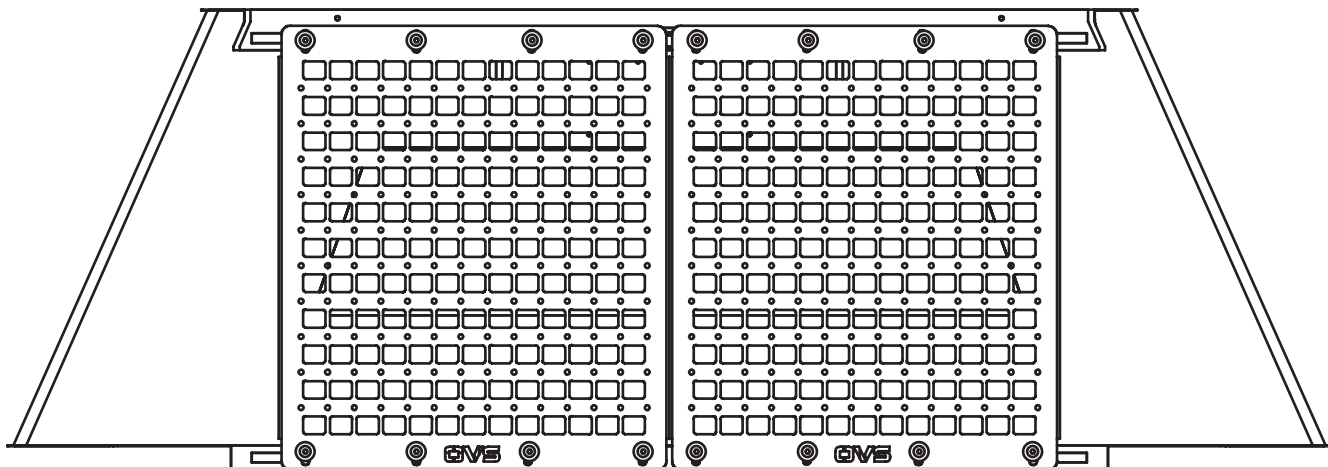

SIDE FRAME INSTALLATION

1

Identify the molle pal channels on the Expedition Truck Cap Side Frame (Not the Door Panel)


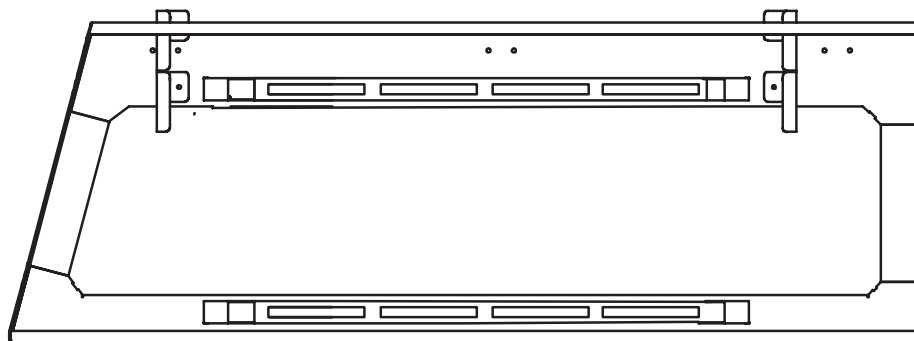


Universal Molle Panels

SET-UP & CARE INSTRUCTIONS


2

Insert the channel slider plates inside the molle-pal channels

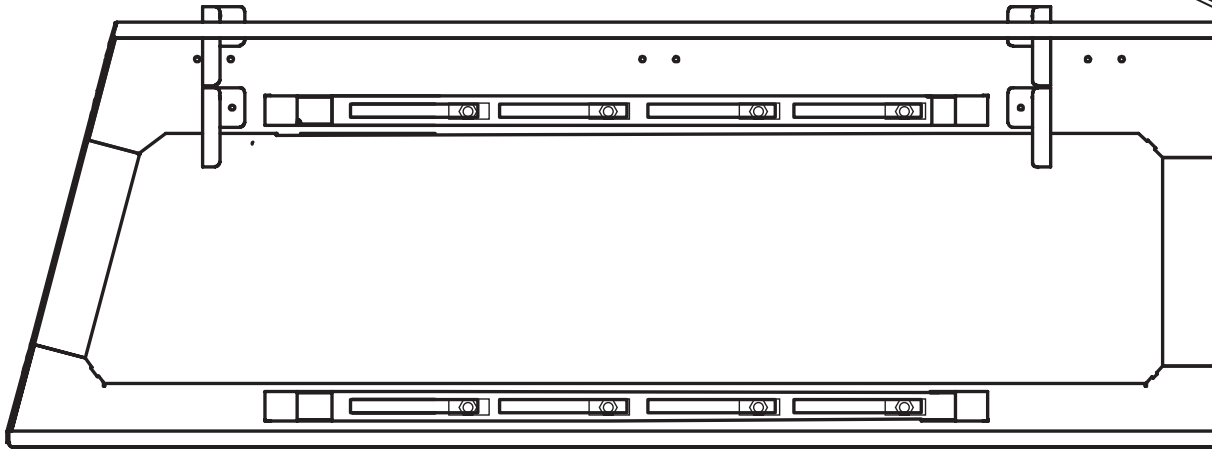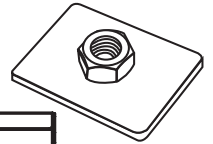


3

Place the Molle Panel where the channel slider plates are located

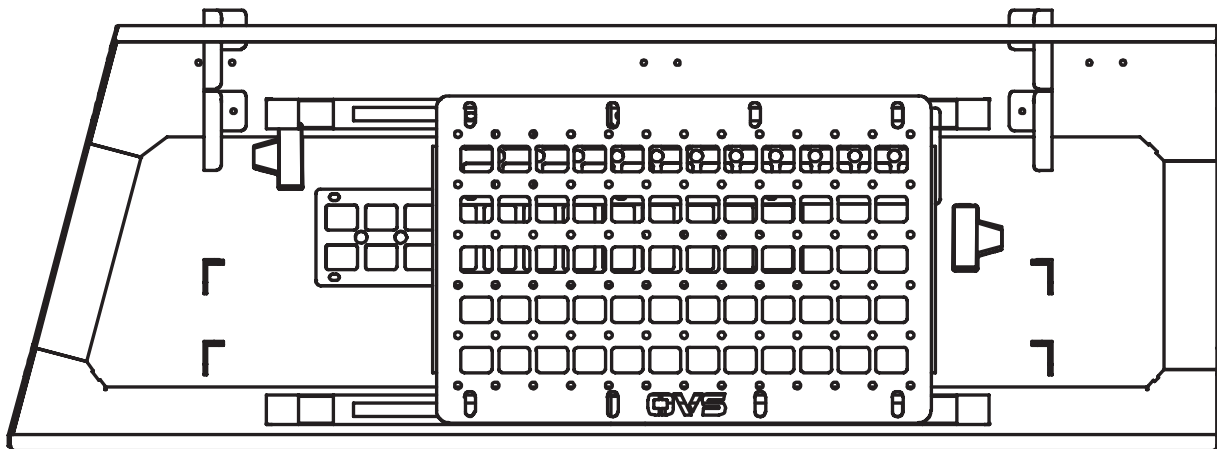

4

Place the Molle Panel where the channel slider plates are located

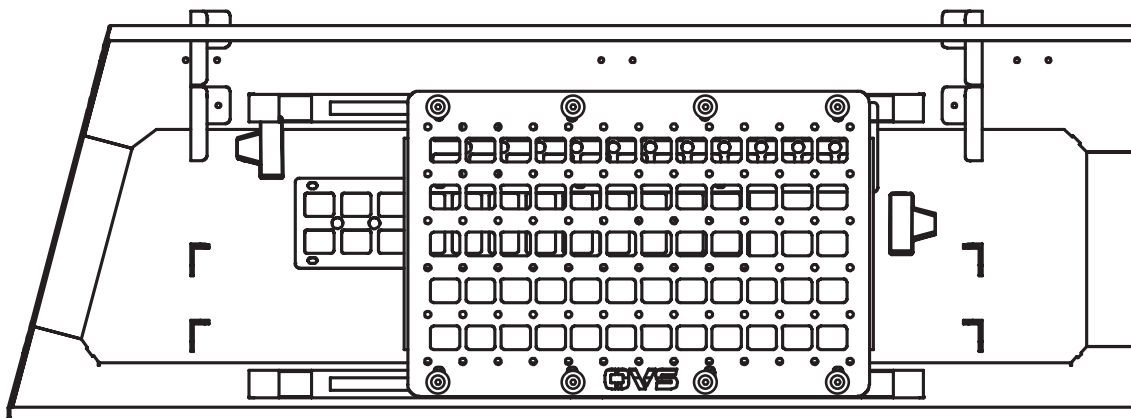


Universal Molle Panels

SET-UP & CARE INSTRUCTIONS

DOOR PANEL INSTALLATION


1

Identify the molle pal channels on the Expedition Truck Cap Side Doors

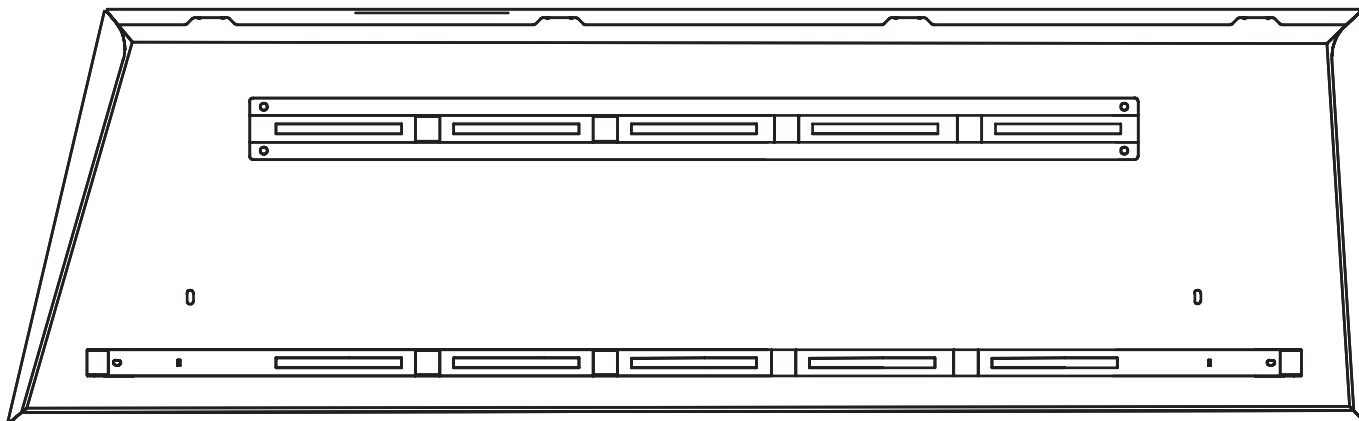


2

Insert the channel slider plates in the molle pal channels

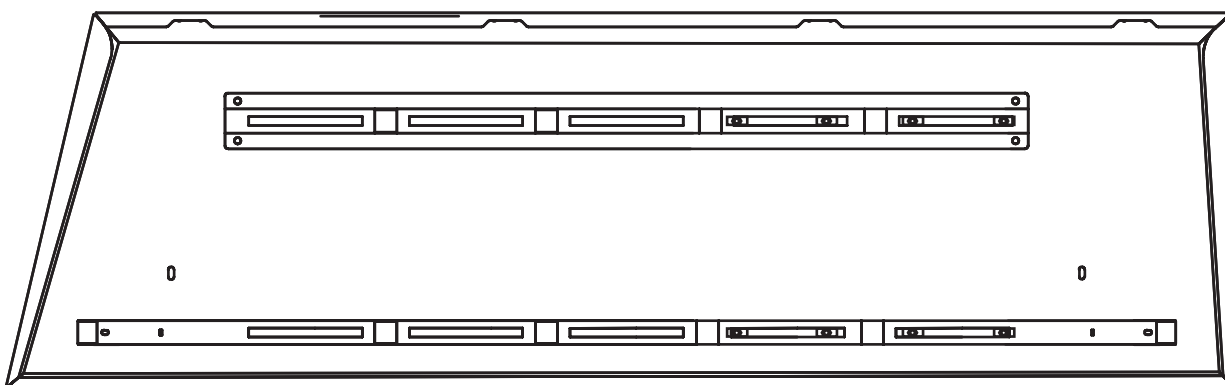

3

Insert the channel slider plates in the molle pal channels

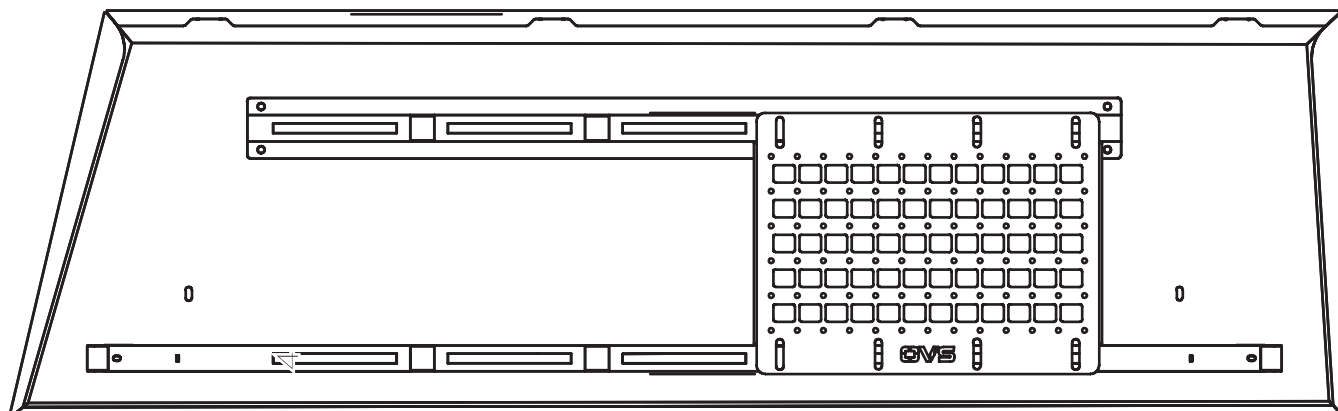


Universal Molle Panels

SET-UP & CARE INSTRUCTIONS

4

Apply the washer and nut combo to all of the molle panels

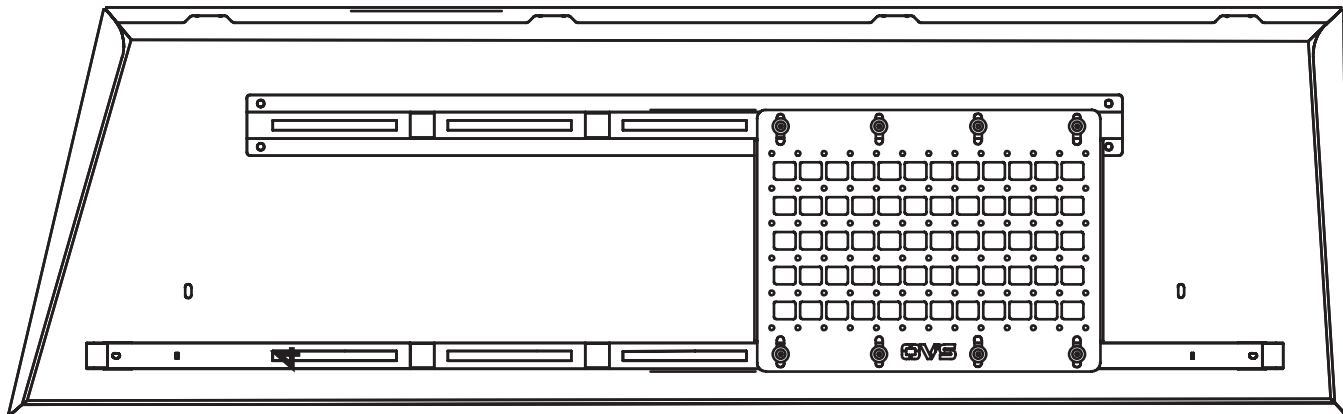

COMPATIBLE PART #	COMPATIBLE APPLICATION	BULKHEAD PANEL	SIDE FRAME	DOOR PANEL (NOT PRO+)
70100020, 70200020, 70100009, 70200009	2017-2027 Ford F-250/F-350 6.8 ft Bed	EXP22	EXP20	EXP25
70100004, 70200004, 70100027, 70200027	2021-2027 Ford F-150 5.5 ft & 6.5 ft Bed	EXP20	EXP27	EXP26
70100006, 70200006	2019-2023 Ford Ranger 5 ft Bed	EXP27	EXP25	EXP29
70100024, 70200024	2024-2025 Ford Ranger 5 ft Bed	EXP27	EXP23	EXP28
70100031, 70200031	2022-2027 Ford Maverick 4.5 ft Bed	EXP23	EXP26	EXP29
70100003, 70200003	2020-2027 Jeep Gladiator 5 ft Bed	EXP21	EXP27	EXP26
70100007, 70200007	2019-2027 RAM 1500 5.7 ft Bed	EXP20	EXP27	EXP26
70100022, 70200022	2009-2027 RAM 2500/3500 6.4 ft Bed	EXP20	EXP27	EXP26
70100008, 70200008, 70100038, 70200038	2019-2027 GM 1500 5.8 ft & 6.6 ft Bed	EXP20	EXP27	EXP26
70100029, 70200029	2020-2027 GM 2500/3500 6.9 ft Bed	EXP20	EXP27	EXP28
70100005, 70200005	2015-2022 GM Colorado/Canyon 5 ft Bed	EXP27	EXP23	EXP28
70100023, 70200023	2023-2027 GM Colorado/Canyon 5 ft Bed	EXP27	EXP25	EXP29
70100001, 70200001, 70100026, 70200026, 70100025, 70200025, 70100028, 70200028, 70100035, 70200035	2016-2027 Toyota Tacoma 5 ft & 6 ft Bed 2016-2027 Toyota Hilux 5 ft Bed	EXP27	EXP23	EXP28
70100002, 70200002, 70100040, 70200040, 70100021, 70200021	2007-2027 Toyota Tundra 5.5 ft Bed 2022-2027 Toyota Tundra 6.5 ft Bed	EXP20	EXP24	EXP26

CLEANING

Clean with cold water and sponge or wash cloth.

STORING

Keep stored in cool place with foam or packaging to ensure the panels don't get damaged.

WARNINGS

- 1. Load Capacity:**
Do not exceed the maximum recommended load capacity of each MOLLE panel.
Overloading may cause damage to the panel, mounting hardware, or truck cap structure.
- 2. Secure Installation:**
Ensure all bolts, brackets, and fasteners are tightened to specification before use.
Periodically inspect hardware and re-tighten as needed—especially after off-road use.
- 3. Weight Distribution:**
Distribute weight evenly across the panel surface to prevent stress or deformation.
Avoid mounting heavy items high on the cap, which can affect vehicle handling and stability.
- 4. Off-Road Use:**
Rough terrain and vibration can loosen mounting points. Inspect panels and attachments before and after every trail or off-road trip.
- 5. Accessory Compatibility:**
Only use MOLLE-compatible pouches, mounts, or accessories designed for vehicle applications.
Avoid sharp or abrasive items that can damage panel coating or finish.
- 6. Vehicle Clearance:**
Verify that attached gear does not interfere with doors, windows, or cap operation.
Check for clearance when parking in garages or under low structures.
- 7. Weather Resistance:**
While panels are built from corrosion-resistant materials, regular cleaning and maintenance are recommended.
Remove dirt, salt, or debris that can accelerate corrosion or wear.
- 8. Modification Warning:**
Do not drill, cut, or weld the MOLLE panels or truck cap without manufacturer approval.
Unauthorized modifications may void warranty and compromise safety.
- 9. Personal Safety:**
Ensure all attached gear is secured to prevent items from dislodging while driving.
Do not stand, climb, or hang from MOLLE panels.
- 10. Periodic Inspection:**
Check panels, mounts, and accessories every 30 days or after heavy use for cracks, rust, or loose connections.
Replace any damaged parts immediately.



DO YOU NEED OUR HELP?



CUSTOMER SUPPORT 833-226-4863



SALES@OVERLANDVEHICLESYSTEMS.COM

WANT TO SHOW US YOUR RIG?
CHECK OUT OUR SOCIAL!

@overlandvehiclesystems

