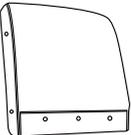






ITEM NAME / NOM D'ITEM: MACIO ACCENT CHAIR
ITEM# / NO. ITEM: 110571

PARTS LIST / LISTE DES PIÈCES


(1)	(2)	(3)	(4)	(5)	(6)
		 Left			A  M8 x1 F  $\phi 8 \times \phi 22 \times 3$ B  M6 x1 G  $\phi 8 \times \phi 13 \times 8$ C  M8x60MM 3 x H  15# x8 D  M8x65MM x4 I  x4 E  M8x60MM x4
x1	x1	Right x1	x1	x1	

ASSEMBLY INSTRUCTIONS / INSTRUCTIONS D'ASSEMBLAGE

Do not FULLY TIGHTEN the screws or nuts for any step until all are in place.

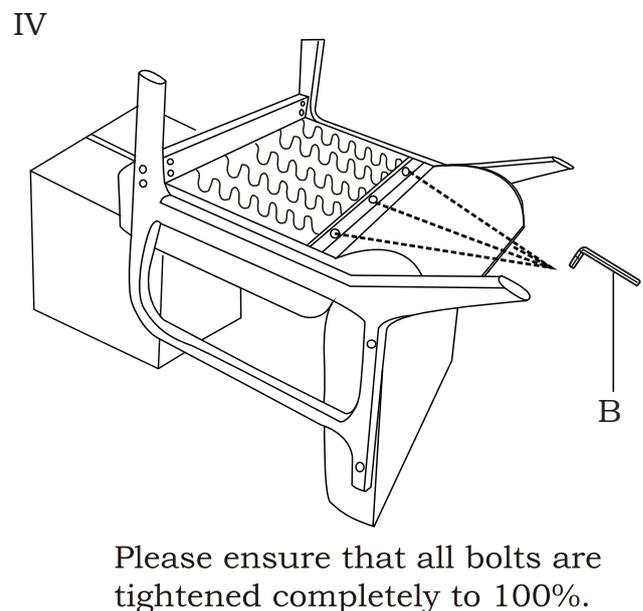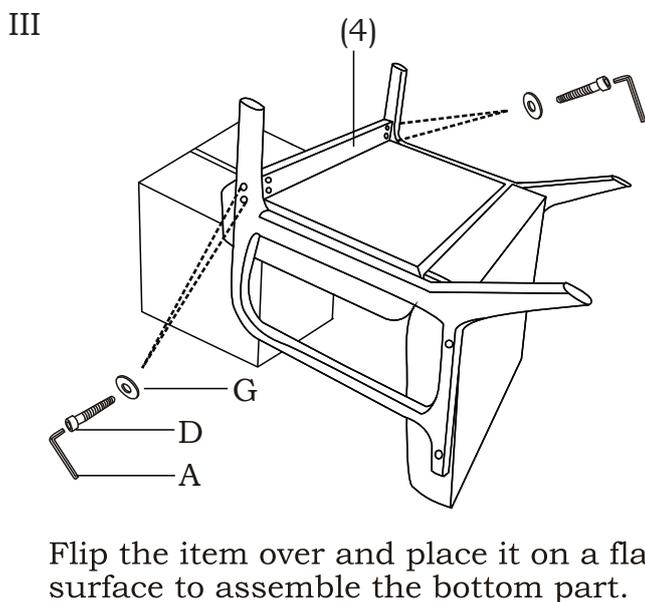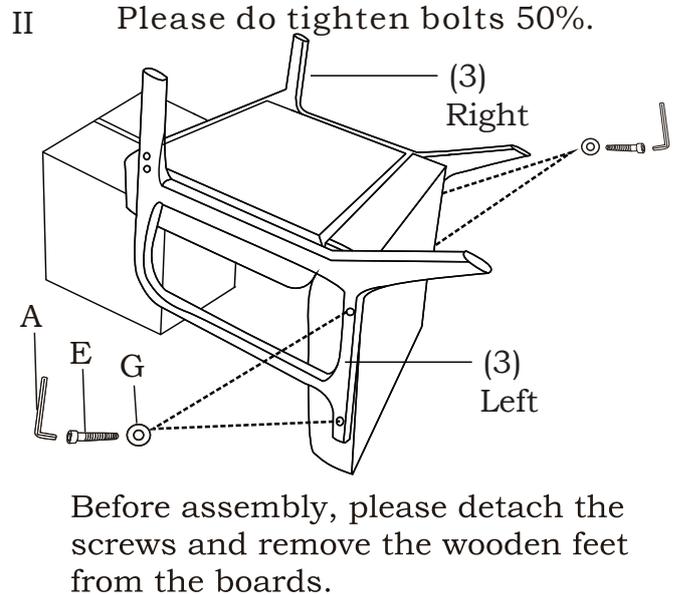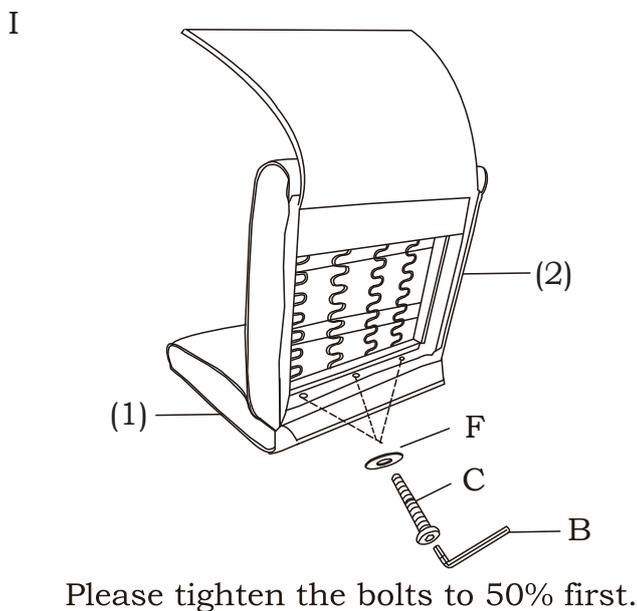


V

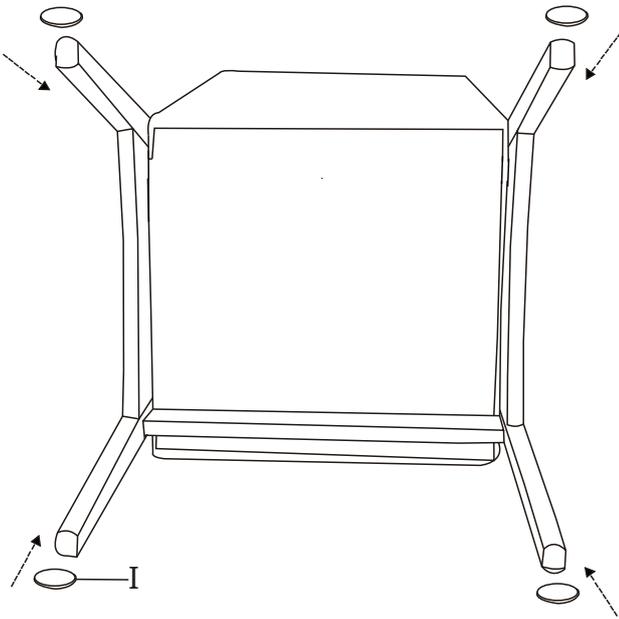


Please attach the footpads to the legs.

VI

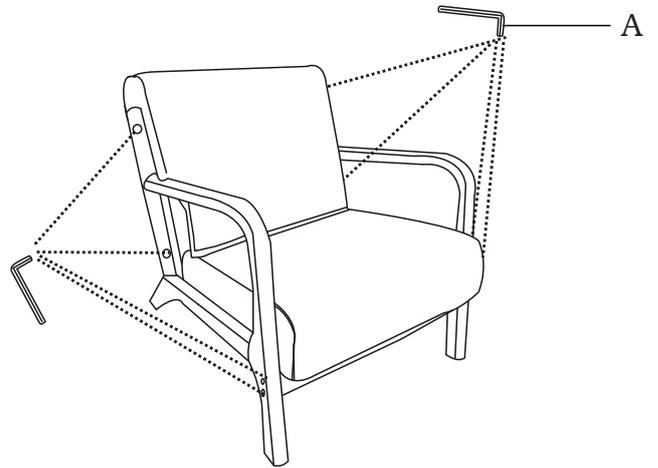

Please ensure that all bolts are tightened completely to 100%.

VII

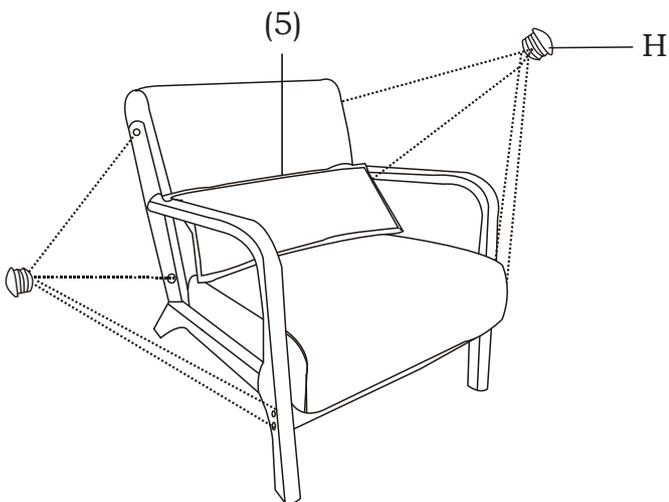

VIII

