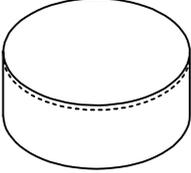
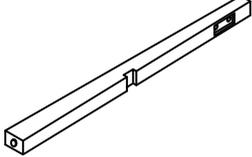
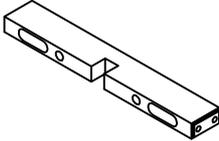
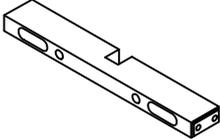



**ITEM NAME/NOM D'ITEM: NADE BARSTOOL**  
**ITEM#/NO. ITEM: 110661**

**PARTS LIST/LISTE DES PIÈCES**

(1)	(2)	(3)	(4)	(5)
				
x1	x4	x1	x1	x1


(6)

A.		JCBC BOLT M6x50mm	x12
B.		JCBB BOLT M6x40mm	x4
C.		C95 WASHER (BLACK)	x8
D.		M4 ALLEN KEY	x1


**ASSEMBLY INSTRUCTIONS/INSTRUCTIONS D'ASSEMBLAGE**

**Do not FULLY TIGHTEN the screws or nuts for any step until all are in place.**


**I** Follow the upward stickers assembly.

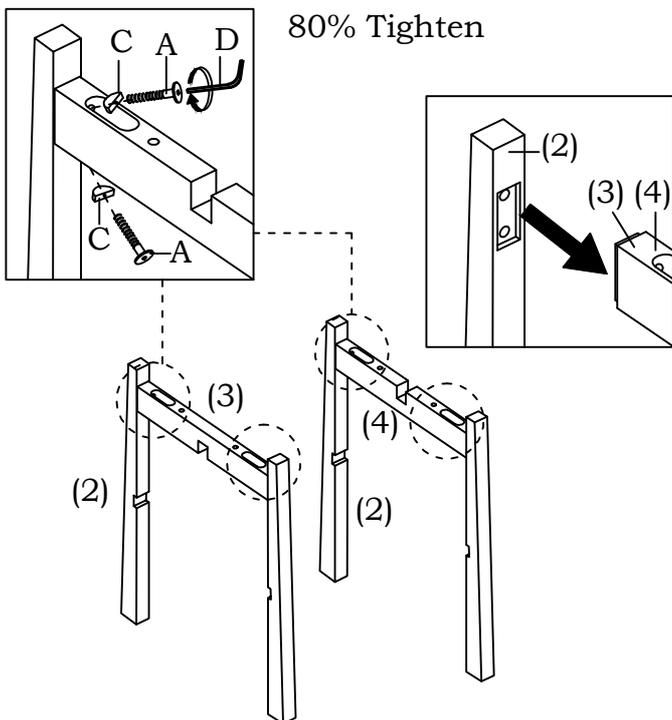


**II**

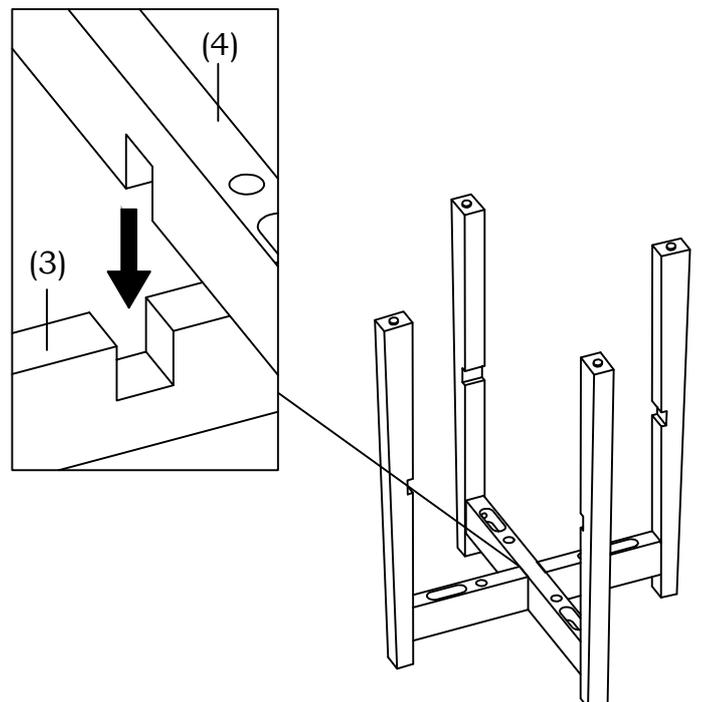


III

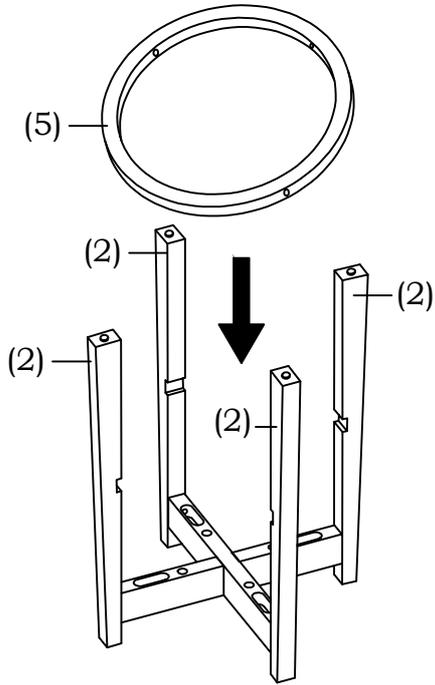


IV

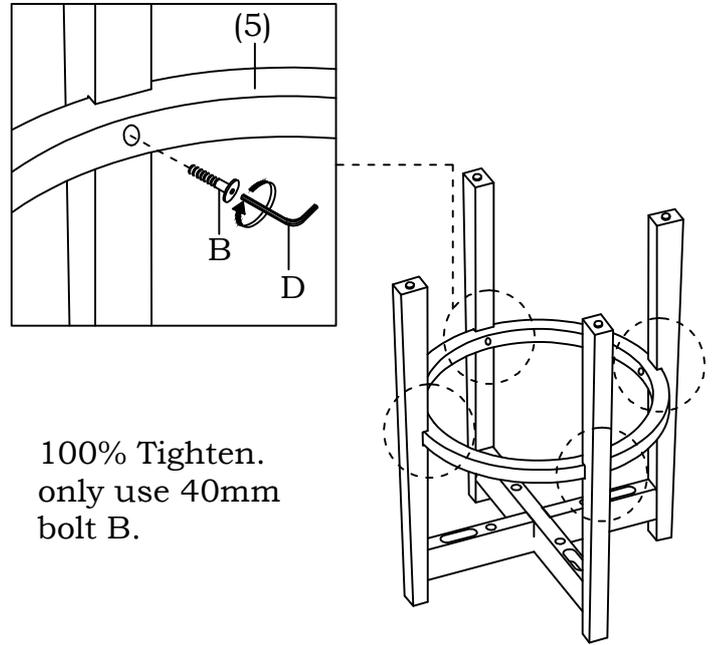

V

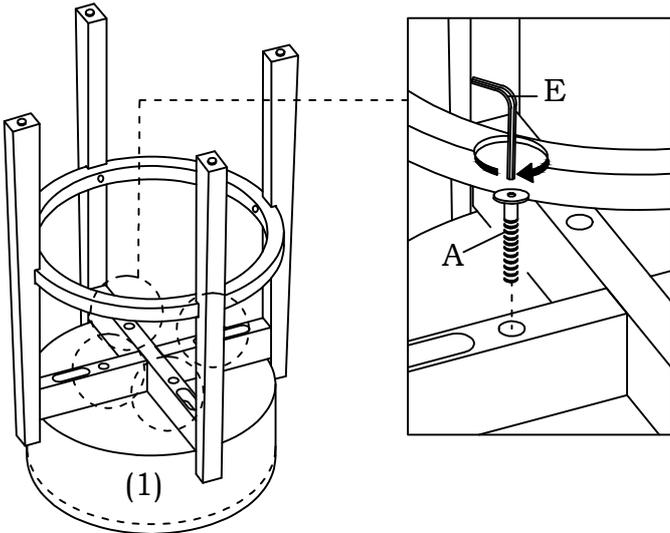

VI

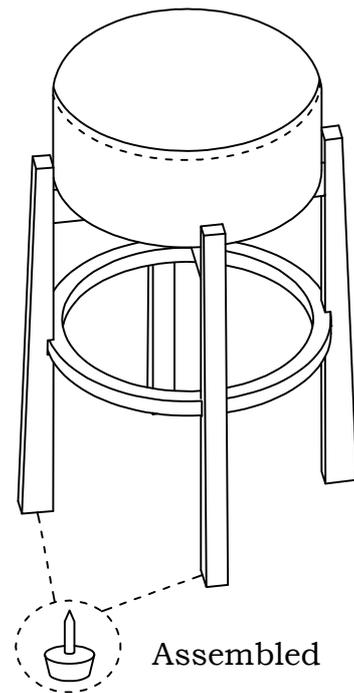

For missing parts or damaged parts, please call /  
Pour pièce manquante ou endommagée, veuillez appeler:

USA, Canada and Mexico : (866)798-6663

AI-V4-B009-250829