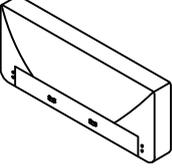
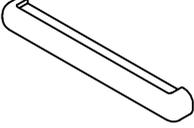
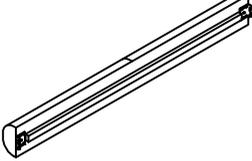
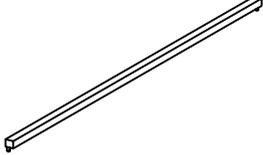
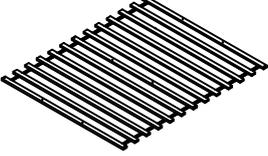




**ITEM NAME/NOM D'ITEM: BARIS KING BED**  
**ITEM#/NO. ITEM: 110664**

## PARTS LIST/LISTE DES PIÈCES


(1)	(2)	(3)	(4)
 x1	 x1	 x2	 x2
(5)	(6)	(7)	(8)
 x6	 x1	 x2	 x2
(9)			

A.		M6 x 50mm	x 8
B.		M4 x 38mm	x 12
C.		M4 x 20mm	x 4
D.		M4	x 1
E.		M5	x 1


## ASSEMBLY INSTRUCTIONS/INSTRUCTIONS D'ASSEMBLAGE

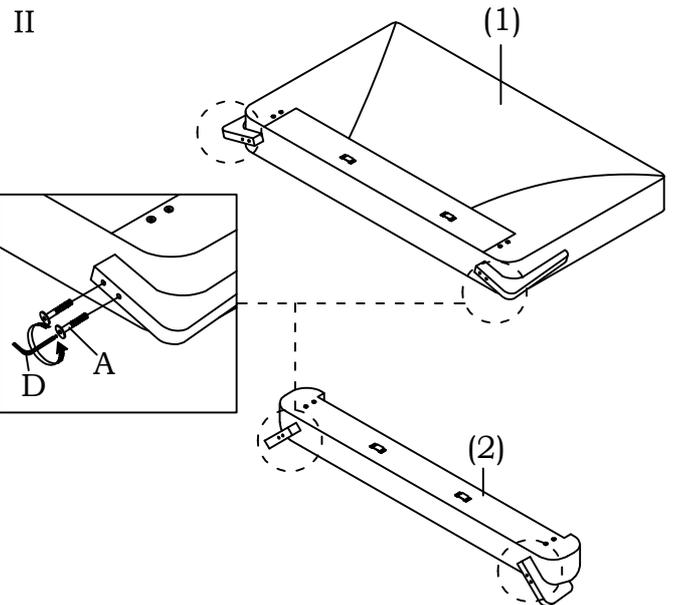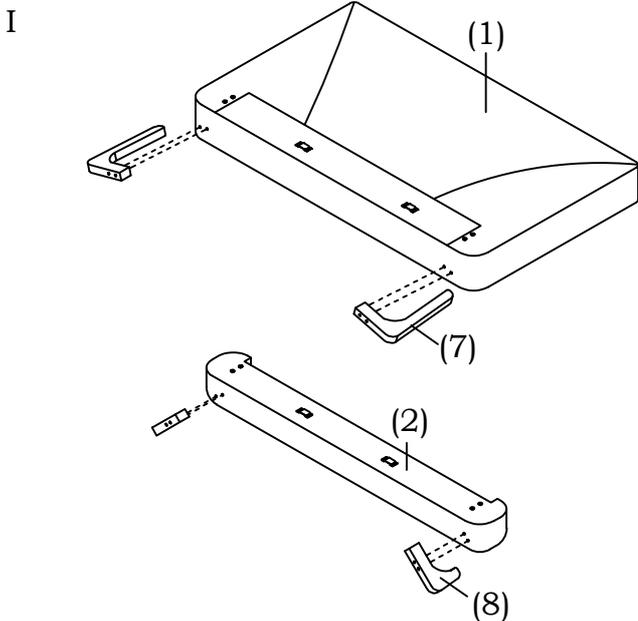


III

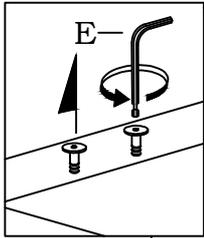


Loosen the pre-inserted bolt on the headboard and footboard using ball-shaped Allen key (E)

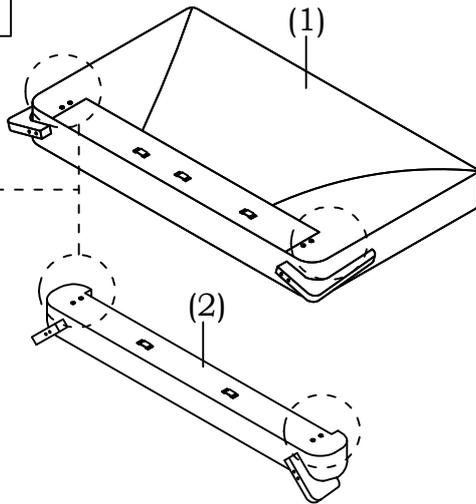


IX

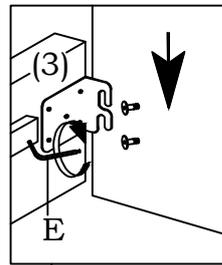



Tighten the loosened bolt over the siderail (3) metal component.

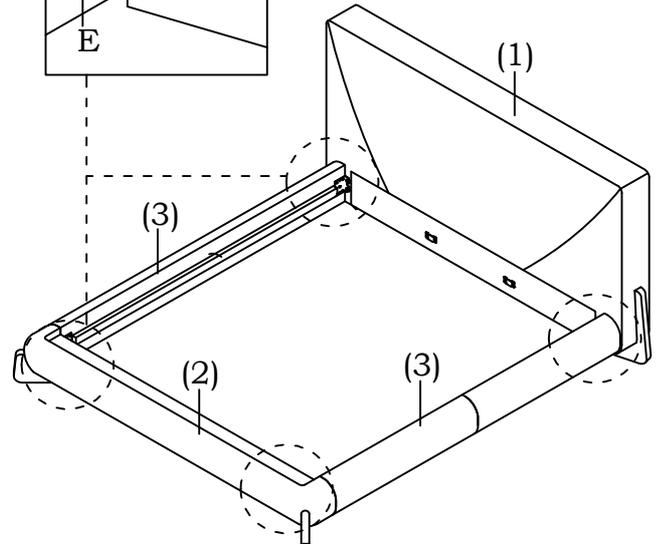


X

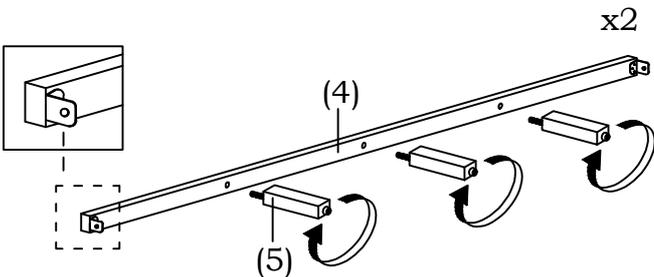


XI

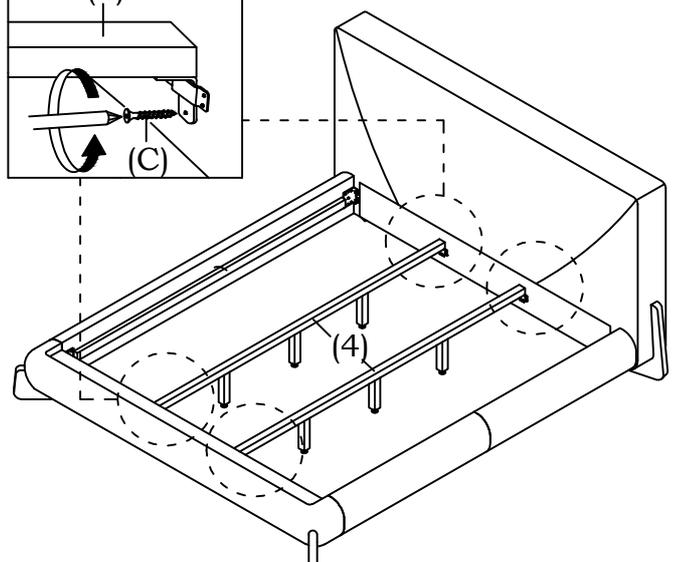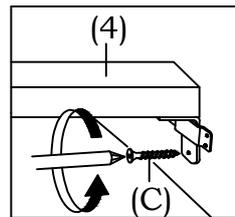

XII

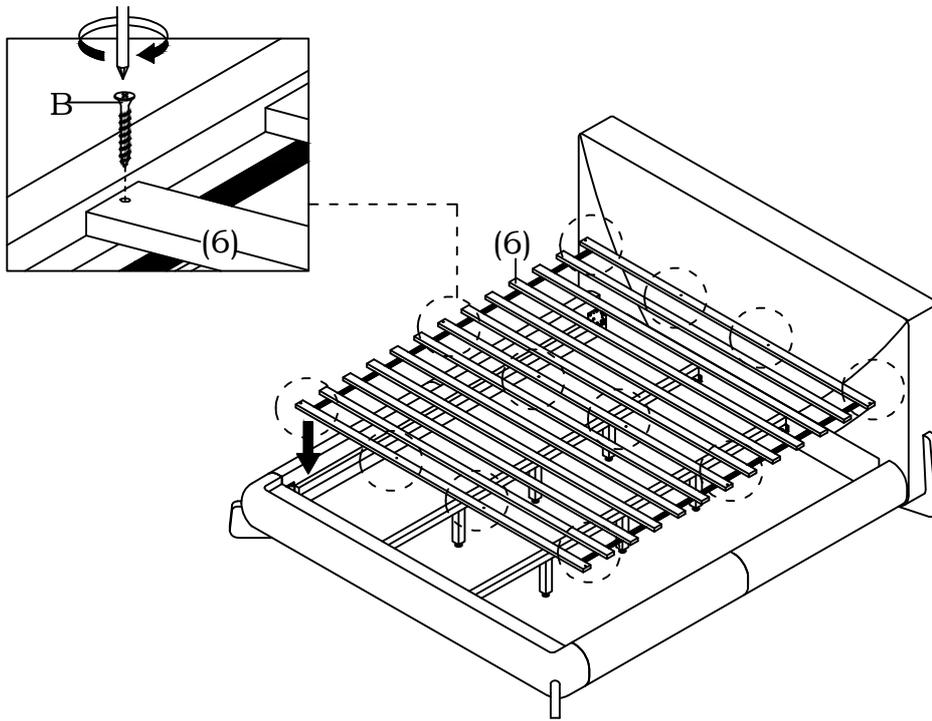

XIII

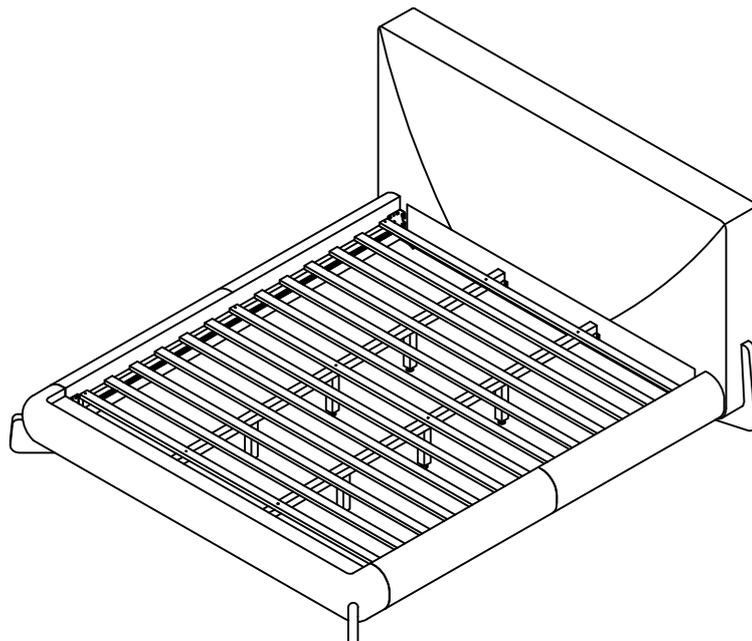

For missing parts or damaged parts, please call /  
Pour pièce manquante ou endommagée, veuillez appeler:

USA, Canada and Mexico : (866)798-6663

AI-V1-B009-250114