



# ASSEMBLY INSTRUCTIONS

AMBER


A121/A421/A821/A921

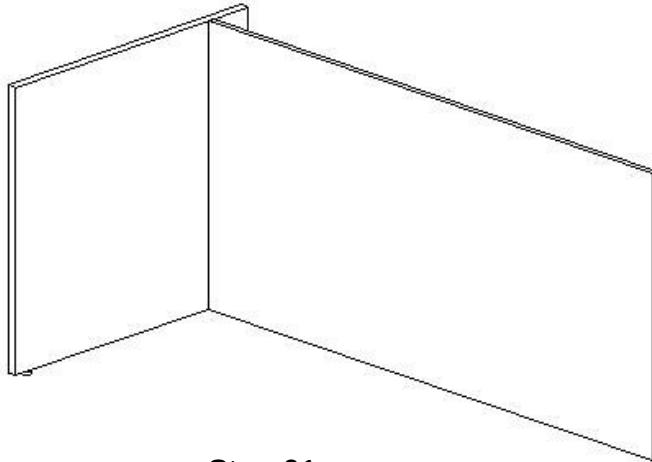

Step 01

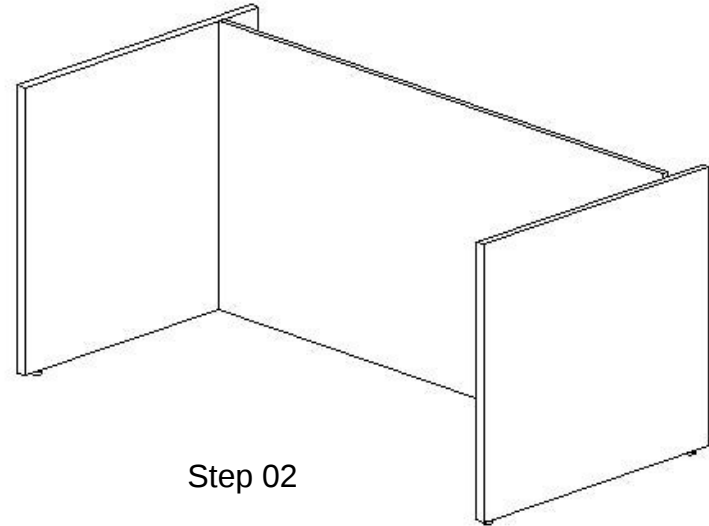

Step 02

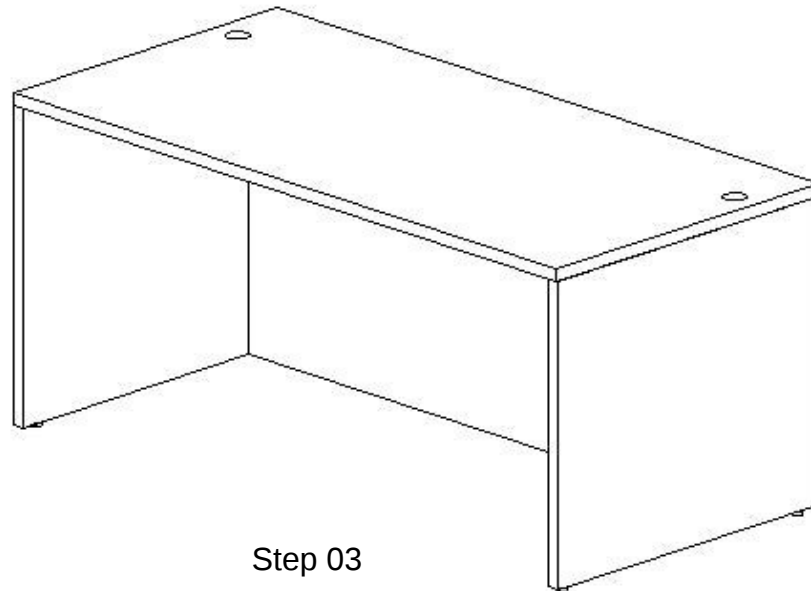


Step 03


# ASSEMBLY INSTRUCTIONS

AMBER


A131

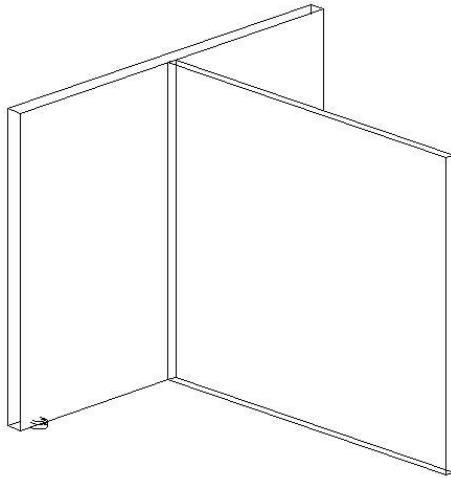

Step 01

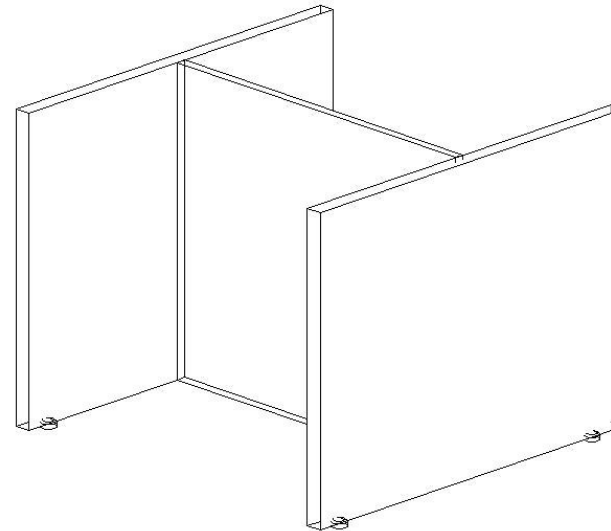

Step 02

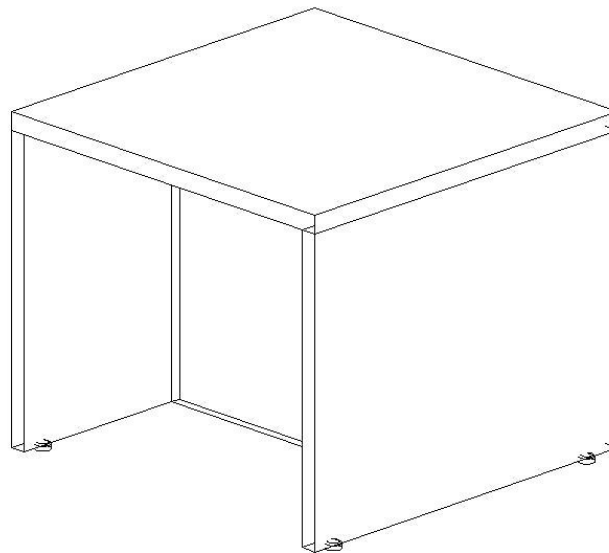

Step 03


# ASSEMBLY INSTRUCTIONS

AMBER


A221(L)

A222(R)


A230/231

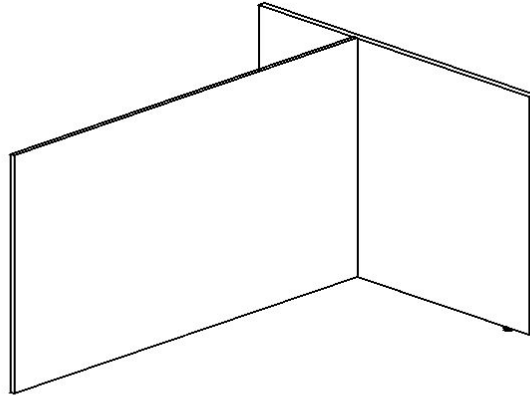


Step 01

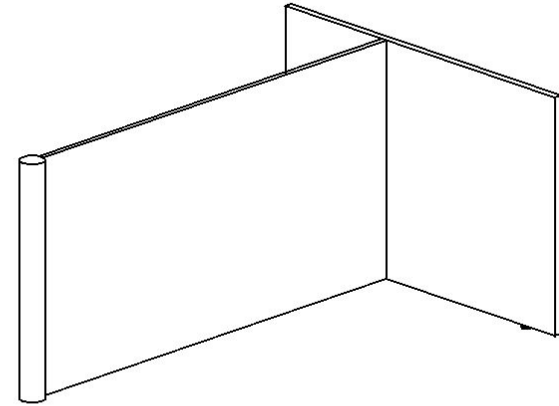

step 02

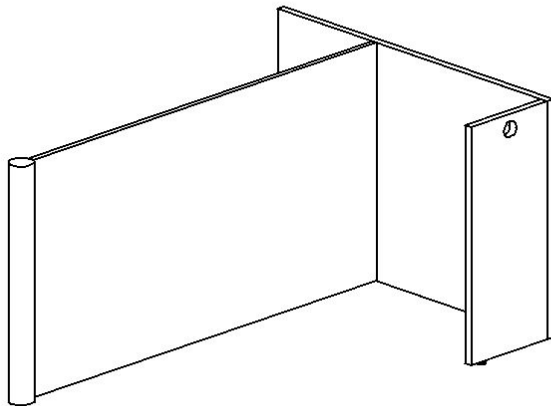

Step 03

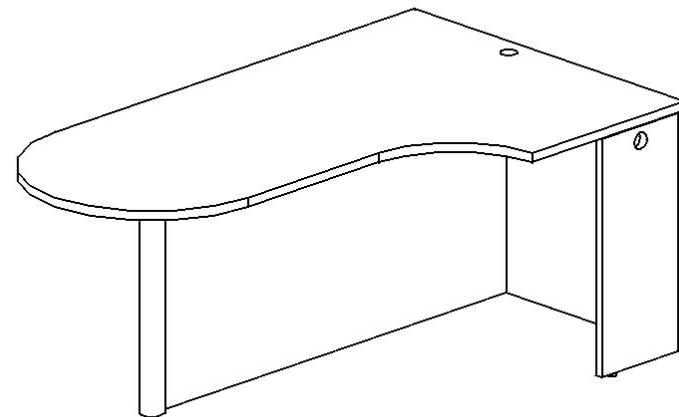


step 04

# ASSEMBLY INSTRUCTIONS


AMBER

A321(L)|


A322(R)

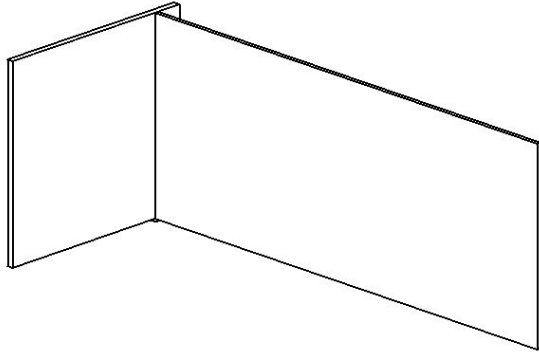


Step 01

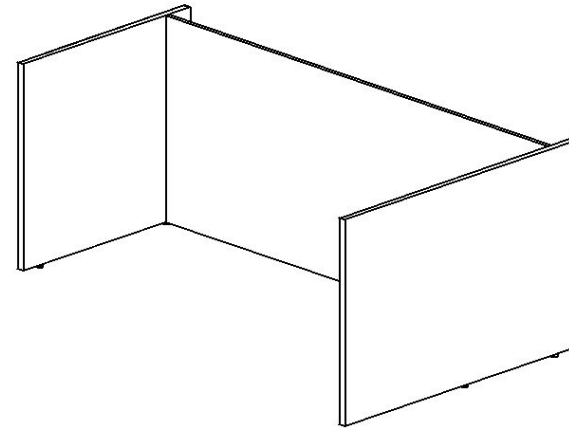

Step 02

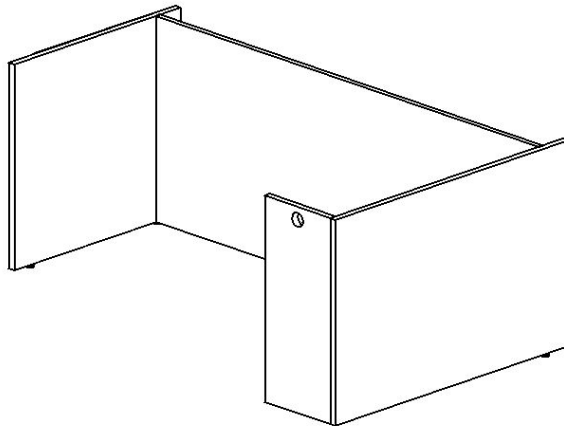

Step 03

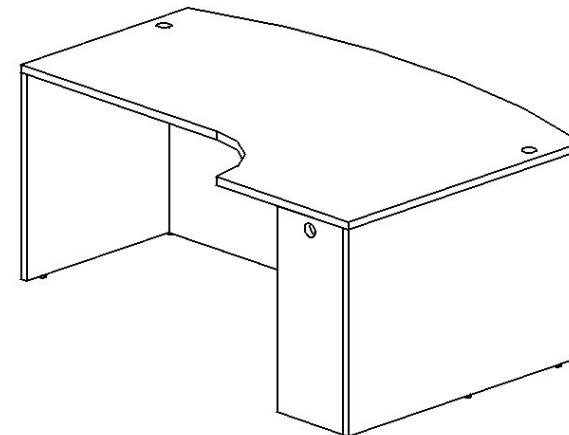


Sttep 04


# ASSEMBLY INSTRUCTIONS

AMBER

A324/A824/A924

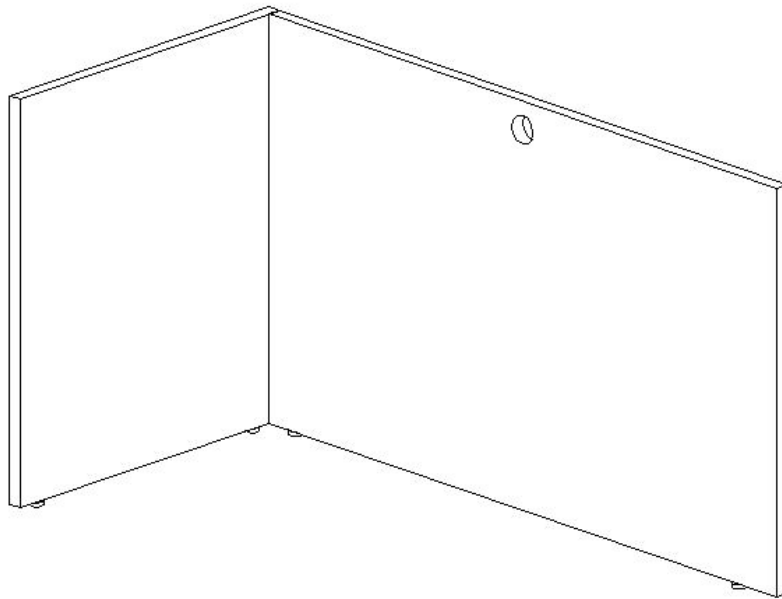

Step 01

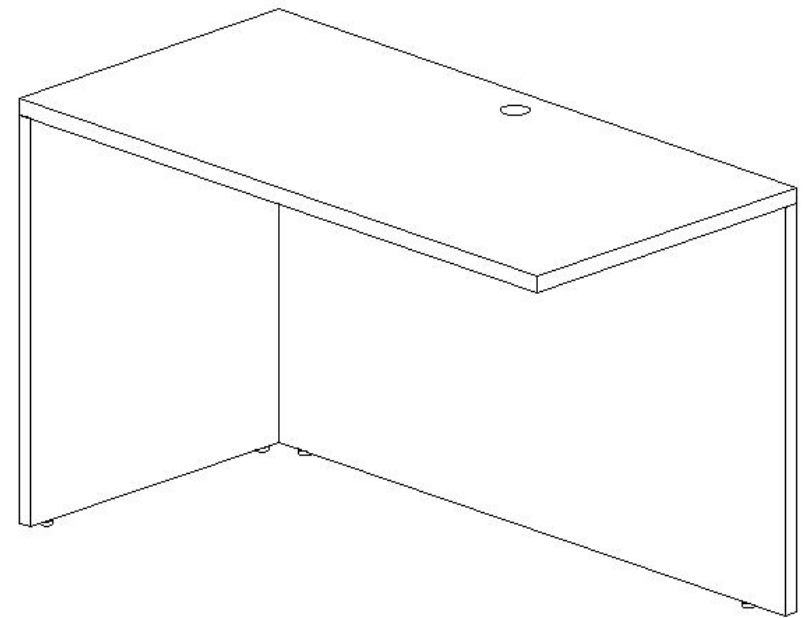


Step 02


# ASSEMBLY INSTRUCTIONS

AMBER


A326

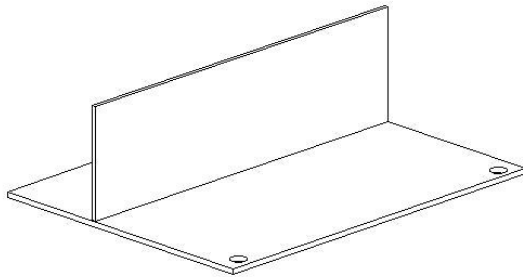


Step 01

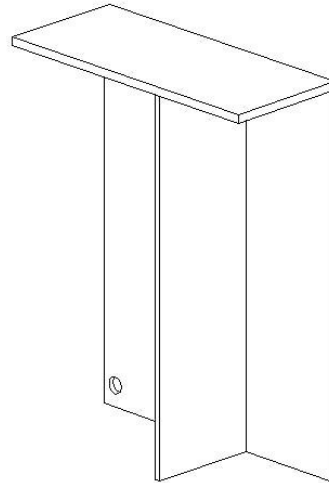


Step 02

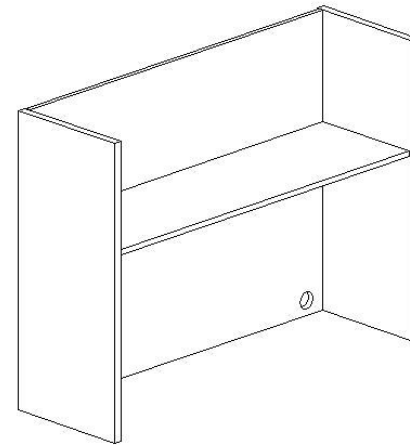

Step 03

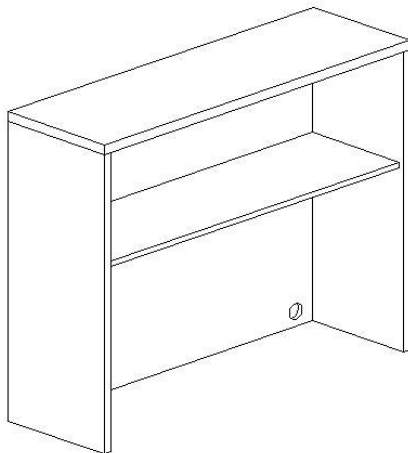

Step 04

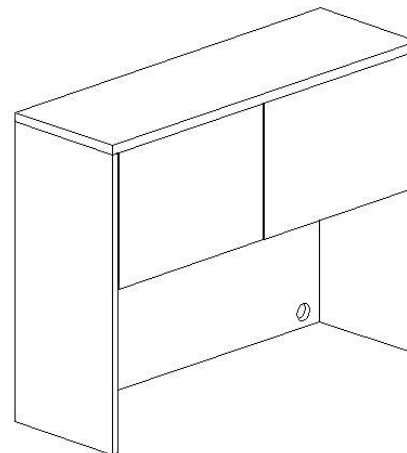


step 05


# ASSEMBLY INSTRUCTIONS

AMBER


A328

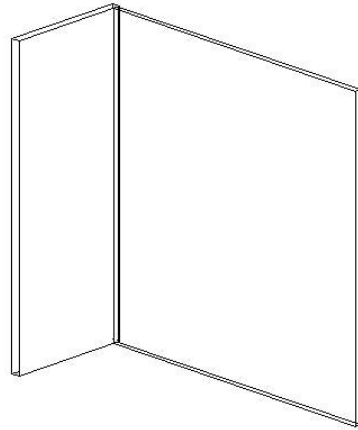


Step 01

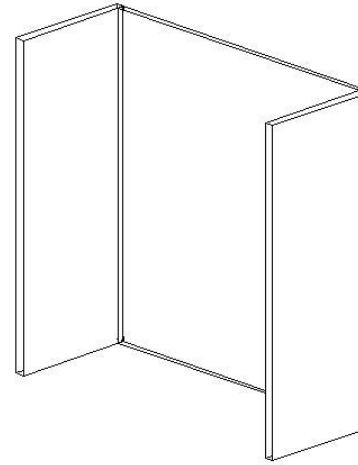

Step 02

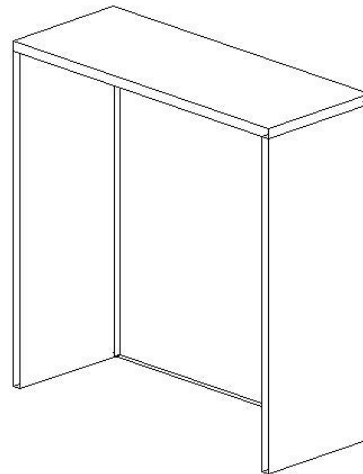

Step 03

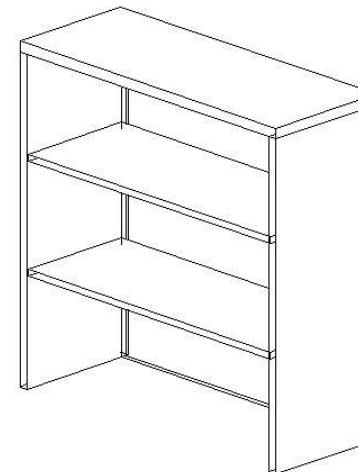


step 04


# ASSEMBLY INSTRUCTIONS

AMBER


A330

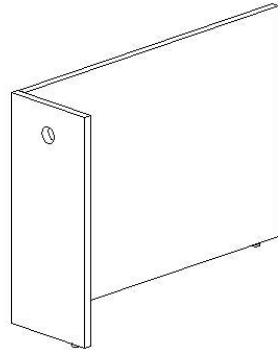


Step 01

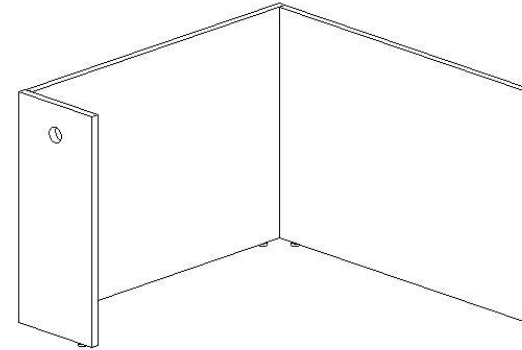

Step 02

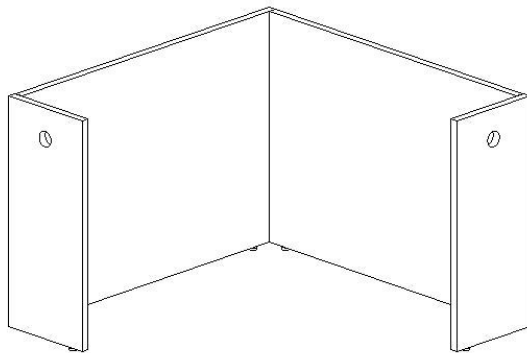

Step 03

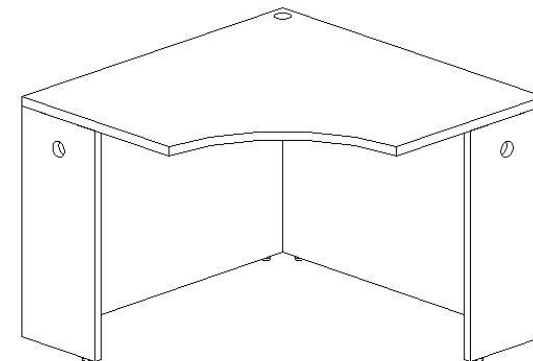


Step 04


# ASSEMBLY INSTRUCTIONS

AMBER


A331

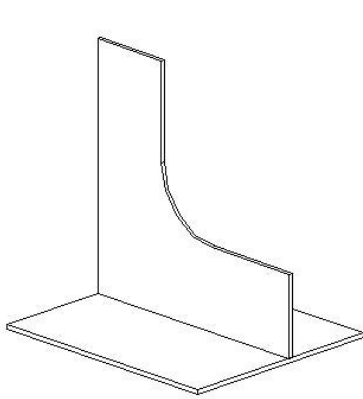


Step 01

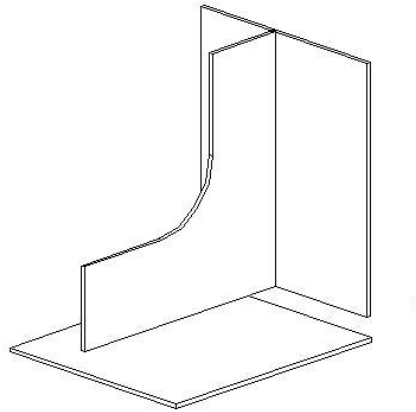


Step 02

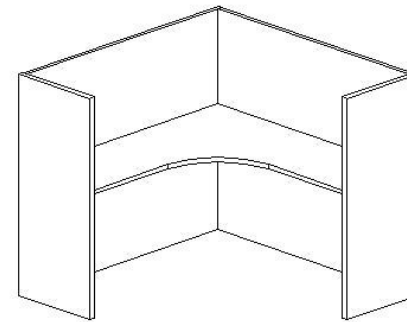


Step 03

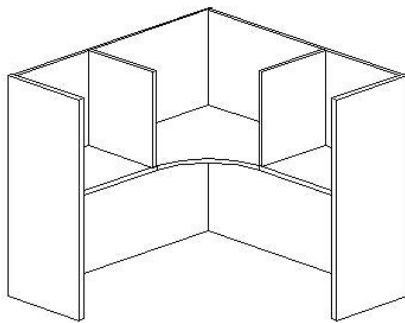

Step 04

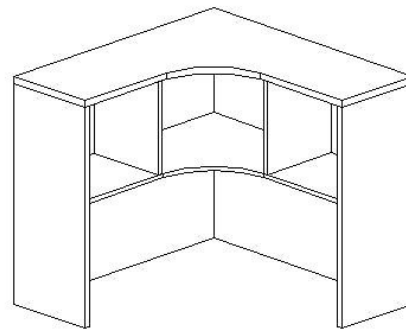

Step 05

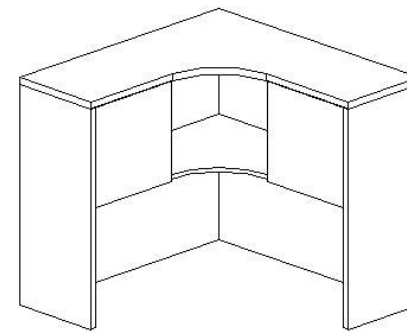


Step 06


# ASSEMBLY INSTRUCTIONS

AMBER


A426/A427/A428/A429/A926

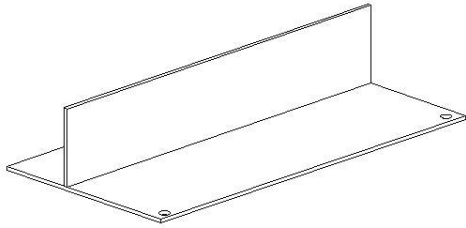


Step 01

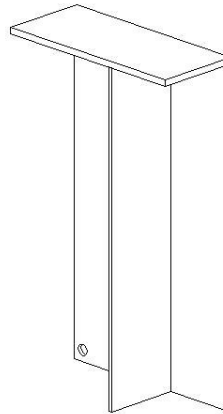


Step 02

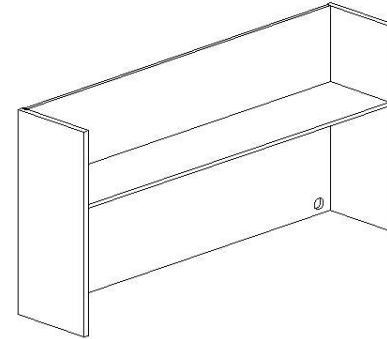


Step 03

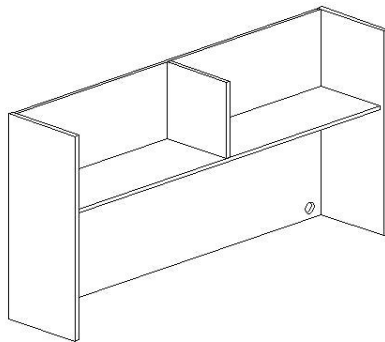

Step 04

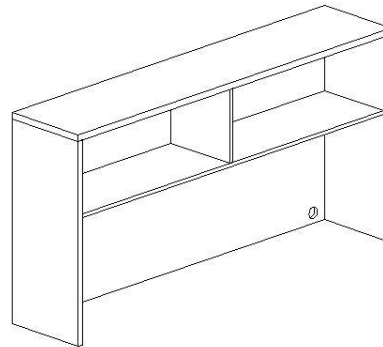

Step 05

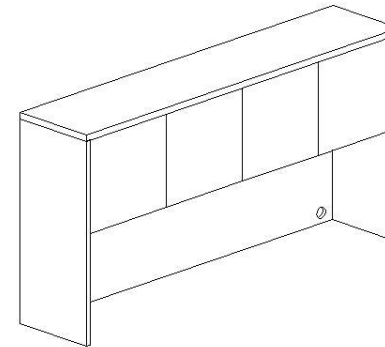


Step 06


# ASSEMBLY INSTRUCTIONS

AMBER


A540

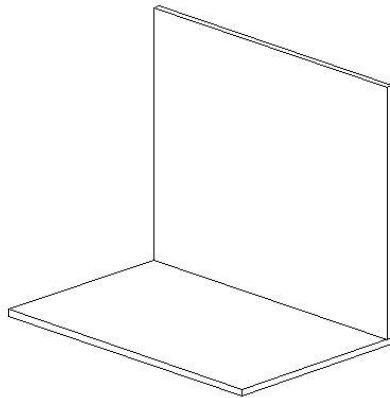


Step 01

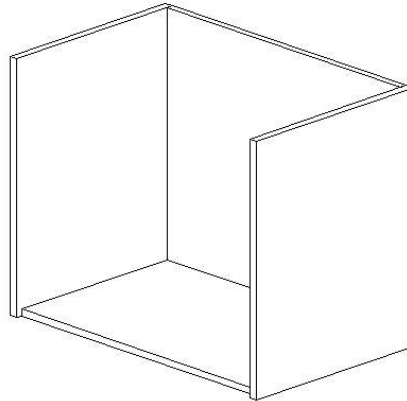


Step 02

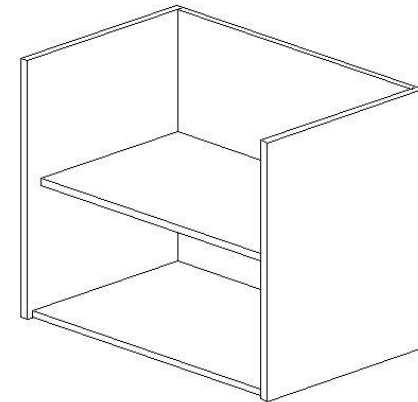


Step 03

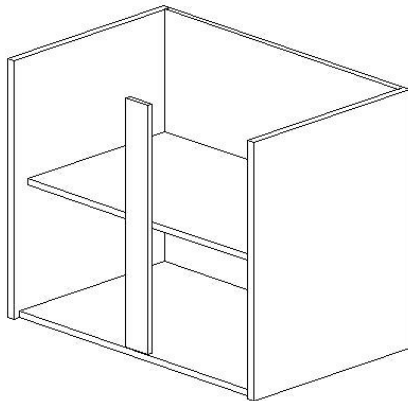

Step 04

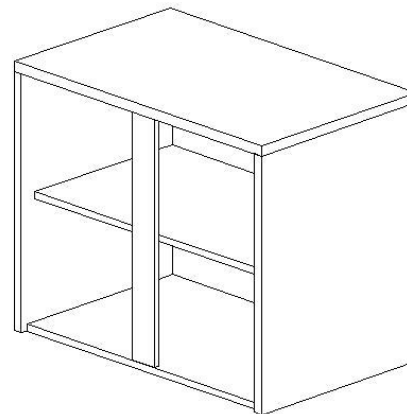

Step 05

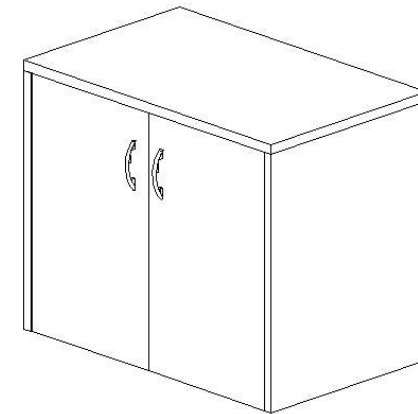


Step 06


# ASSEMBLY INSTRUCTIONS

AMBER


A620/A630/A631

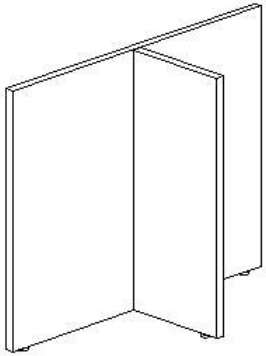

Step 01

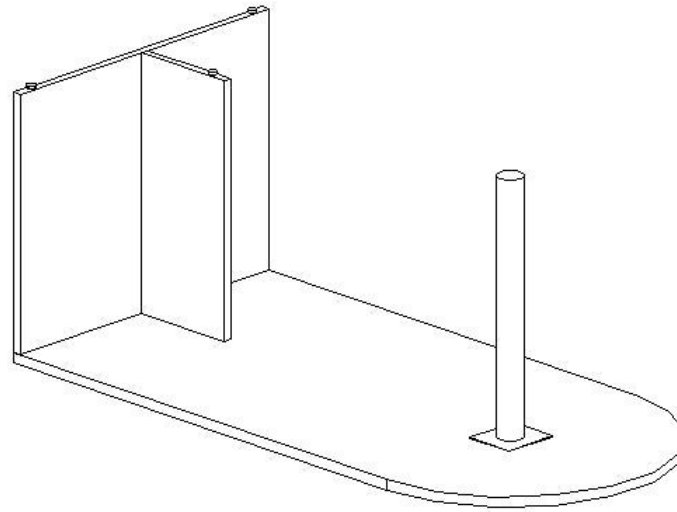

Step 02

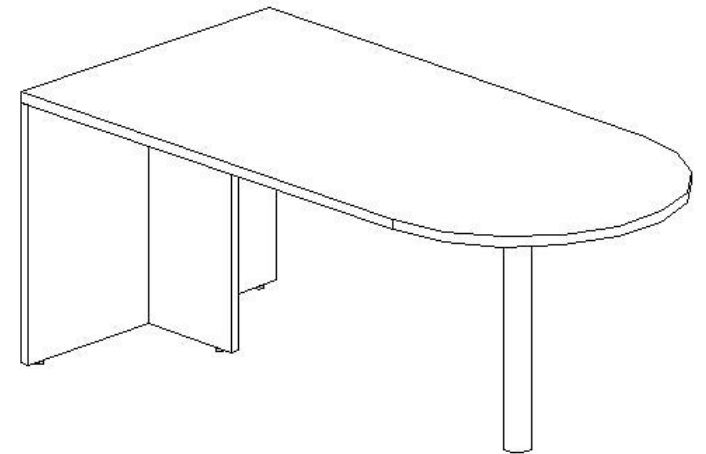


Step 03


# ASSEMBLY INSTRUCTIONS

AMBER


A621/A622

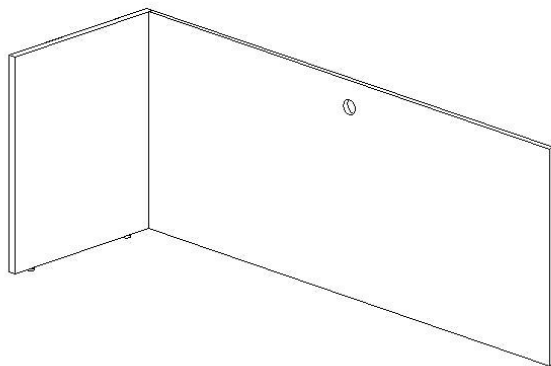


Step 01

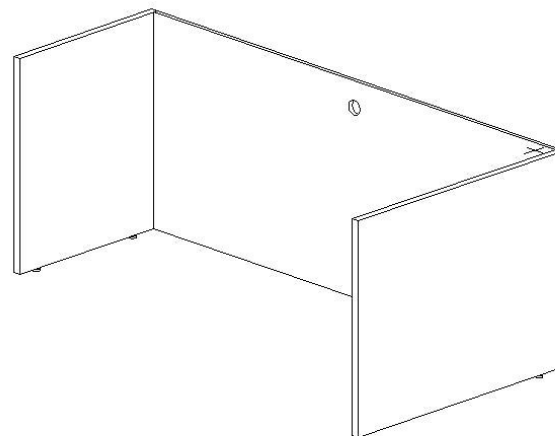

Step 02

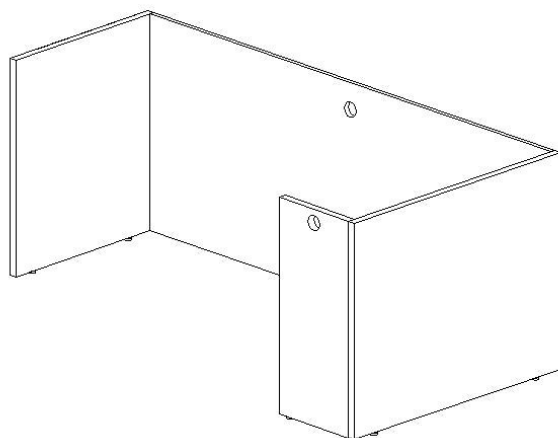

Step 03

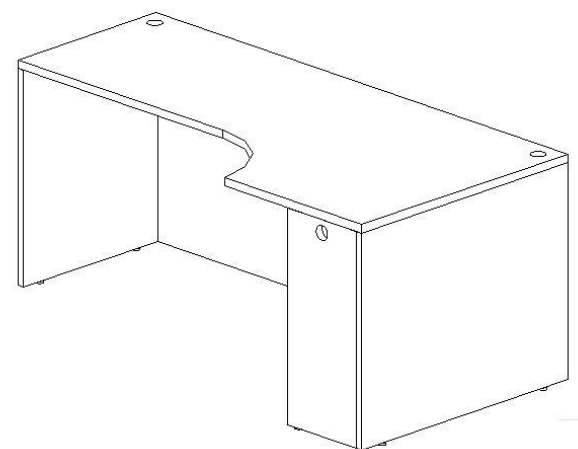


Step 04


# ASSEMBLY INSTRUCTIONS

AMBER

A623/A823/A923

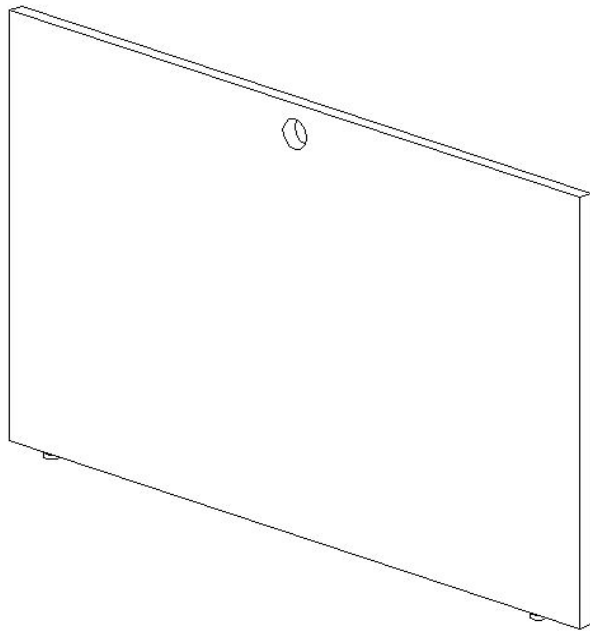

Step 01

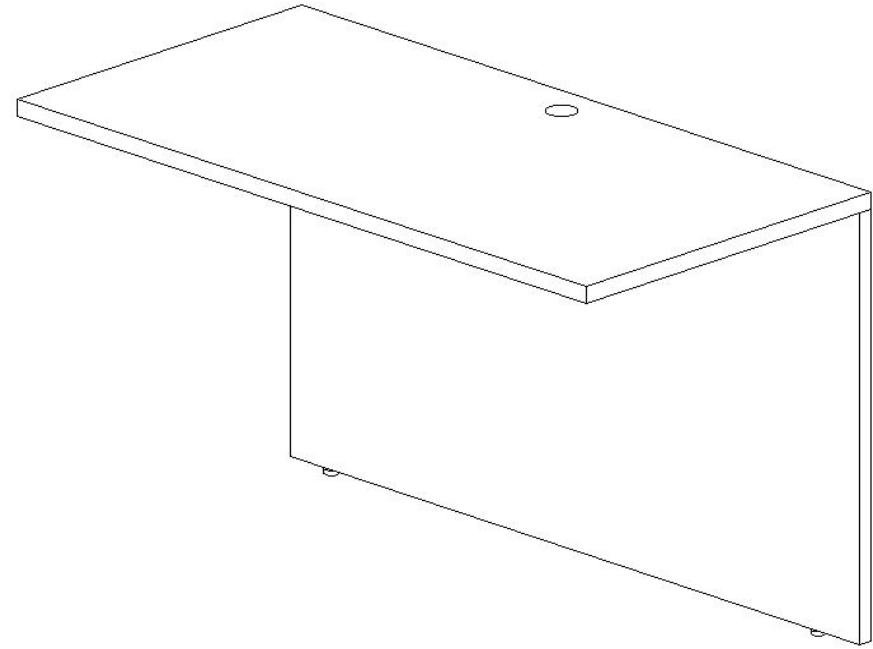


Step 02


# ASSEMBLY INSTRUCTIONS

AMBER


A720/A723

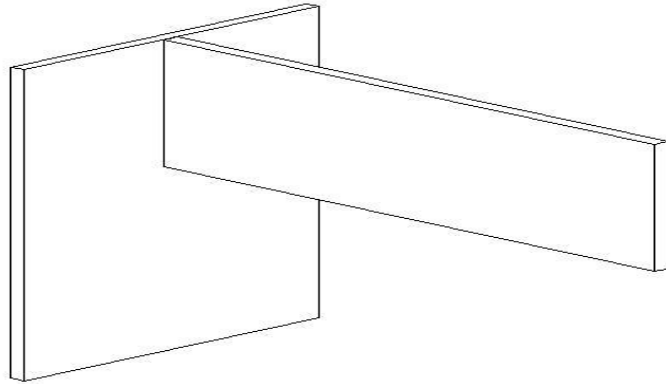

Step 01

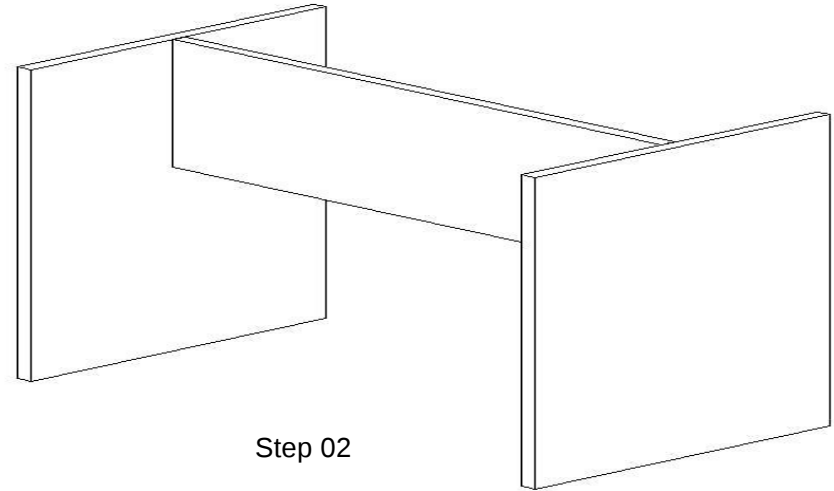

Step 02

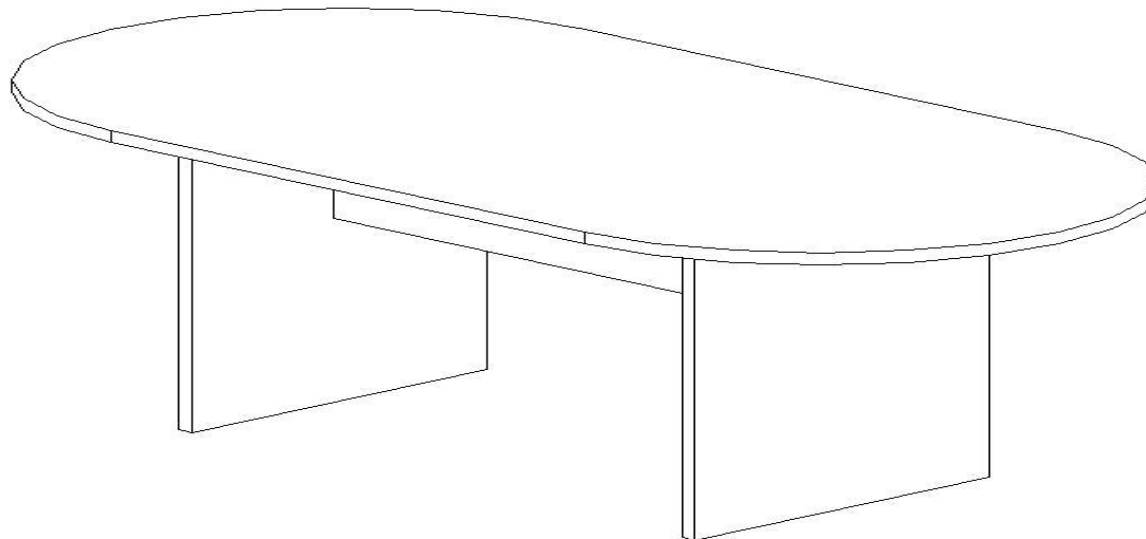


Step 03


# ASSEMBLY INSTRUCTIONS

AMBER

A721/A726

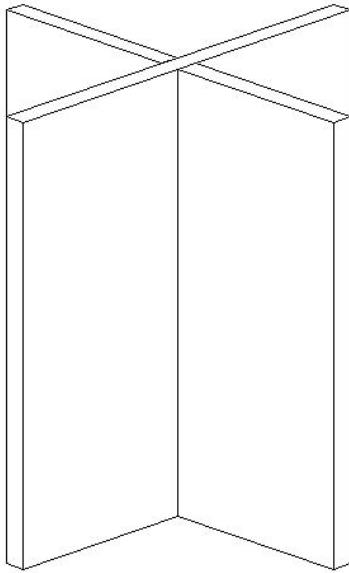

Step 01

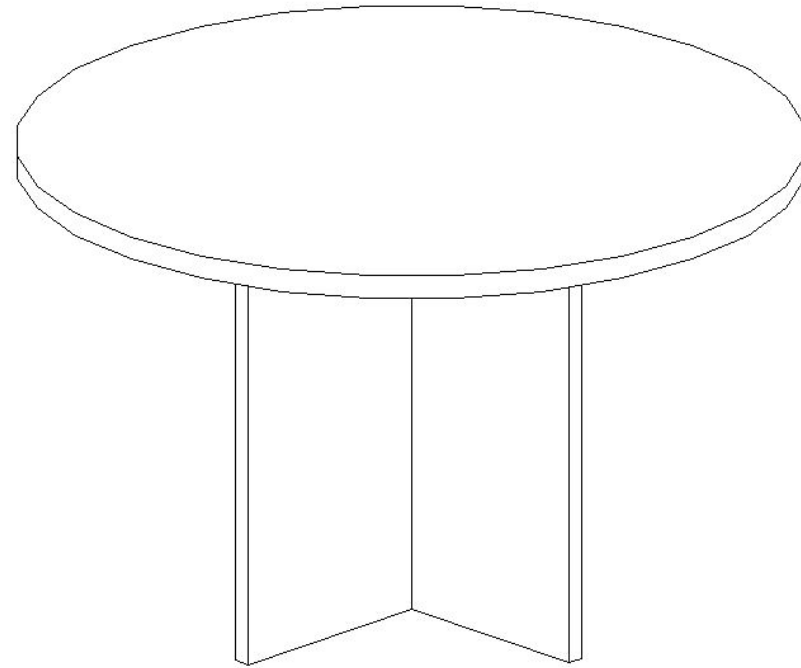


Step 02


# ASSEMBLY INSTRUCTIONS

AMBER


A728/A729

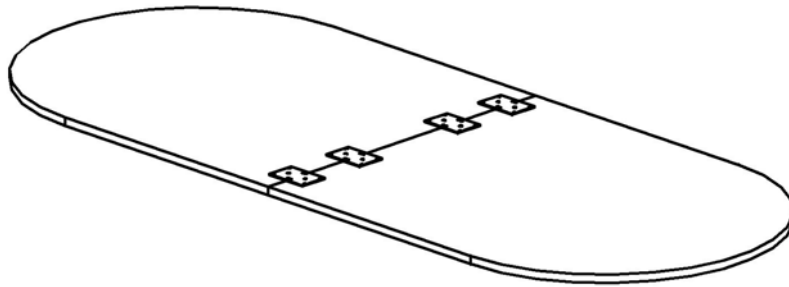


Step 01

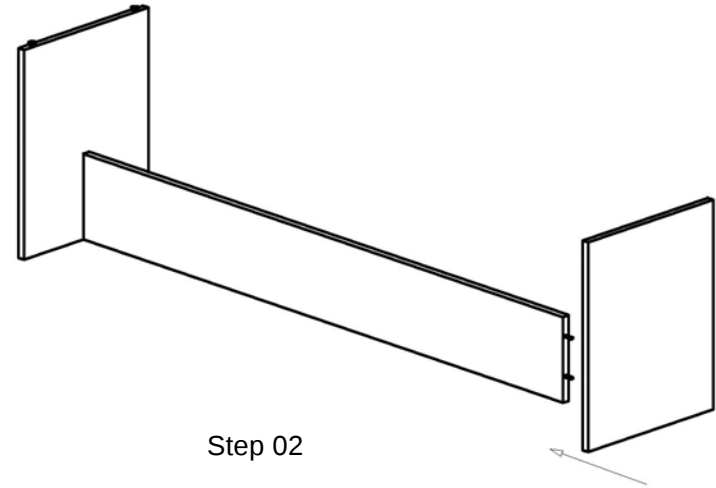

Step 02

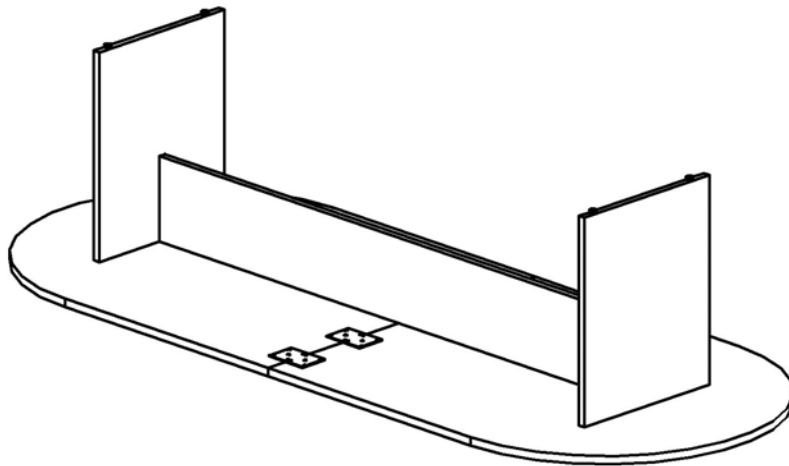

Step 03

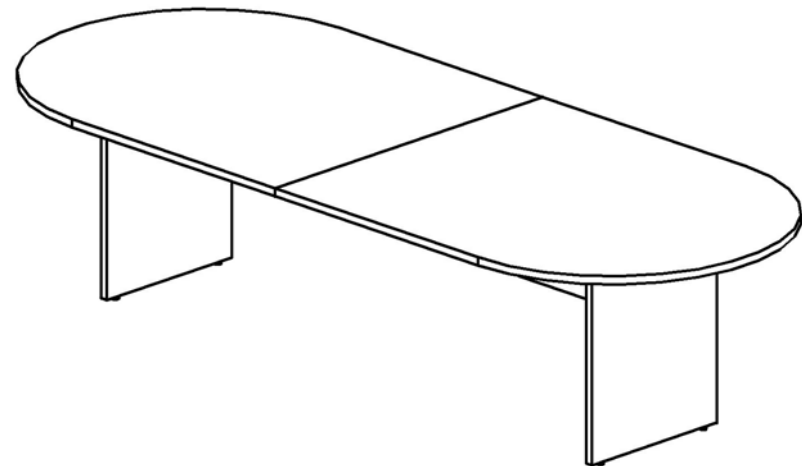


Step 04


# ASSEMBLY INSTRUCTIONS

AMBER


A822

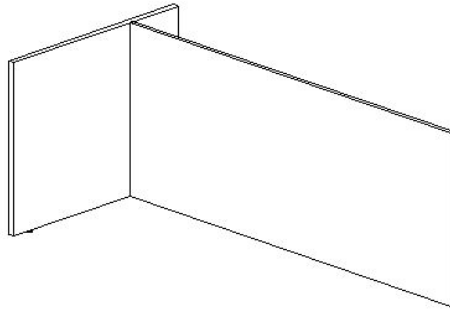

Step 01

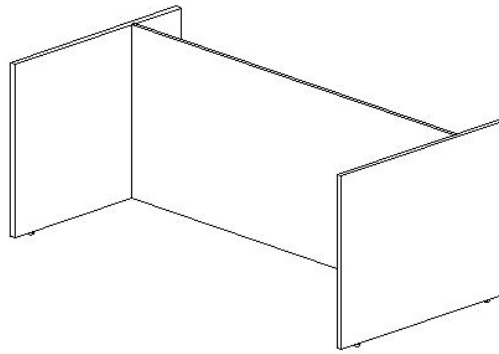

Step 02

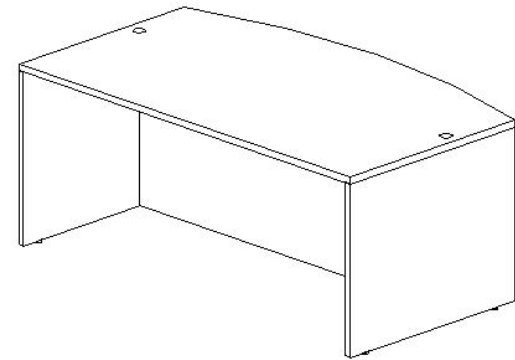


Step 03


# ASSEMBLY INSTRUCTIONS

AMBER


A825/A925

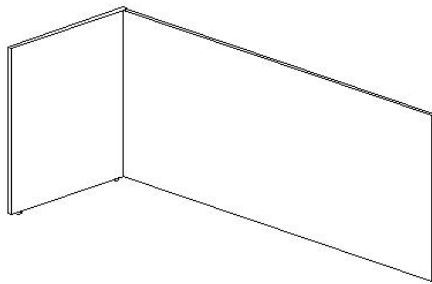

Step 01

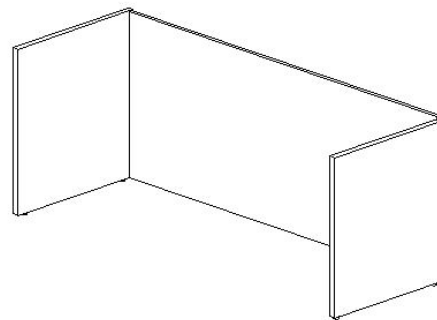

Step 02

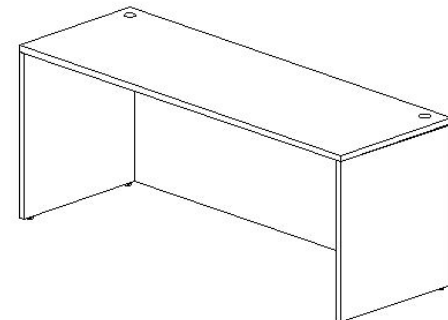


Step 03


# ASSEMBLY INSTRUCTIONS

AMBER


A829

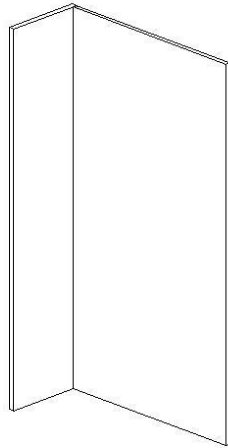


Step 01

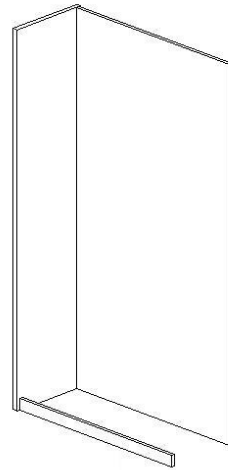


Step 02

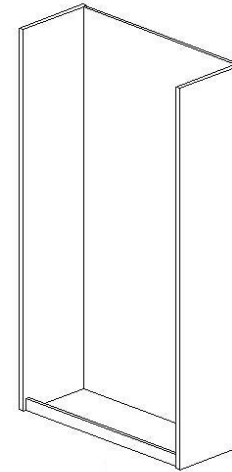

Step 03

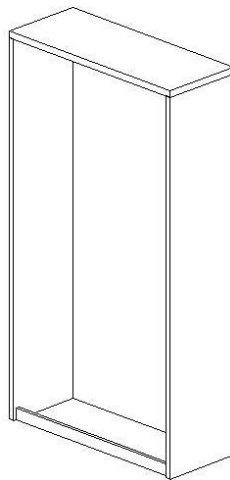

Step 04

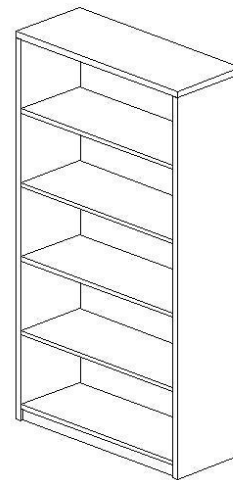


Step 05


# ASSEMBLY INSTRUCTIONS

AMBER


A828

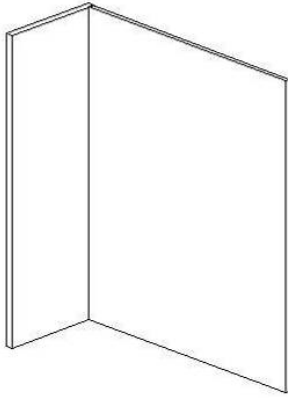


Step 01

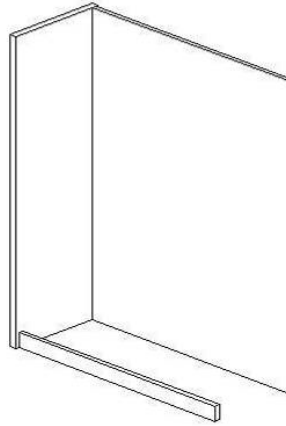


Step 02

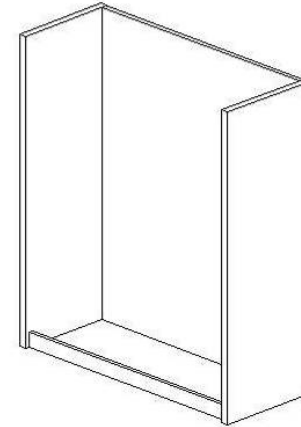

Step 03

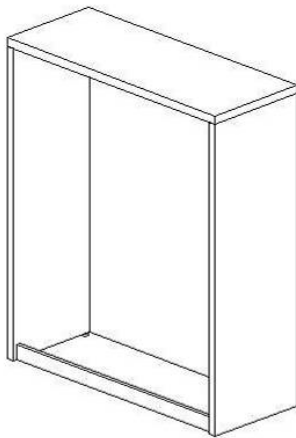

Step 04

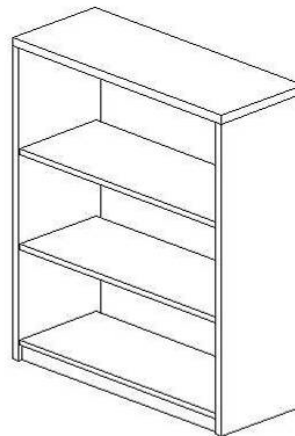


Step 05


# ASSEMBLY INSTRUCTIONS

AMBER


A122/A124

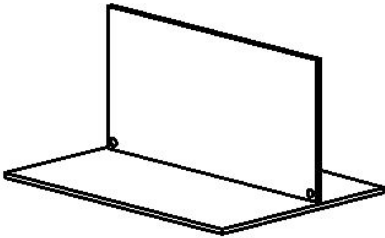


Step 01

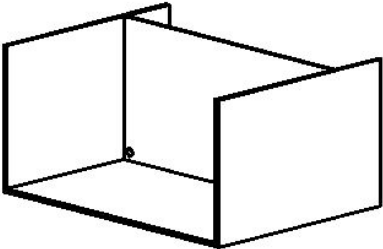


Step 02

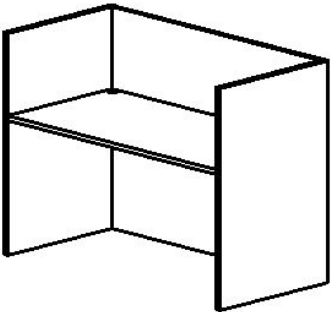


Step 03

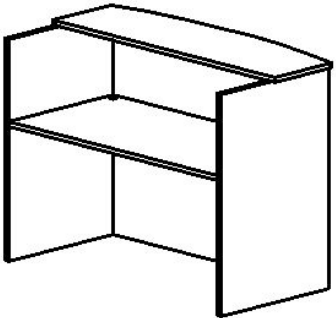


Step 04

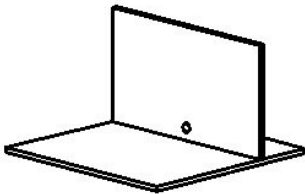


Step 01

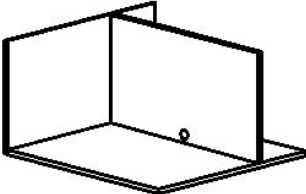

Step 02

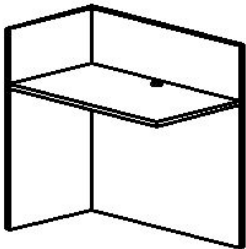

Step 03

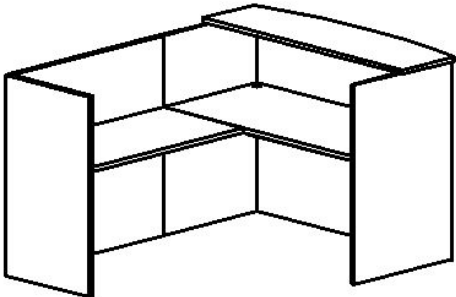

# ASSEMBLY INSTRUCTIONS

## AMBER

TACK BOARD FOR 66"/72" HUTCH - GR

