


# ASSEMBLY INSTRUCTIONS


RUBY/JADE

R124/R122/R125


J124/J122/J125

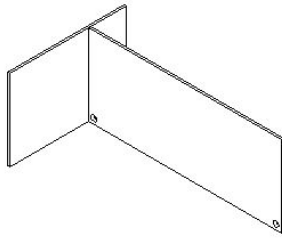


Step01

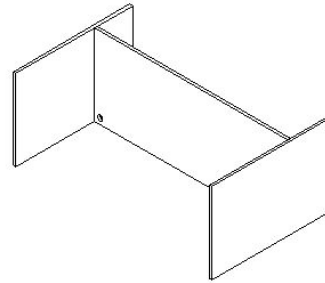


Step02

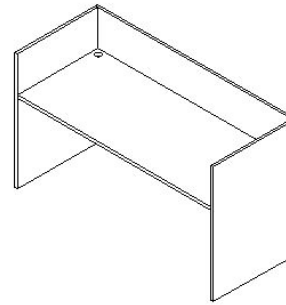


Step03

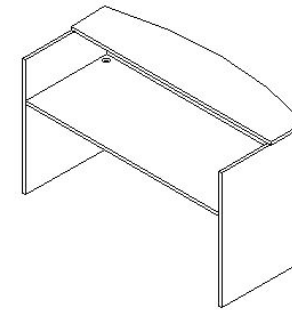


Step04

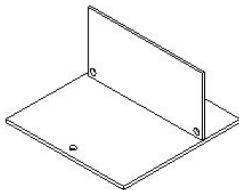


Step05

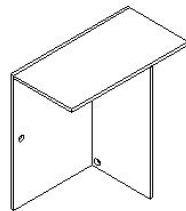

Step06

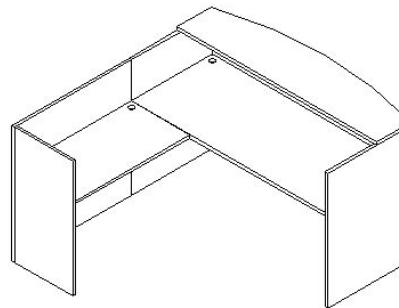

Step07

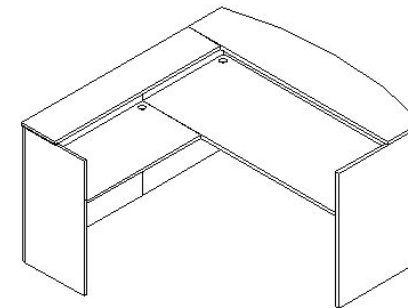


Step08


# ASSEMBLY INSTRUCTIONS

JADE


J124/J126

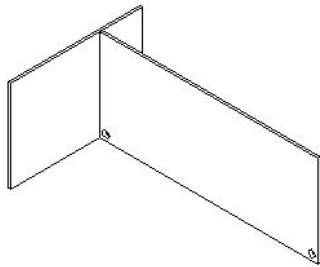


Step 01

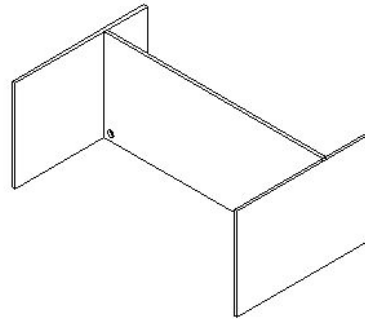


Step 02

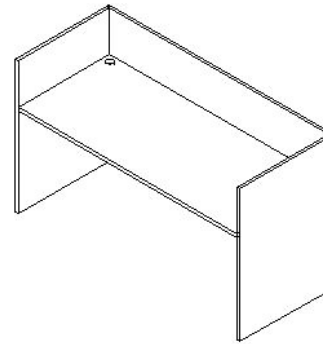


Step 03

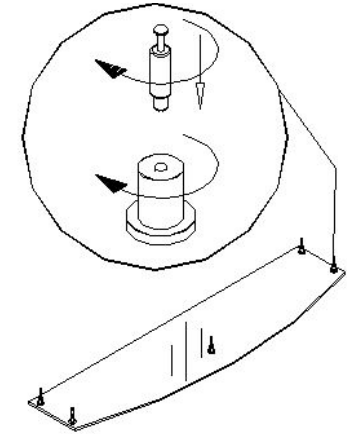


Step 04

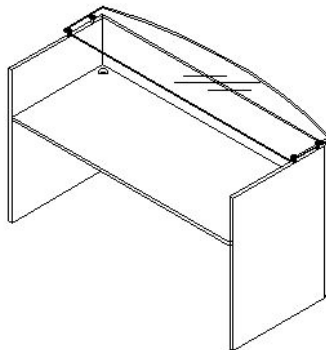


Step 05

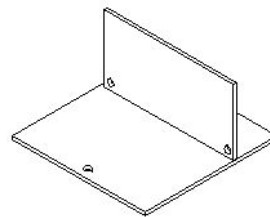

Step 06

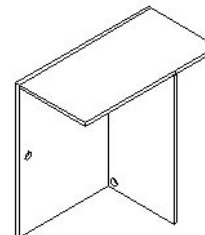

Step 07

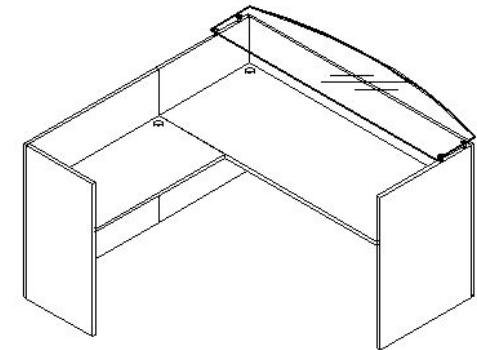


Step 08


# ASSEMBLY INSTRUCTIONS

RUBY


END TABE/COFFEE TABE  
R132/R132

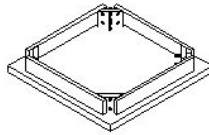


Step01

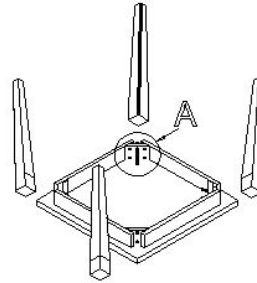


Step02

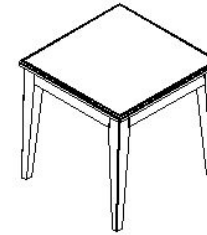


Step03

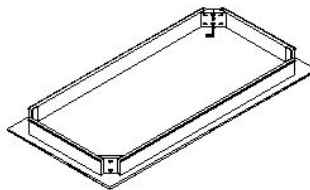


Step01

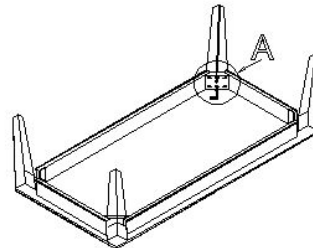

Step02

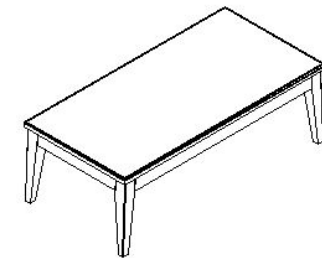

Step03

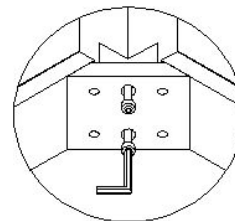


SCALE A

# ASSEMBLY INSTRUCTIONS


RUBY/JADE

R321/R322


J321J322

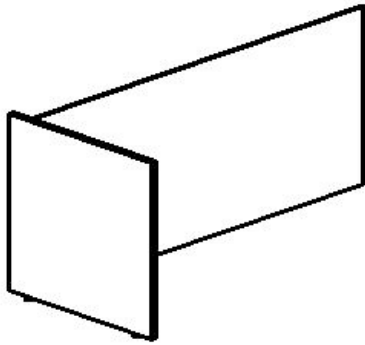

Step 01

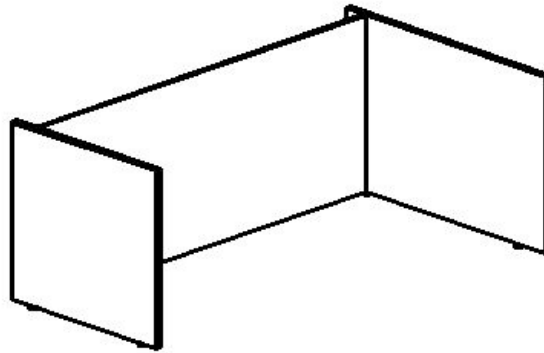

Step 02

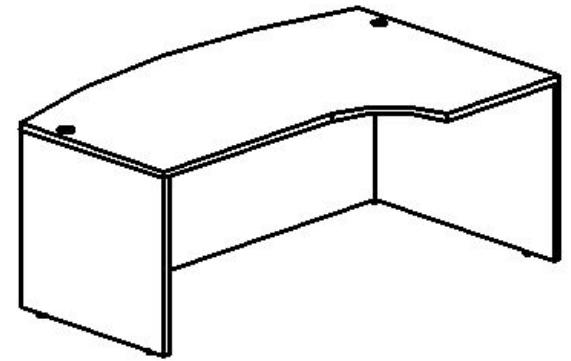


Step 03

# ASSEMBLY INSTRUCTIONS


RUBY/JADE

R324/R824/R924


J324J824/R924

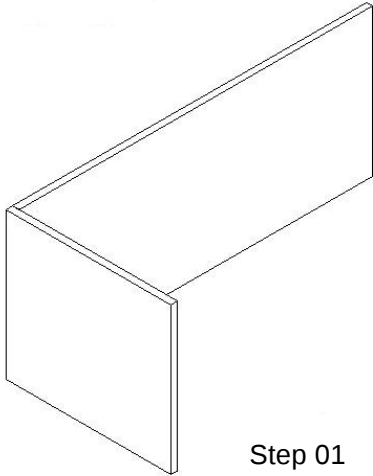


Step 01

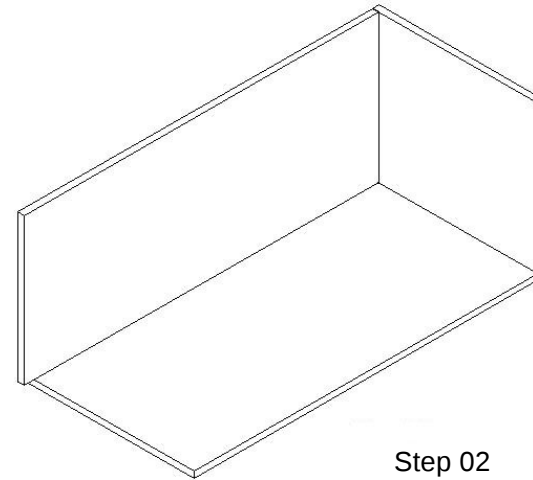

Step 02

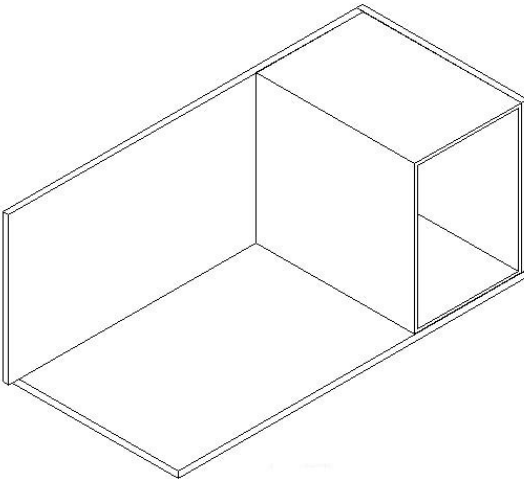

Step 03

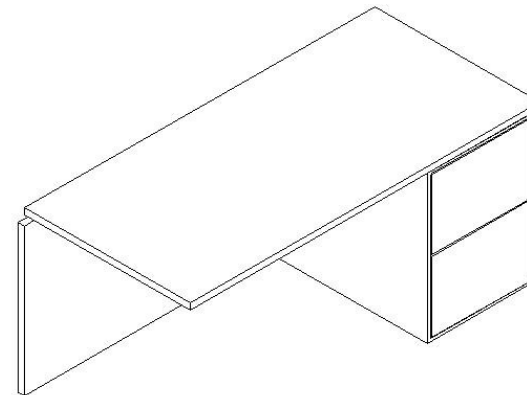


Step 04

# ASSEMBLY INSTRUCTIONS

RUBY/JADE

R510

J510


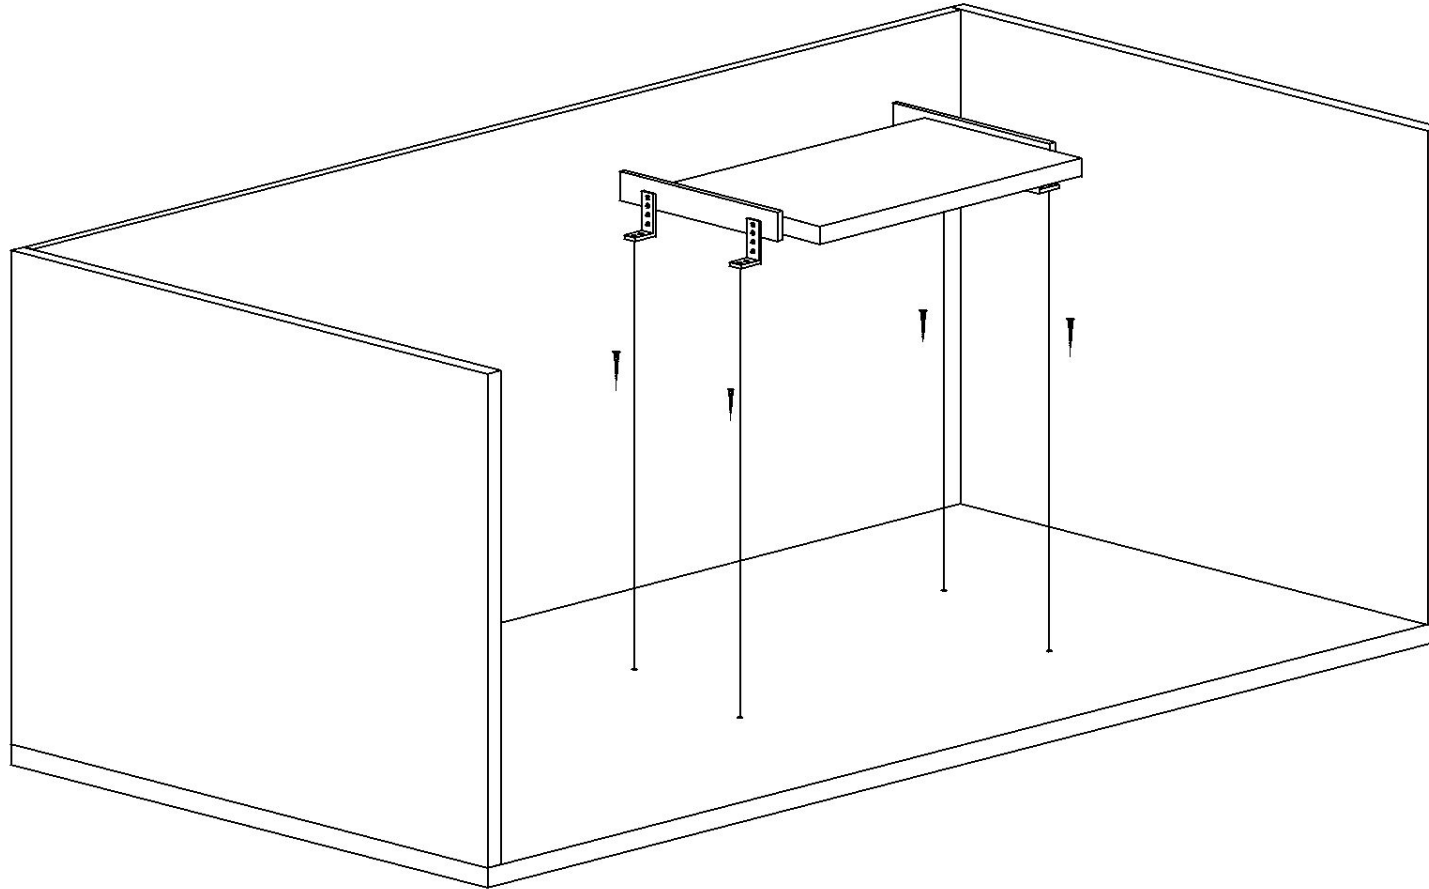


# ASSEMBLY INSTRUCTIONS

RUBY/JADE

R530

J530

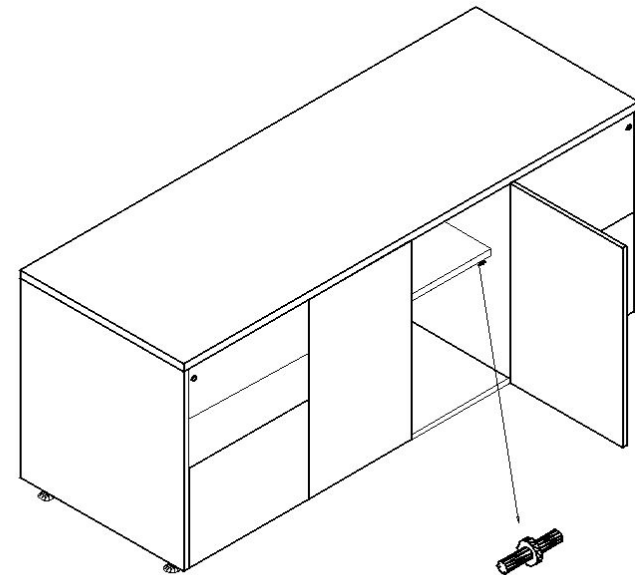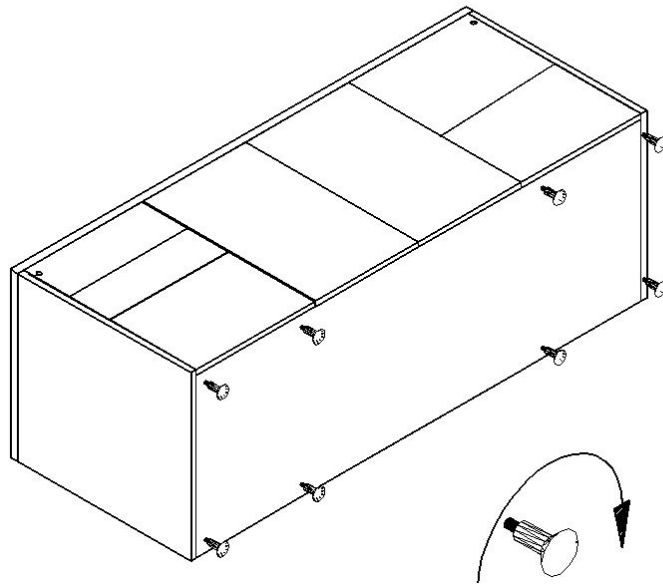

## Warning:


ALL 8glidcs must bl asscmbled or noneat all  
Cherry man industris, assumcs no rcponsibility for  
Improper assembly

# ASSEMBLY INSTRUCTIONS


RUBY/JADE

R620/R630


J620 /J630

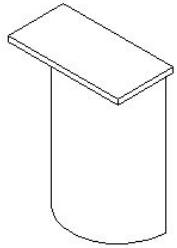

Step 01

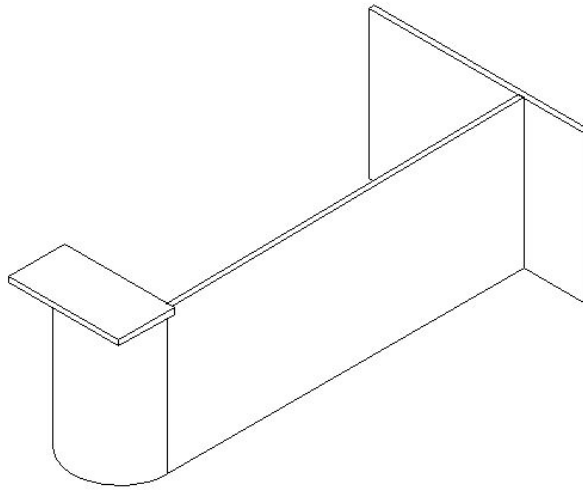

Step 02

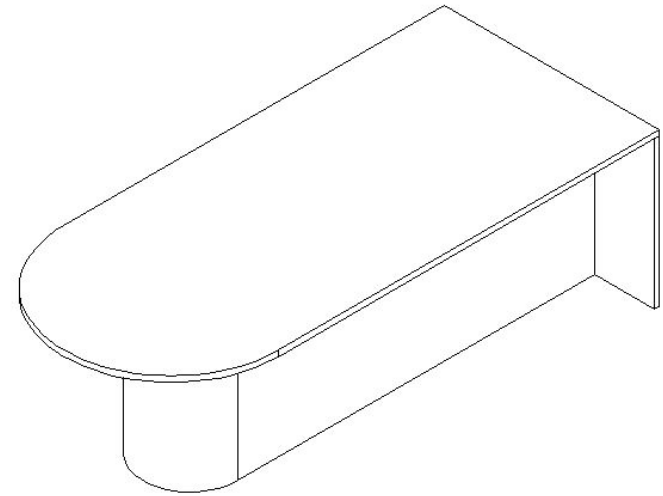


Step 03

# ASSEMBLY INSTRUCTIONS


RUBY/JADE

R621/R622


J621/J622

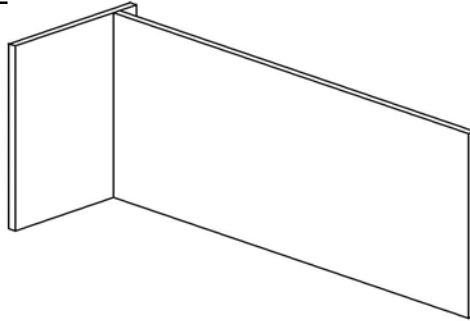


Step 01

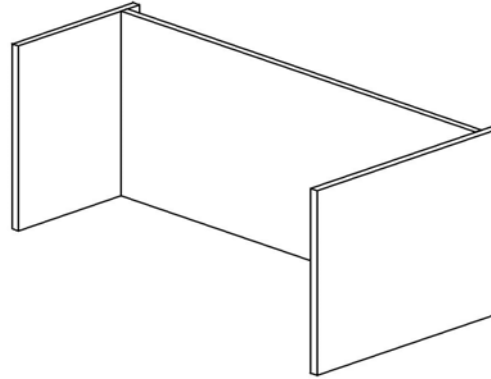


Step 02

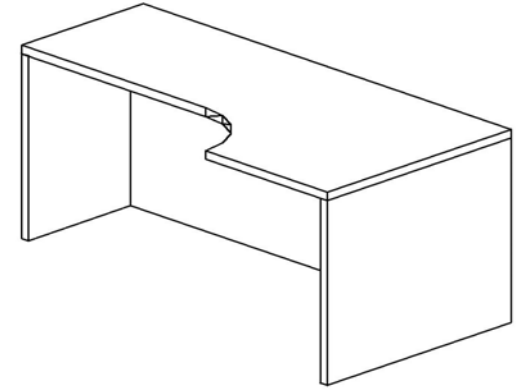

Step 03

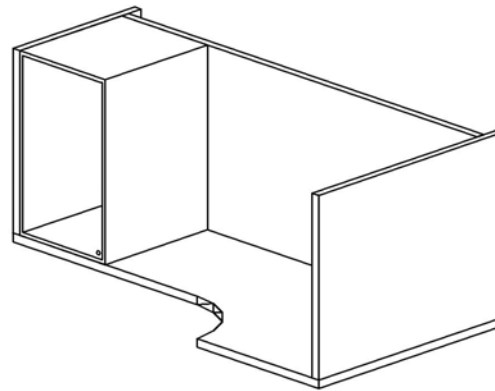

Step 04

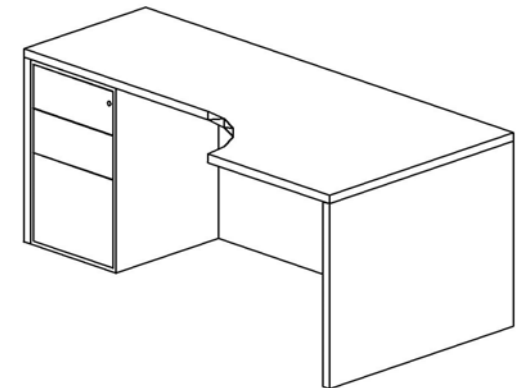


Step 05

# ASSEMBLY INSTRUCTIONS


RUBY/JADE

R623/R823/R923


J623 /J823/J923

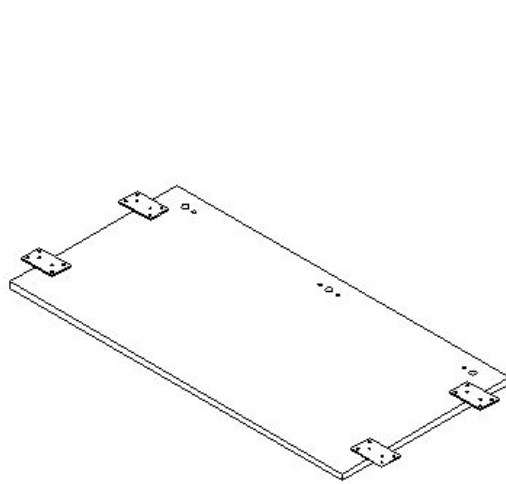

Step 01

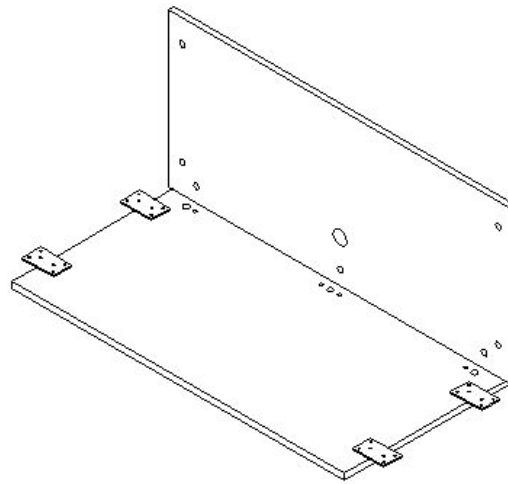

Step 02

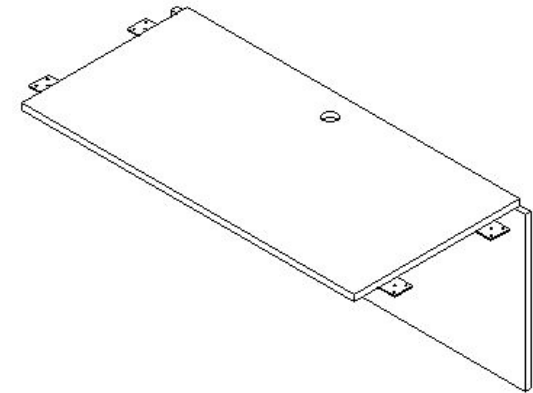


Step 03

# ASSEMBLY INSTRUCTIONS


RUBY/JADE

R624/R625/R630


J624 /J625 /J630

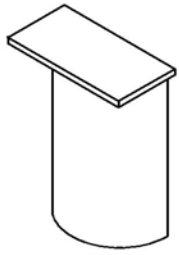

Step 01

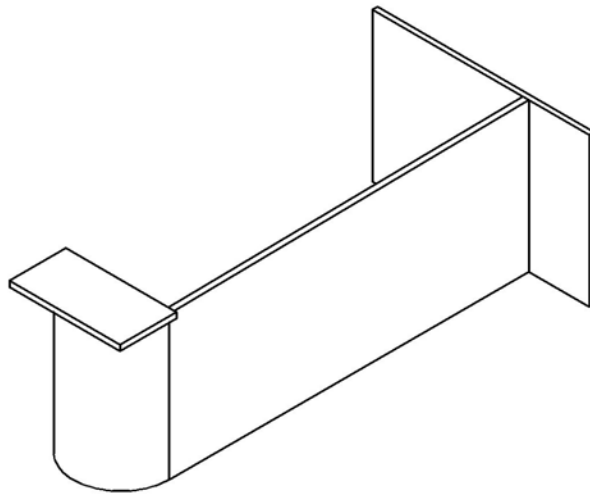

Step 02

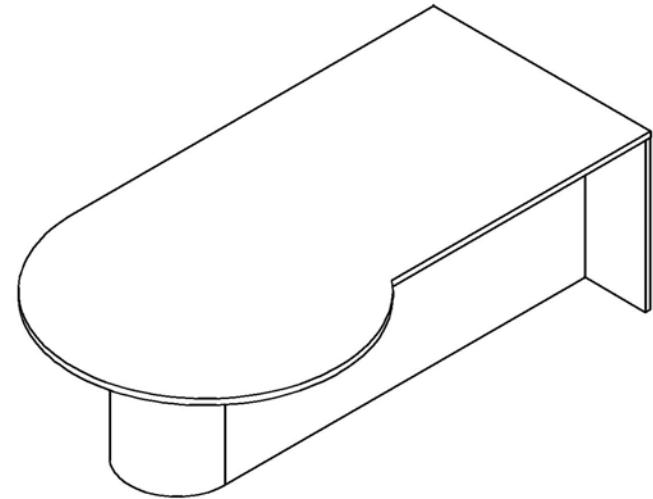


Step 03


# ASSEMBLY INSTRUCTIONS

JADE


J626 /J627 /J650

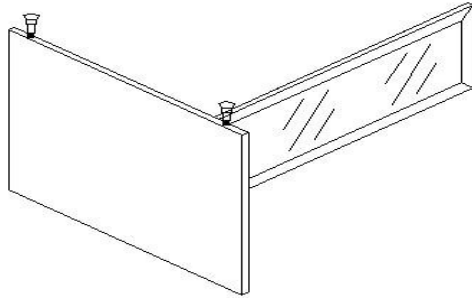


Step 01

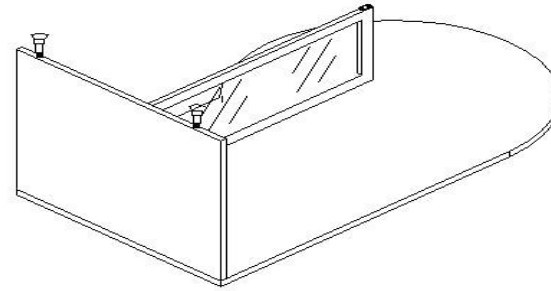

Step 02

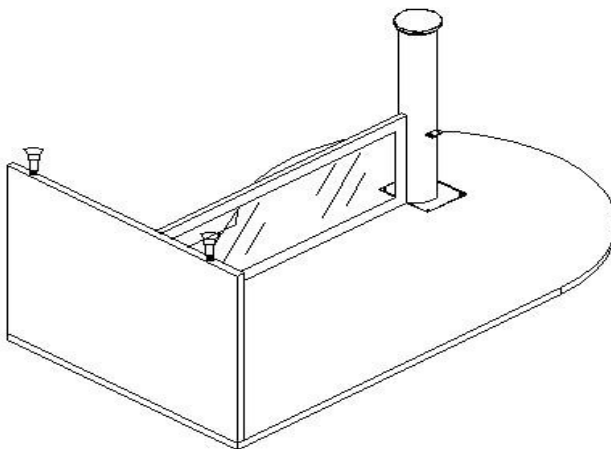

Step 03

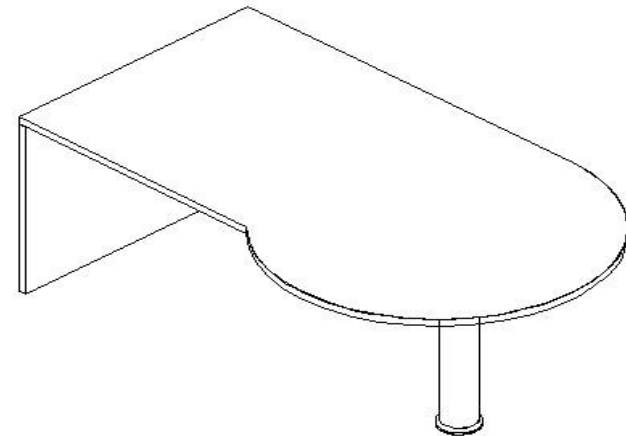


Step 04


# ASSEMBLY INSTRUCTIONS

JADE


J640 /J650

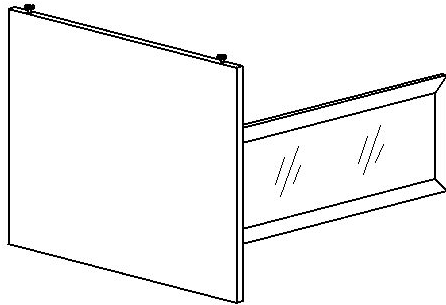


Step 01

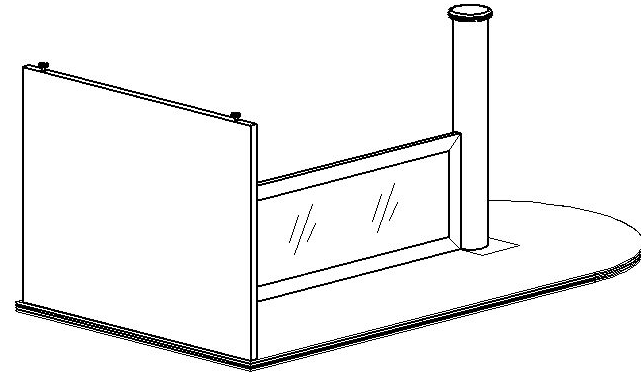

Step 02

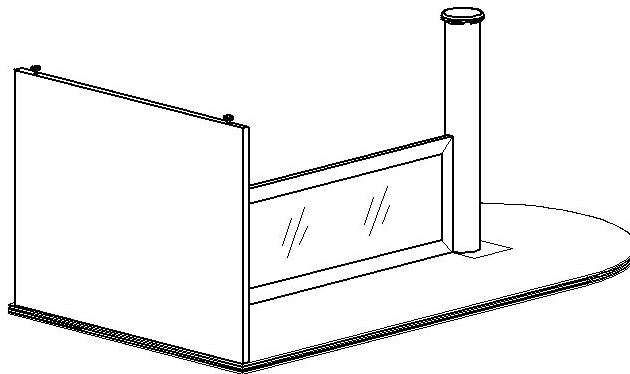

Step 03

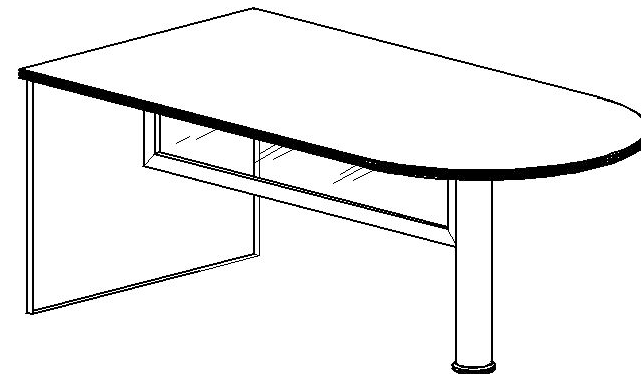

Step 04

# ASSEMBLY INSTRUCTIONS


## RUBY/JADE

R718/R719/R720


R723/R724/R725

J718 /J719/J720


J723/J724/J725

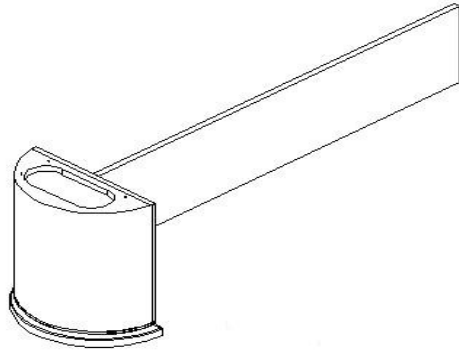


Step 01

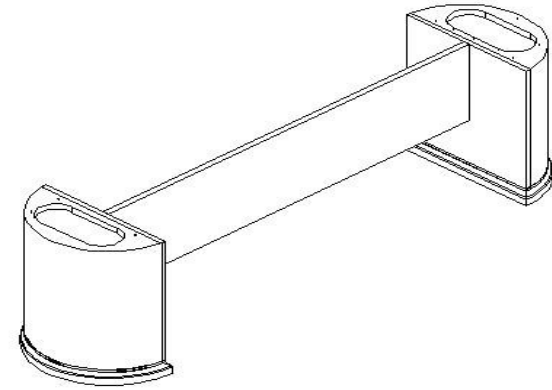

Step 02

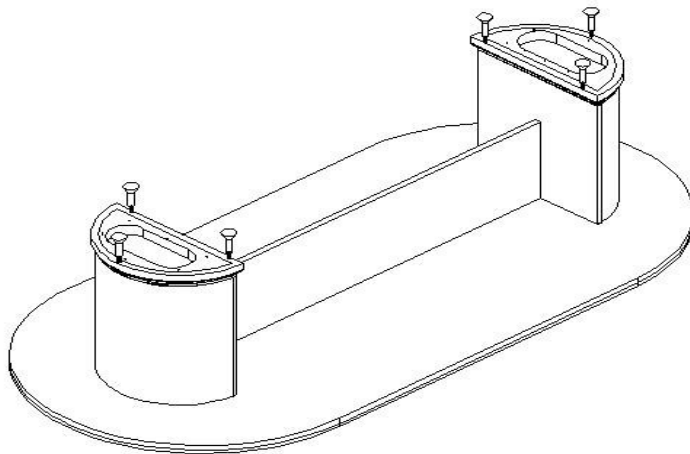

Step 03

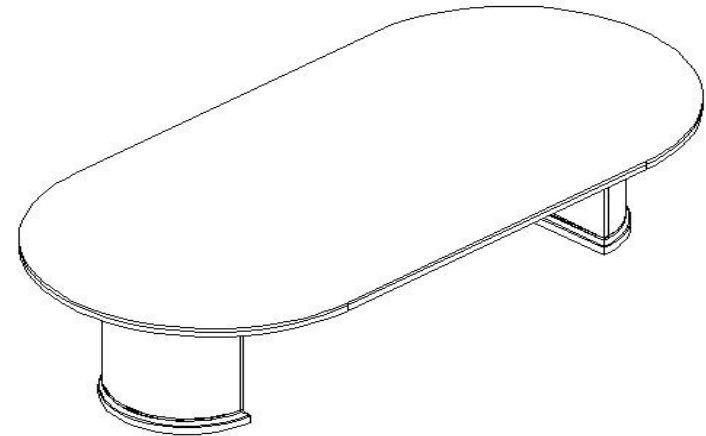


Step 04


# ASSEMBLY INSTRUCTIONS

RUBY/JADE


R721/R722/R726/R717  
J721 /J722 /J726/ J727

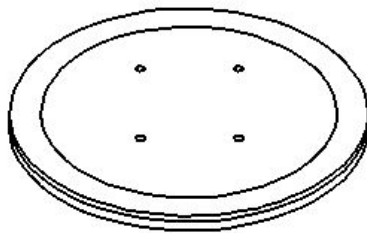

Step 01

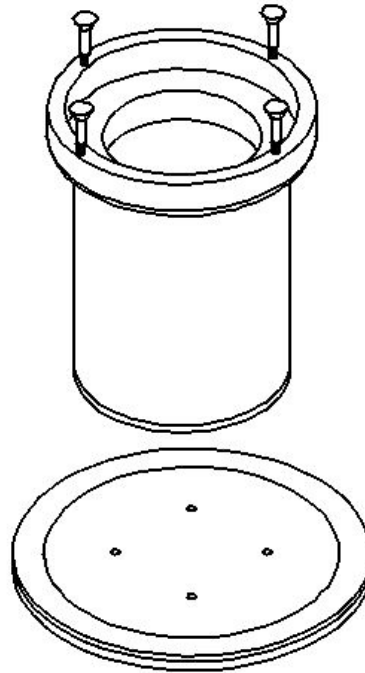

Step 02

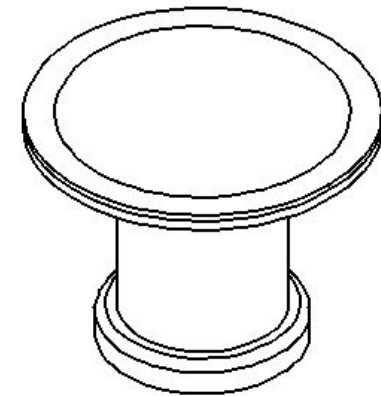


Step 03


# ASSEMBLY INSTRUCTIONS

## RUBY/JADE


R728/R729/R730/R731/R724  
J728 /J729 /J730/ J731 /J724

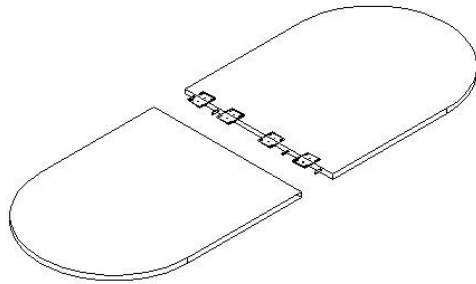


Step 01

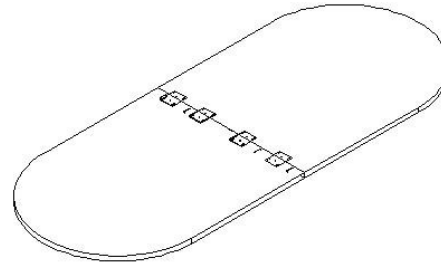


Step 02

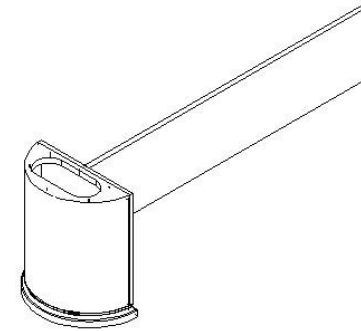


Step 03

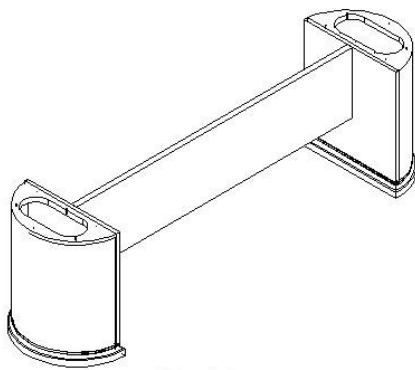

Step 04

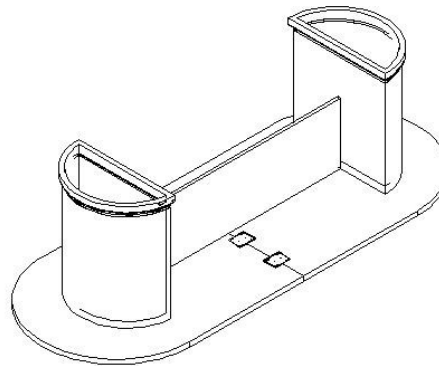

Step 05

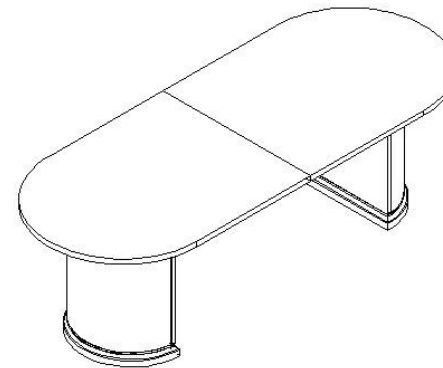


Step 06

# ASSEMBLY INSTRUCTIONS


RUBY/JADE

R732/R733/R727


J732 /J733 /J727

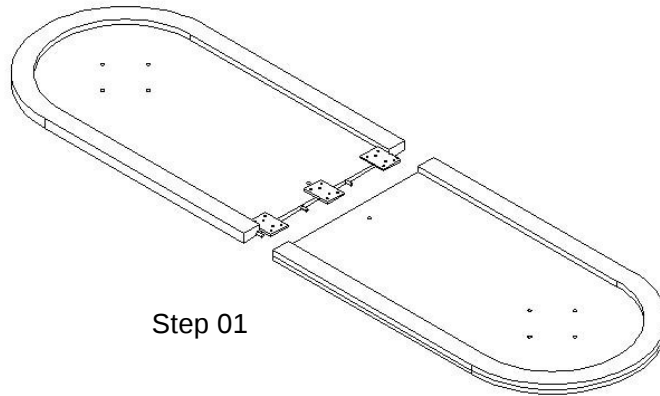


Step 01

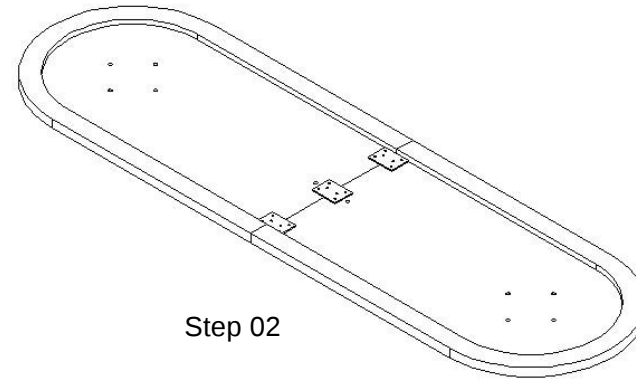

Step 02

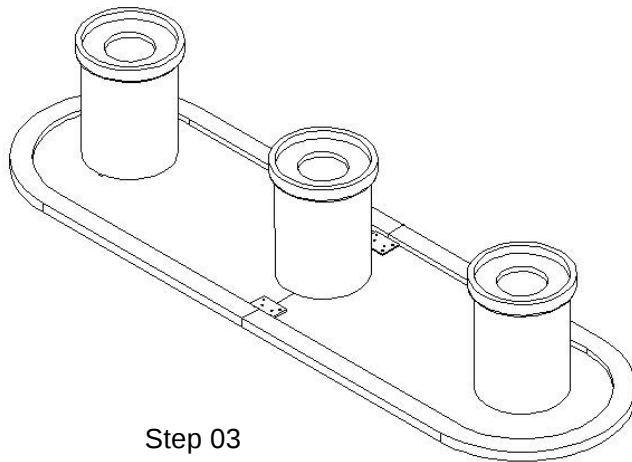

Step 03

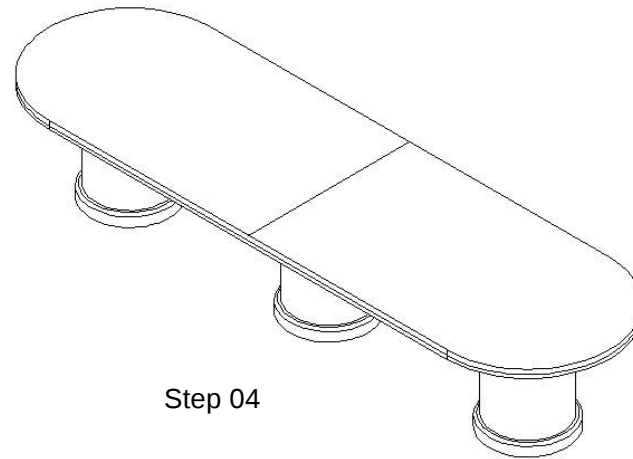


Step 04


# ASSEMBLY INSTRUCTIONS

RUBY/JADE


R821/R822/R825/R921/R925  
J821 /J822 /J825 /J921 /J925

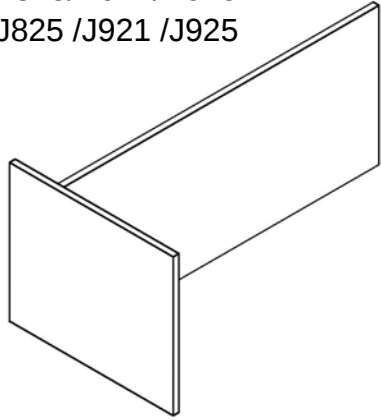


Step 01

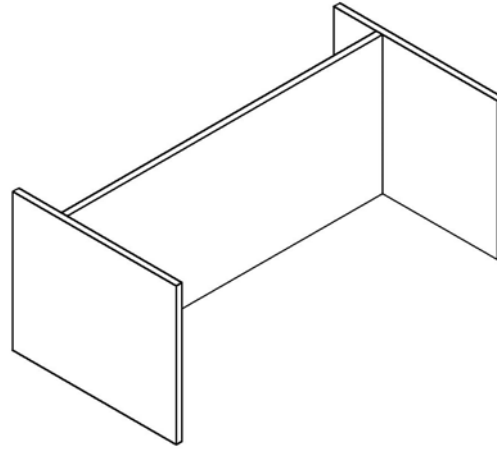


Step 02

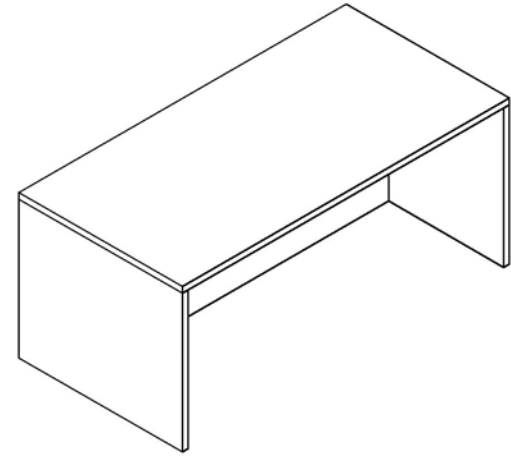

Step 03

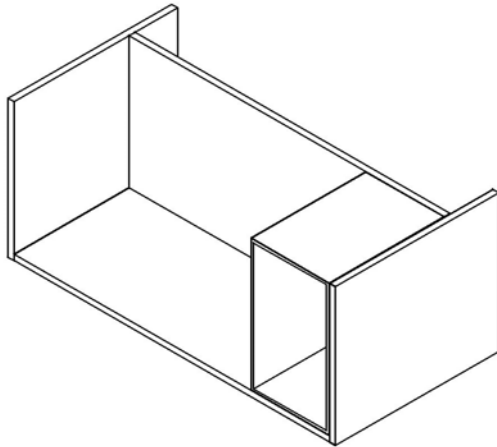

Step 04

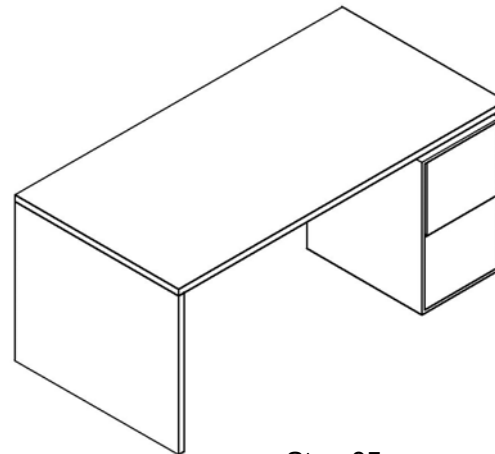



Step 05

# ASSEMBLY INSTRUCTIONS

RUBY/JADE

R826

J426 /J427 /J429

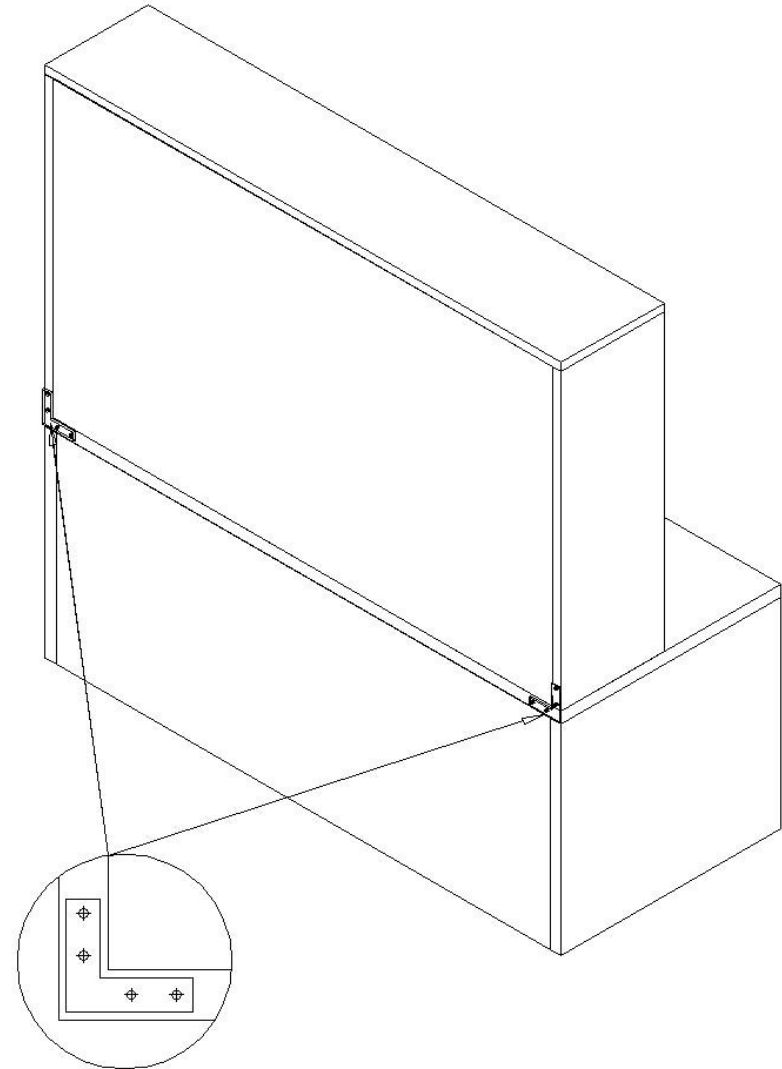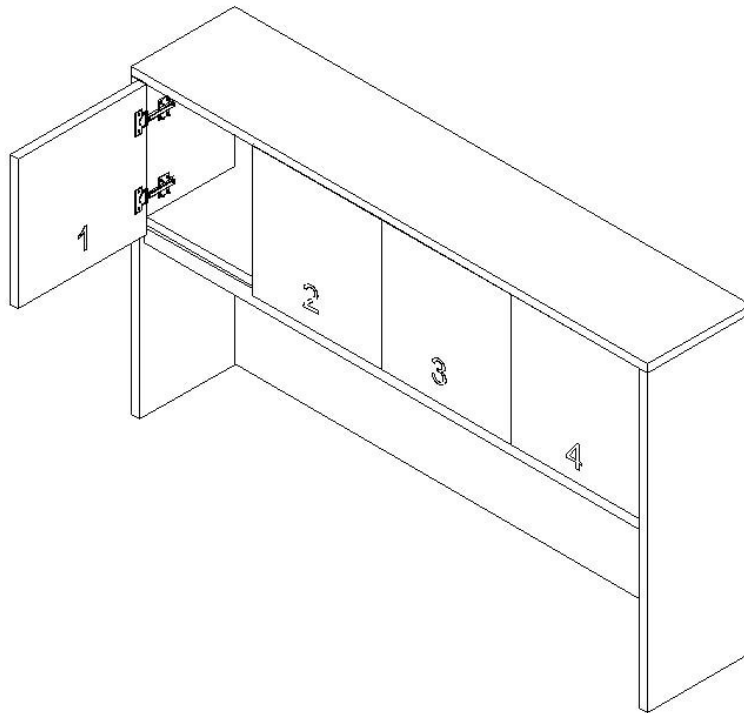


# ASSEMBLY INSTRUCTIONS


RUBY/JADE

R828


J828

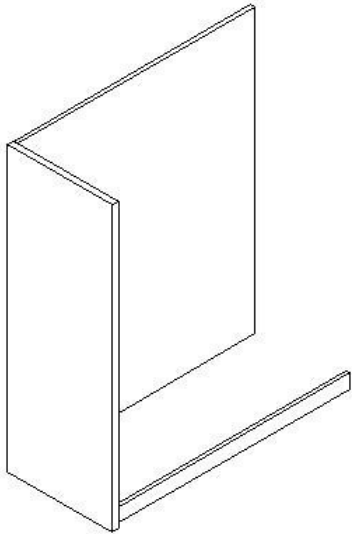


Step 01

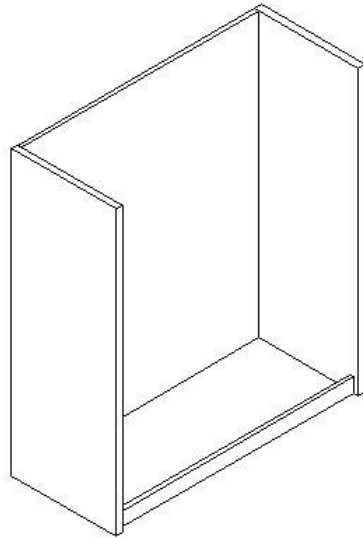

Step 02

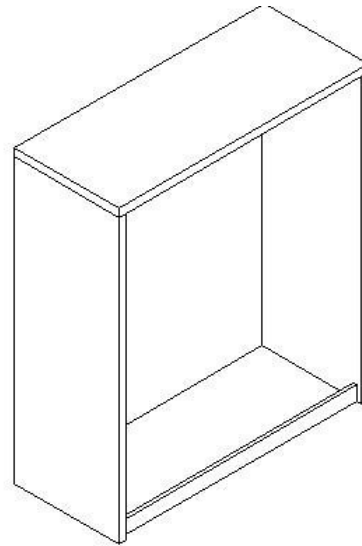

Step 03

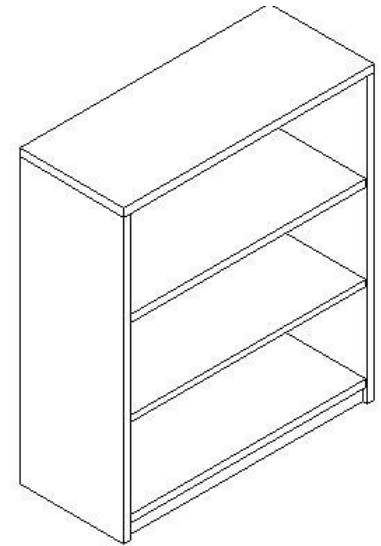


Step 04

# ASSEMBLY INSTRUCTIONS


RUBY/JADE

R829


J829

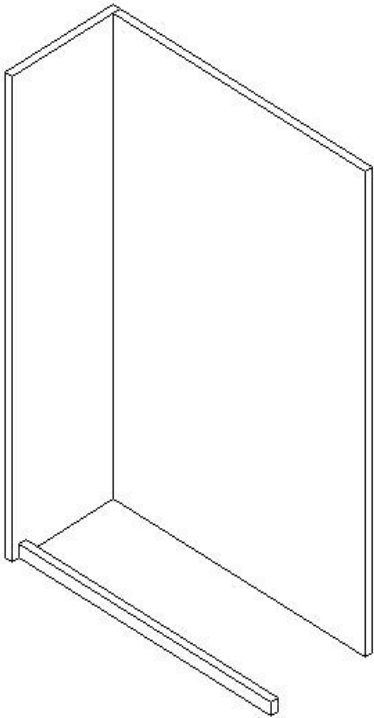


Step 01

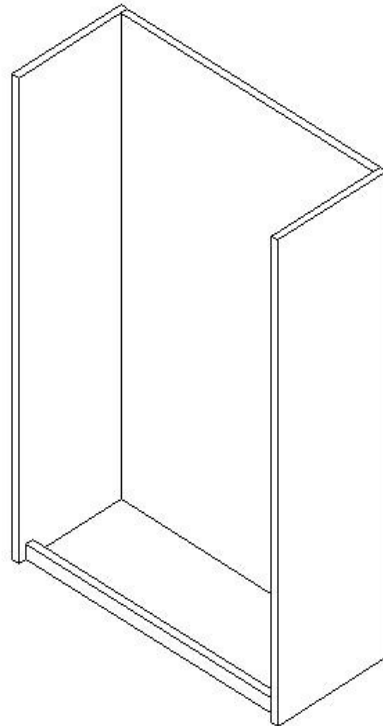

Step 02

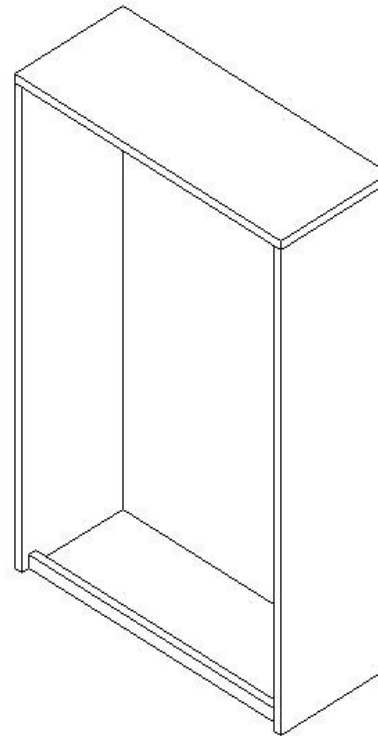

Step 03

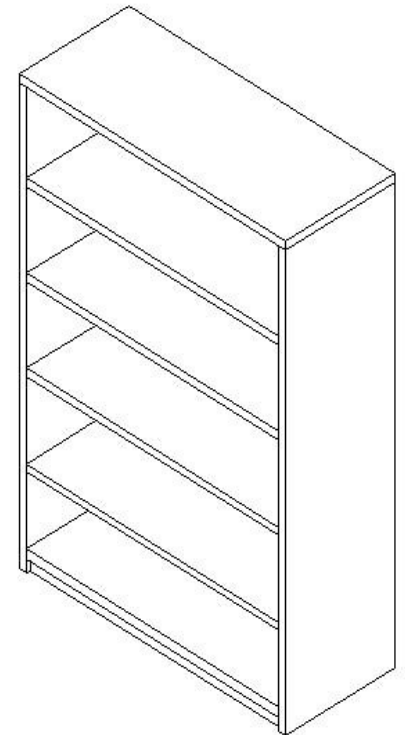


Step 04

# ASSEMBLY INSTRUCTIONS

RUBY/JADE

R830


J830

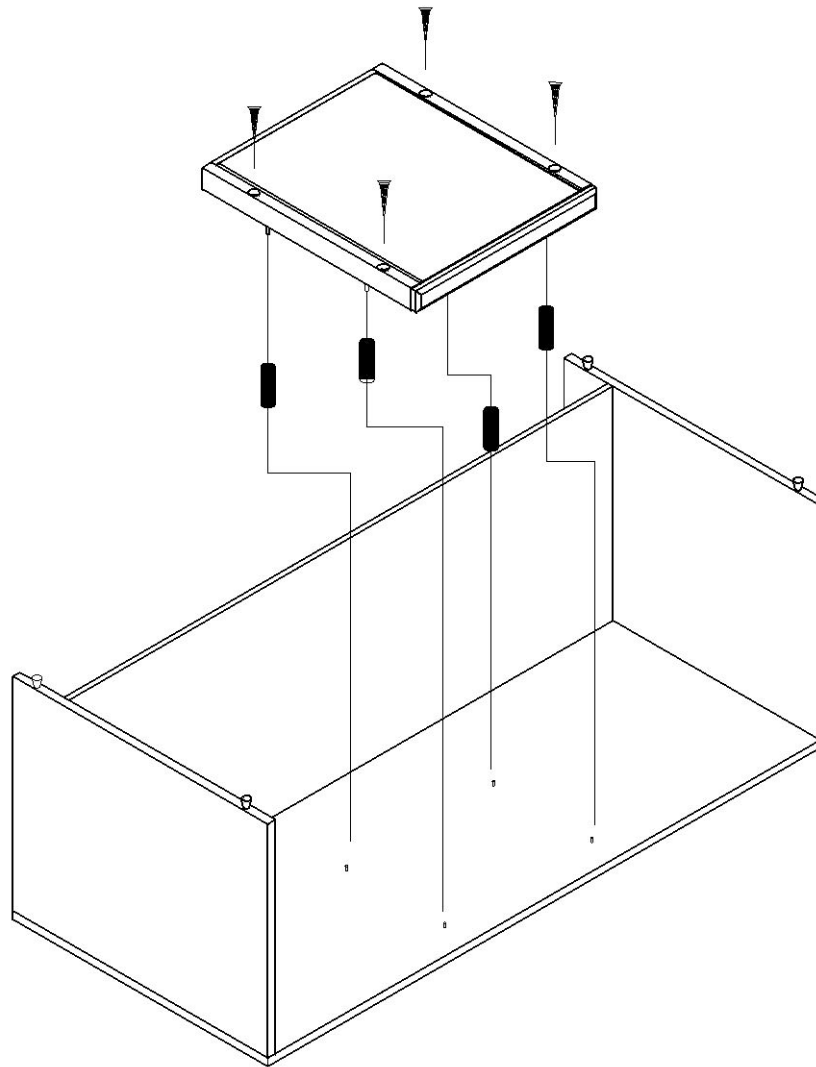

# ASSEMBLY INSTRUCTIONS

RUBY/JADE


TACK BOARD FOR 66"/72" HUTCH - GRE

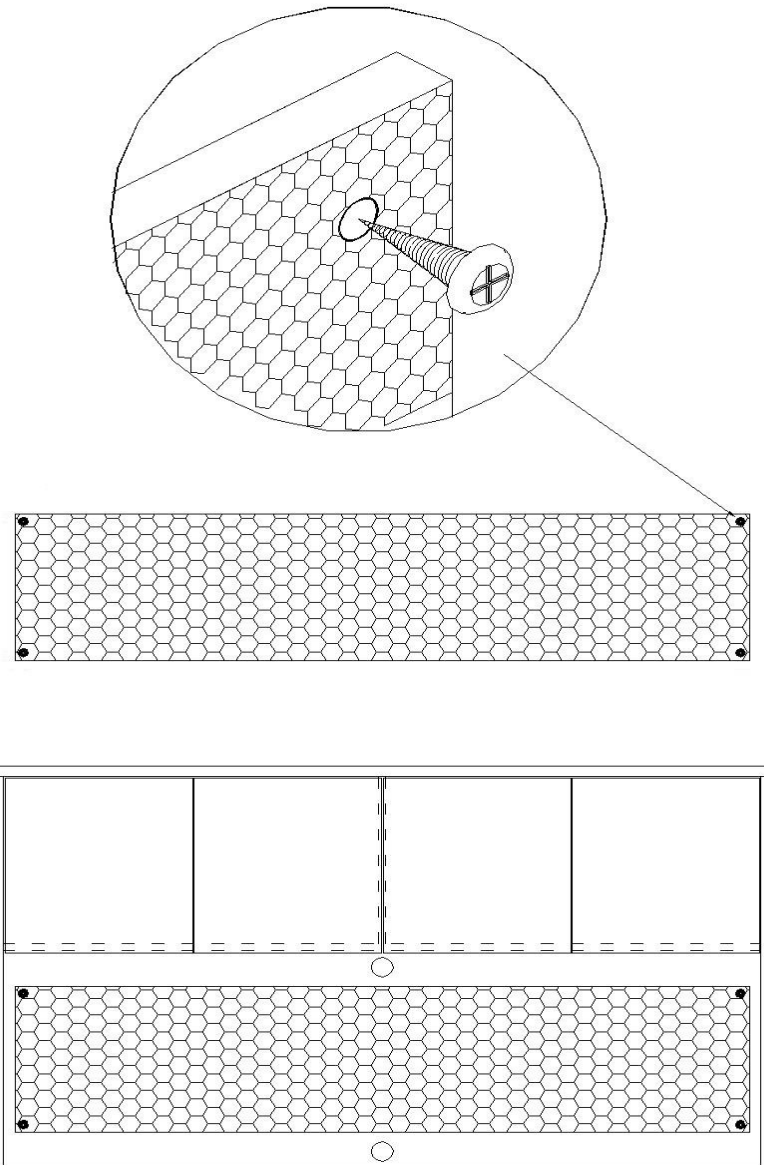


# ASSEMBLY INSTRUCTIONS

JADE


END TABE/COFFEE TABE  
J132/J132

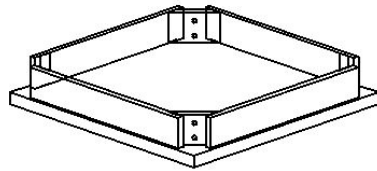


Step 01

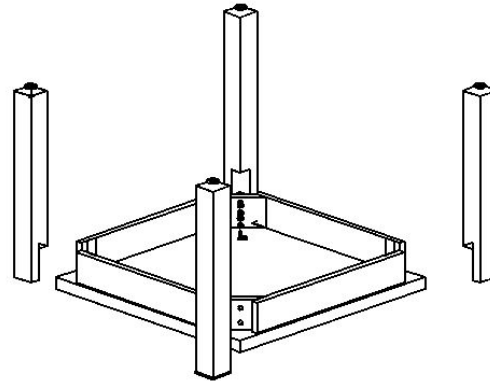

Step 02

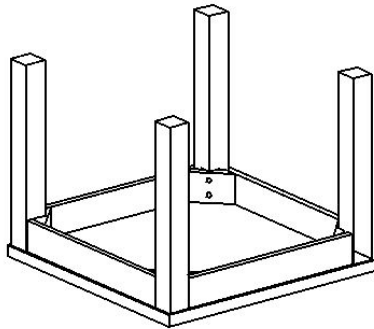

Step 03

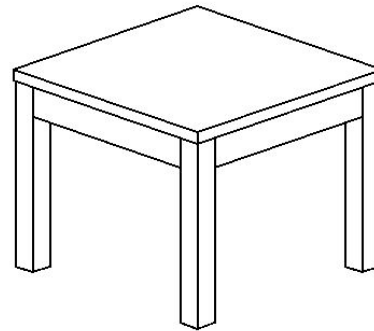

Step 04

