



Dimensions

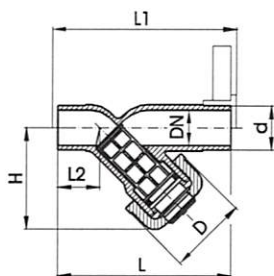


PVC-U with solvent cement spigots metric

d	DN	Zoll	D	L	L1	L2	H	closest
mm	mm	inch	mm	mm	mm	mm	mm	inch
20	15	1/2"	43	124	130	28	65	1/2
25	20	3/4"	47	144	150	37	76	3/4
32	25	1"	56	154	160	37	90	1
40	32	1 1/4"	64	174	180	44	104	1 1/4
50	40	1 1/2"	82	194	200	48	124	1 1/2
63	50	2"	95	224	230	60	148	2
75	65	2 1/2"	106	284	290	74	188	2 1/2
90	80	3"	120	300	310	85	205	3

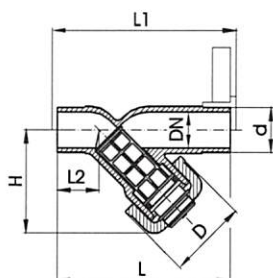


PVC-C with solvent cement spigots metric

d	DN	Zoll	D	L	L1	L2	H	closest
mm	mm	inch	mm	mm	mm	mm	mm	inch
20	15	1/2"	48	124	130	28	65	1/2
25	20	3/4"	54	144	150	37	76	3/4
32	25	1"	62	154	160	37	90	1
40	32	1 1/4"	71	174	180	44	104	1 1/4
50	40	1 1/2"	88	194	200	48	124	1 1/2
63	50	2"	103	224	230	60	148	2

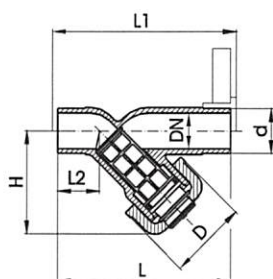

ABS with solvent cement spigots metric

d	DN	Zoll	D	L	L1	L2	H	closest
mm	mm	inch	mm	mm	mm	mm	mm	inch
20	15	1/2"	48	124	130	28	65	1/2
25	20	3/4"	54	144	150	37	76	3/4
32	25	1"	62	154	160	37	90	1
40	32	1 1/4"	71	174	180	44	104	1 1/4
50	40	1 1/2"	88	194	200	48	124	1 1/2
63	50	2"	103	224	230	60	148	2

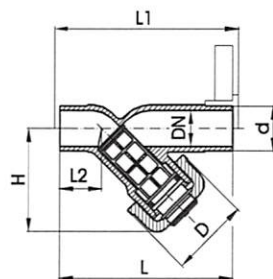

PP with fusion sockets metric

d	DN	Zoll	D	L	L2	H	z	closest
mm	mm	inch	mm	mm	mm	mm	mm	inch
20	15	1/2"	52	168	130	75	140	1/2
25	20	3/4"	62	192	150	80	160	3/4
32	25	1"	68	206	160	90	170	1
40	32	1 1/4"	85	230	180	110	190	1 1/4
50	40	1 1/2"	85	256	200	125	210	1 1/2
63	50	2"	102	294	230	150	240	2

Planning Fundamentals

The following link will lead you to the Georg Fischer Planning Fundamentals. These detailed documents will support you by choosing the right valve for your application.

http://www.gfps.com/content/gfps.com/en/support_and_services/planning_assistance/planning_fundamentals.html?lang=en