



VDREXKIT-ED

INSTALLATION INSTRUCTIONS

The VDREXKIT-ED is a field installable request to exit kit (SPDT) for Von Duprin 33/35 & 98/99 series exit devices..



REX Switch Wiring
GREEN: Common
BLUE: Normally Open
GREY: Normally Closed

VDREXKIT-ED INCLUDES

- A. REX Label
- B. REX Switch
- C. 2 - Phillips Screws
- D. 9/64 drill bit


TOOLS REQUIRED

- Phillips Screw Driver


SPECIFICATIONS

- Green/Black - Common
- Blue/Black - Normally Open (NO)
- Grey/Black - Normally Closed (NC)
- .5A 24VAC/DC


1. Locate the 2 Holes in the activating bracket at the end of the device.

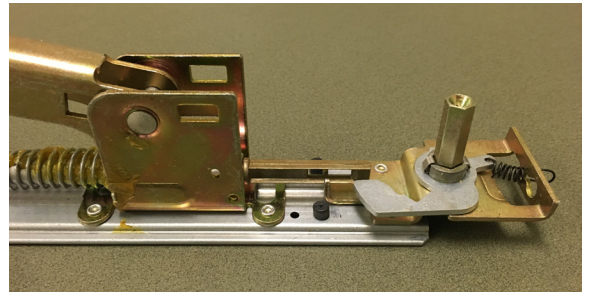

2. Drill top hole with 9/64 drill bit provided.

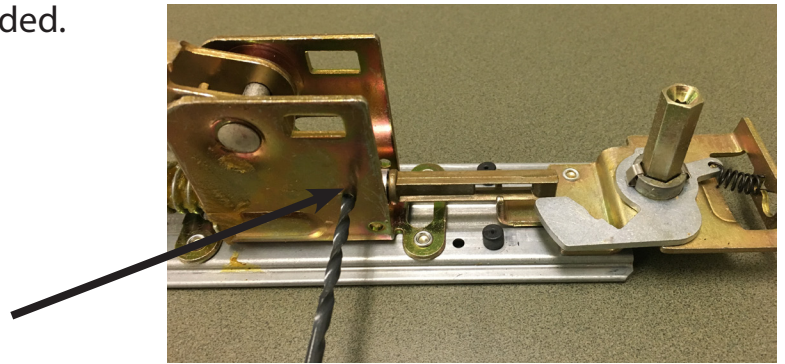


3. Slide the VDREXKIT-ED into the activating bracket.

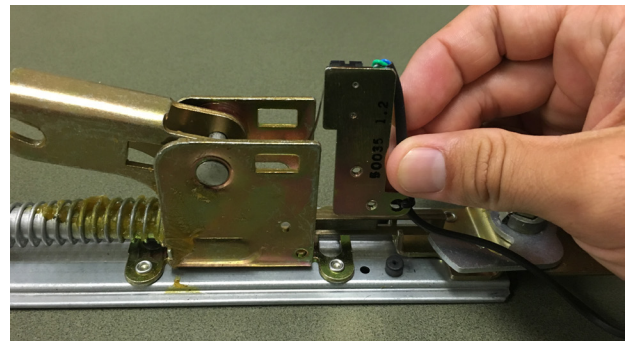

4. Use the screws provided and secure the kit to the bracket.

(DO NOT OVER TIGHTEN THE SCREWS).

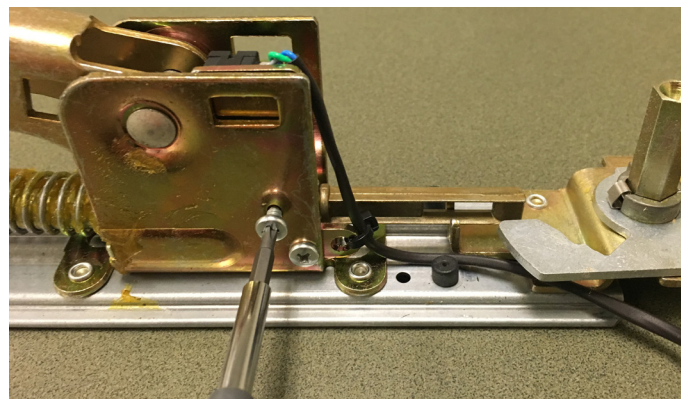

5. Test switch for correct operation.