


Ethnicraft

ASSEMBLY INSTRUCTIONS FOR TABLE INSTALLATION

GEOMETRIC MEETING TABLE - VARNISHED OAK


CODE	DESCRIPTION
53061	GEOMETRIC MEETING TABLE - VARNISHED OAK - WITH CABLE MANAGEMENT - 313/140/76

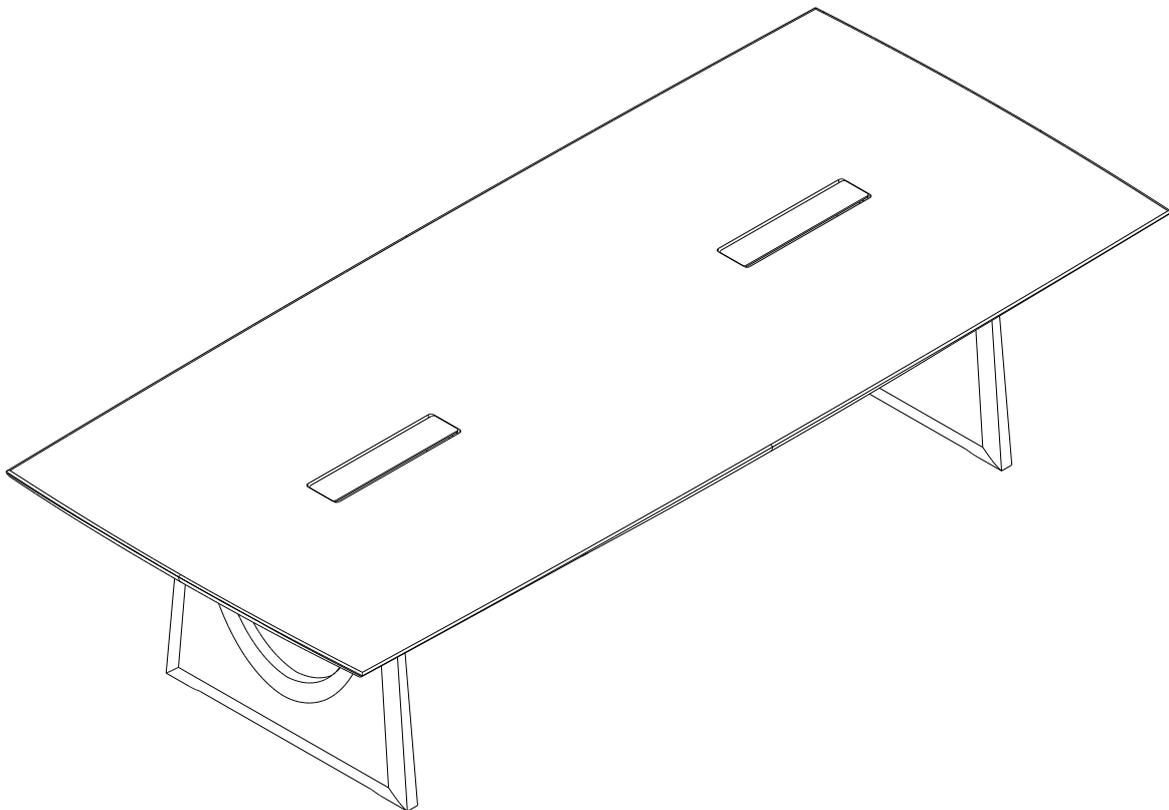

GEOMETRIC MEETING TABLE - VARNISHED OAK ASSEMBLY INSTRUCTIONS FOR TABLE INSTALLATION




NOTE

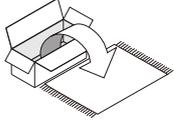


- CAREFULLY OPEN THE CARTON,
- REMOVE CONTENTS AND LAY OUT ON CARPET OR THE PACKAGING CARTON BOX OR OTHER PROTECTIVE SURFACE TO AVOID DAMAGE.
- CHECK PACKAGE CONTENTS TO ASSURE ALL THE NECESSARY HARDWARE AND PARTS ARE RECEIVED UNDAMAGED.
- DO NOT USE DAMAGE OR DEFECTIVE PARTS/HARDWARE.
- CONTACT ETHNICRAFT FOR ANY MISSING PART AND/OR HARDWARE.



- READ THE ASSEMBLY INSTRUCTION BEFORE INSTALLATION AND CAREFULLY FOLLOW THE INSTRUCTION GIVEN.
- SEEK THE ADVICE OF A PROFESSIONAL IF YOU ARE NOT FAMILIAR WITH THESE INSTALLATIONS OR HAVE ANY DOUBTS ABOUT THE SAFETY OF THIS INSTALLATION.




- IT IS ADVISABLE TO DO THIS ASSEMBLY WITH MINIMUM OF 3 PERSONS.

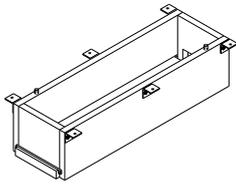

C CABLE MANAGEMENT BOX 2 pieces


CODE	DESCRIPTION
P4967	CABLE MANAGEMENT BOX

PARTS TO ASSEMBLE

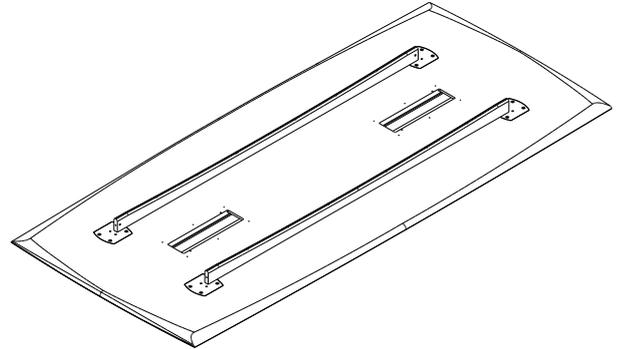

A TABLE TOP 1 piece

CODE	DESCRIPTION
P4965	TABLE TOP

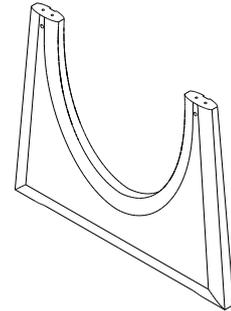

B LEG 2 pieces

CODE	DESCRIPTION
P4966	LEG

HARDWARE ENCLOSED

		
H0882 SCREW M8x50mm (8pcs)	H2055 SCREW M6x60mm (4pcs)	H0897 WOOD SCREW 4,5x20mm (12pcs)

TOOLS ENCLOSED

(Included in package)

	
H0745 L KEY 4 (1pc)	H0880 L KEY 5 (1pc)

TOOLS REQUIRED


(Not Included in package)

	
FLATHEAD SCREWDRIVER	PHILLIPS SCREWDRIVER

SYMBOLS



DIRECTION



NUMBER OF
PERSONS NEEDED




USE HAND



USE FLATHEAD SCREWDRIVER
TO TIGHTEN




USE L KEY
TO TIGHTEN

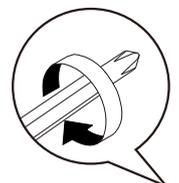

USE PHILLIPS SCREWDRIVER
TO TIGHTEN




A REMOVING METAL PLATES

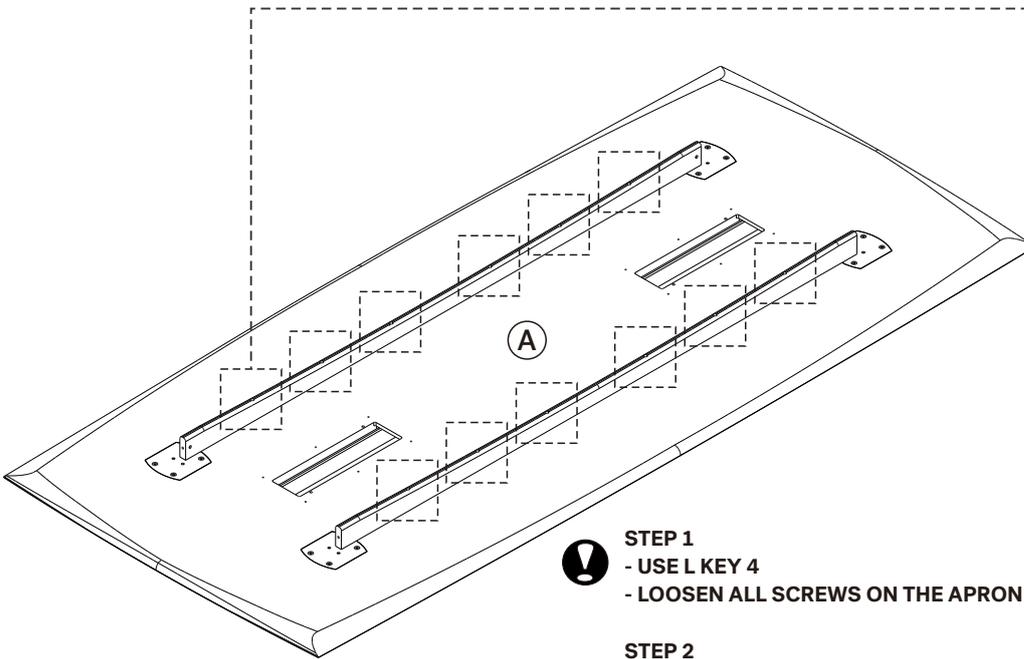


STEP 1
- USE L KEY 4
- LOOSEN ALL SCREWS ON THE APRON

STEP 2
- USE L KEY 5
- REMOVE ALL SCREWS FROM THE METAL PLATE, BUT DO NOT THROW AWAY, SCREWS WILL BE USED IN STEP C


STEP 3
- SLIGHTLY LIFT THE APRON
- REMOVE THE METAL PLATE

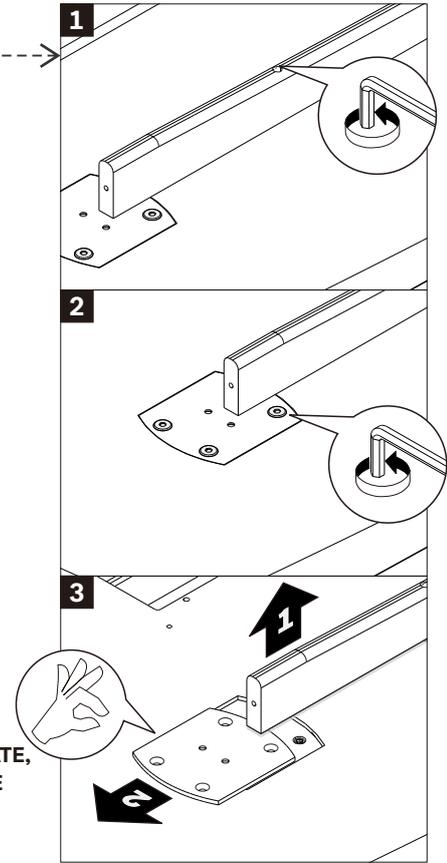

B INSTALLING METAL PLATES TO THE LEGS

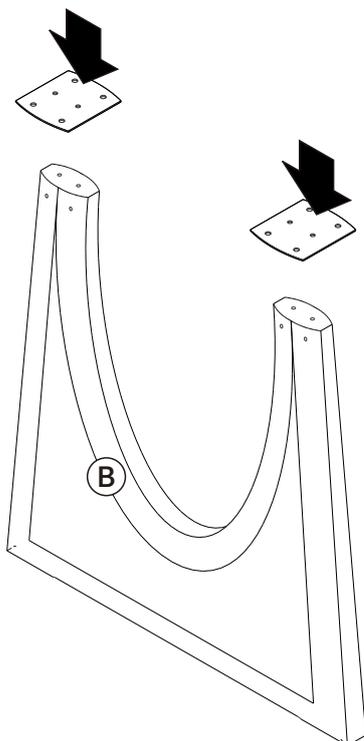



FIT SCREW INTO BARREL NUT USING
FLATHEAD SCREWDRIVER

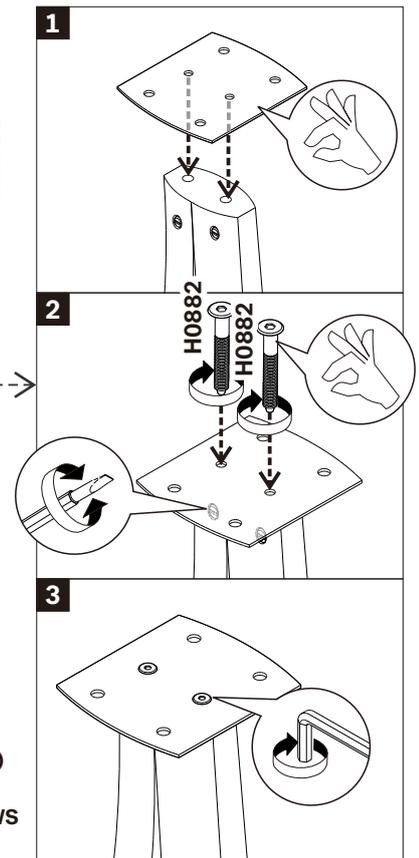

- USE METAL PLATE (4X)
- USE SCREW M8x50mm (8X)
- USE L KEY 5 TO TIGHTEN
- TIGHTEN FULLY ALL SCREWS





C INSTALLING THE LEGS

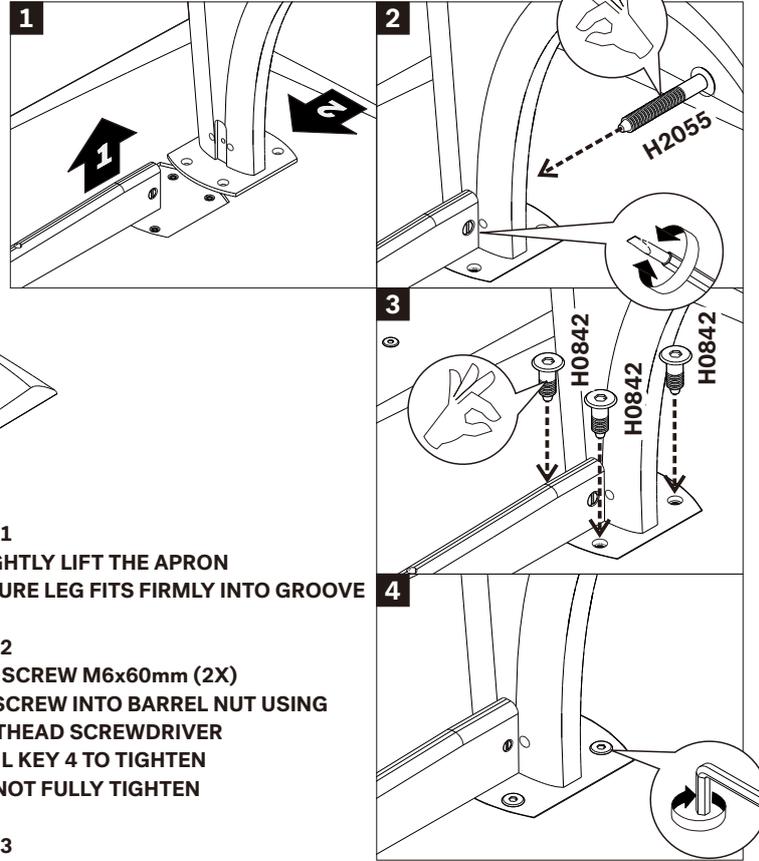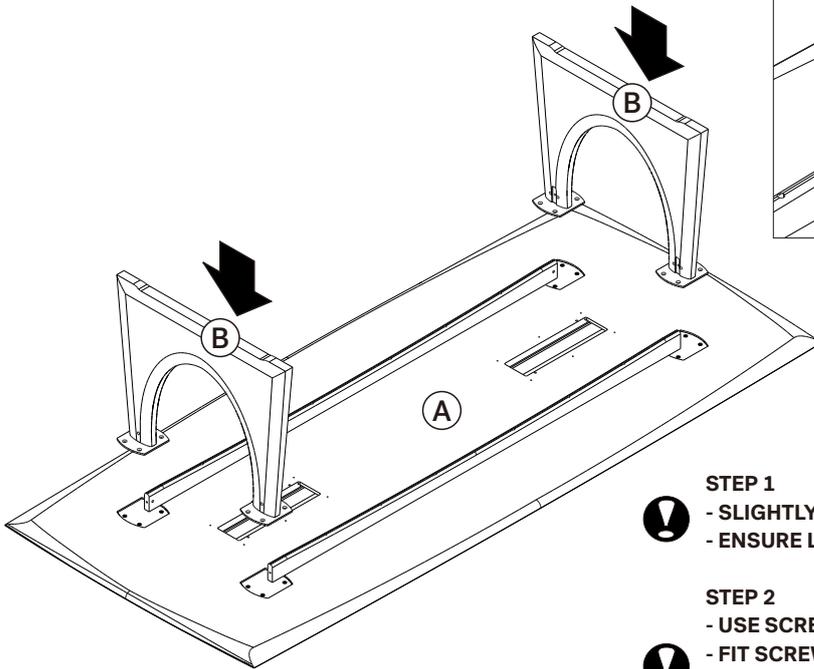


- STEP 1**
- SLIGHTLY LIFT THE APRON
 - ENSURE LEG FITS FIRMLY INTO GROOVE
- STEP 2**
- USE SCREW M6x60mm (2X)
 - FIT SCREW INTO BARREL NUT USING FLATHEAD SCREWDRIVER
 - USE L KEY 4 TO TIGHTEN
 - DO NOT FULLY TIGHTEN
- STEP 3**
- USE SCREW M8x16mm (8X)
 - USE L KEY 5 TO TIGHTEN
 - DO NOT FULLY TIGHTEN

D INSTALLING CABLE MANAGEMENT BOXES

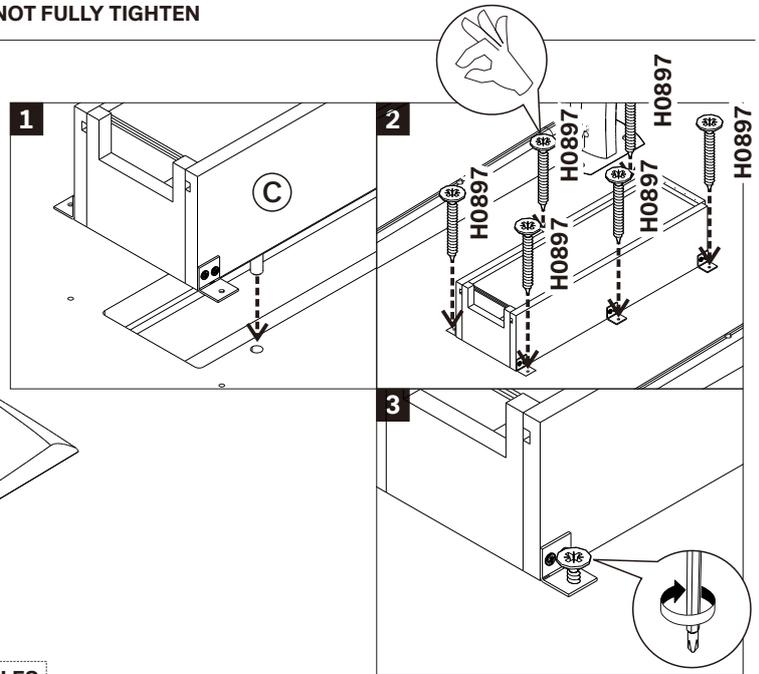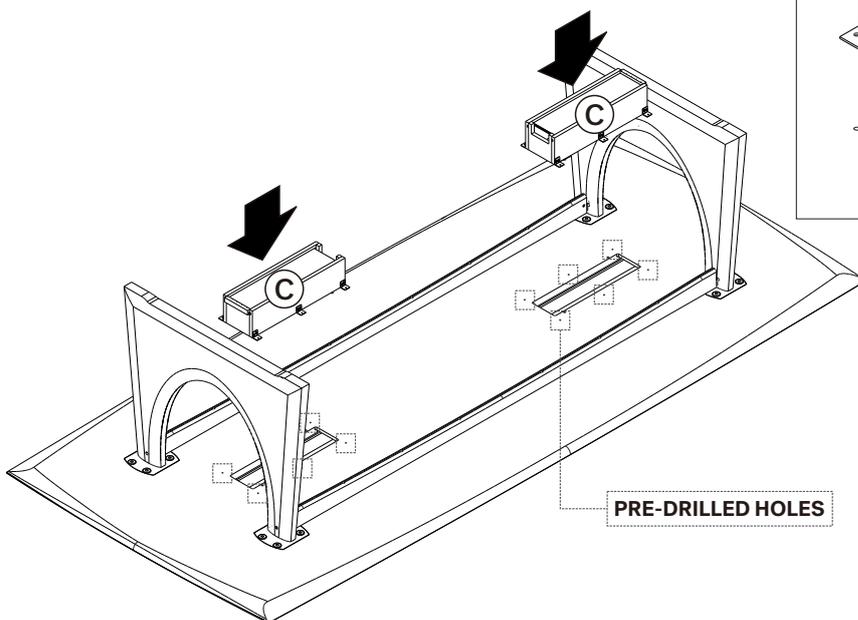

- USE WOOD SCREW 4,5x20mm (12X)
- TIGHTEN FULLY ALL SCREWS USING PHILLIPS SCREWDRIVER


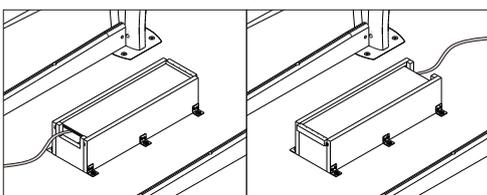


- CABLE MANAGEMENT BOXES CAN BE INSTALLED IN 2 DIRECTIONS AS PREFERRED, AND DEPENDING ON THE PLUG LOCATION ON THE WALL/FLOOR


GEOMETRIC MEETING TABLE - VARNISHED OAK ASSEMBLY INSTRUCTIONS FOR TABLE INSTALLATION



E RE-TIGHTEN ALL SCREWS

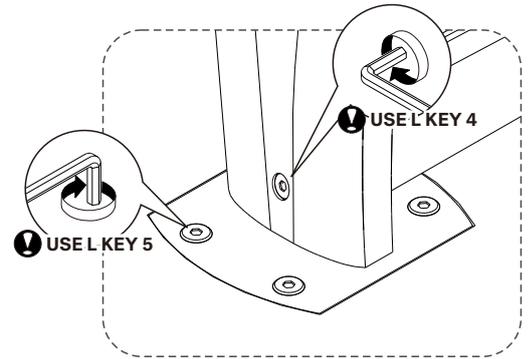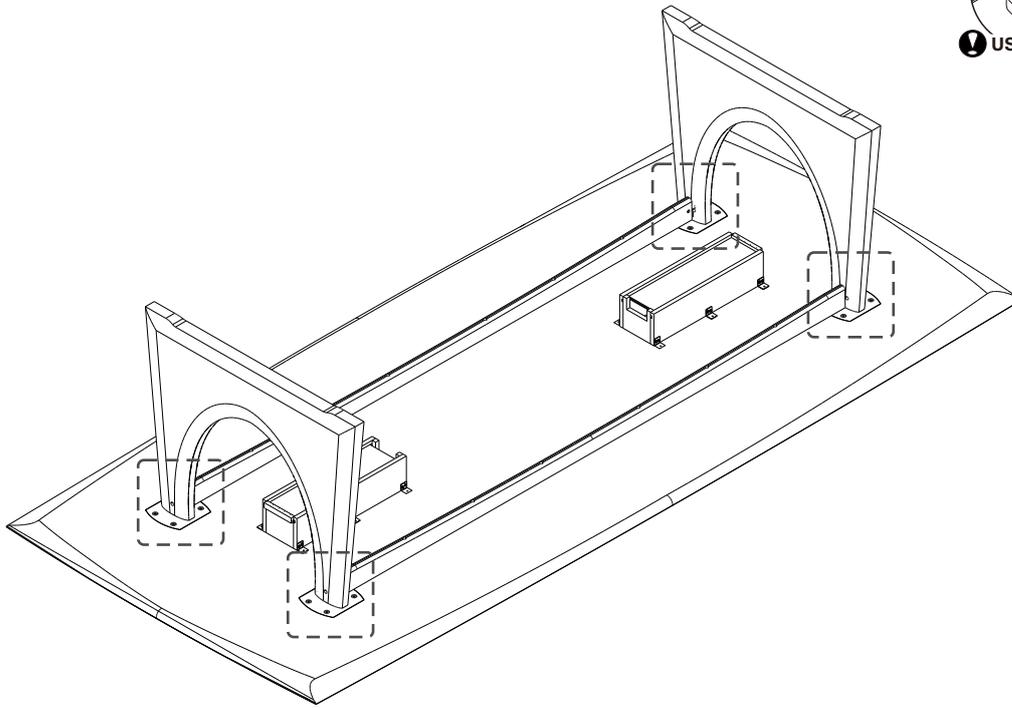

TIGHTEN FULLY

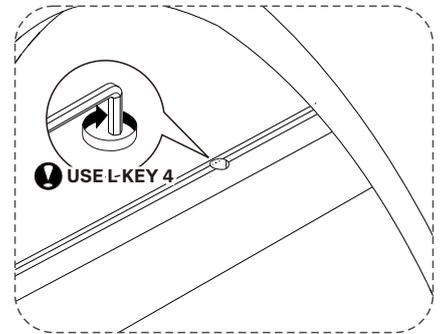

TIGHTEN FULLY

F FINISH

