

# 335 Vent Assembly

Updated Tuesday, January 3rd, 2012

## Basic Installation




**1** Unclip the 3 top clips of the vent as shown. You can simply put pressure between the clips and pull forward.





**2** Unclip the front clip on the right side of the vent and flex the front of the vent forward.



**3** Pull down and forward until the bottom clips release and the entire front cover of the vent will come off.

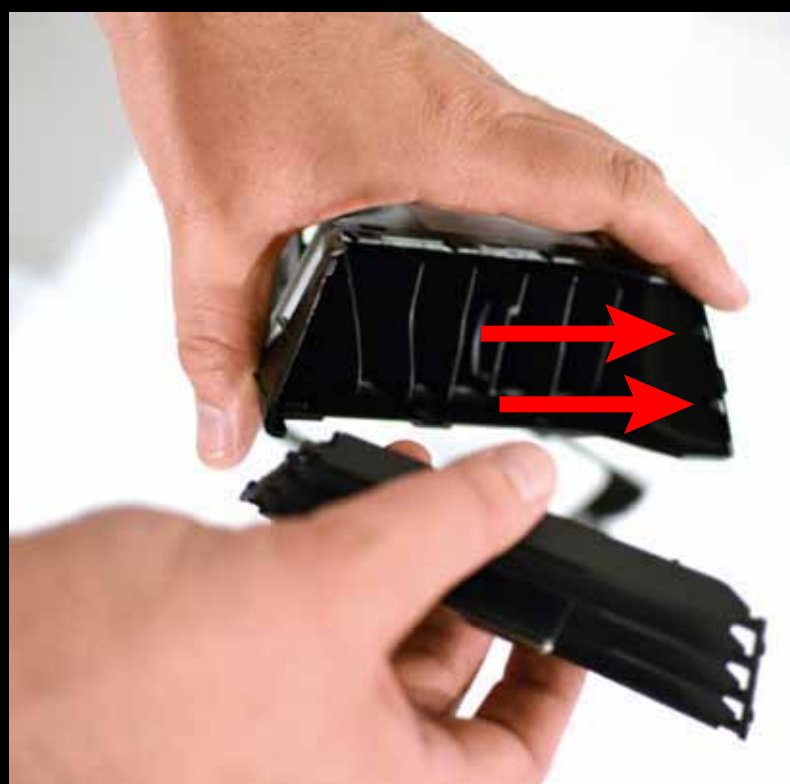

**4** Unclip and remove the vent slats from the vent. Also unclip the inner vent slats from the tube. You can flex the vent vertically and release them.

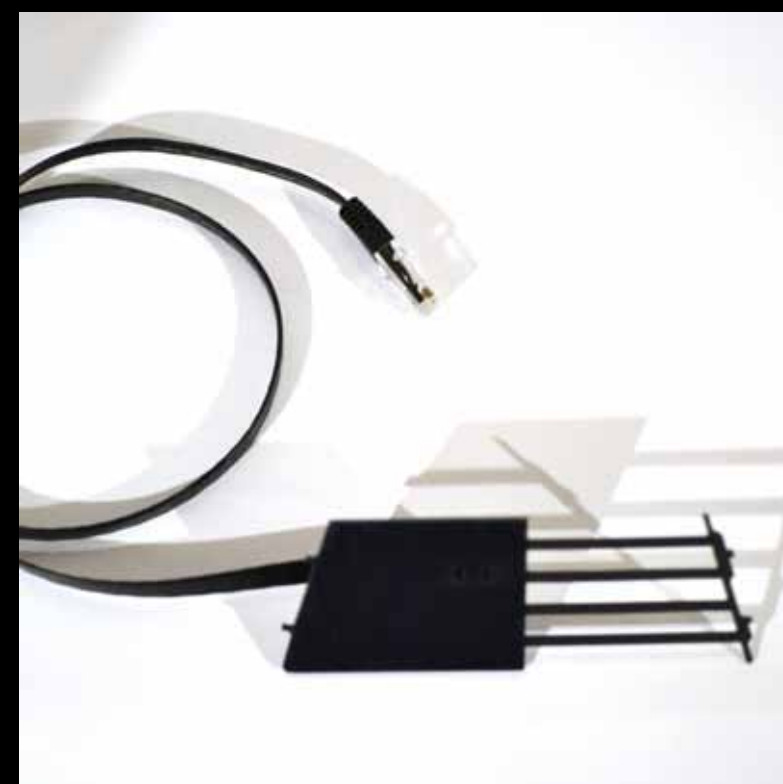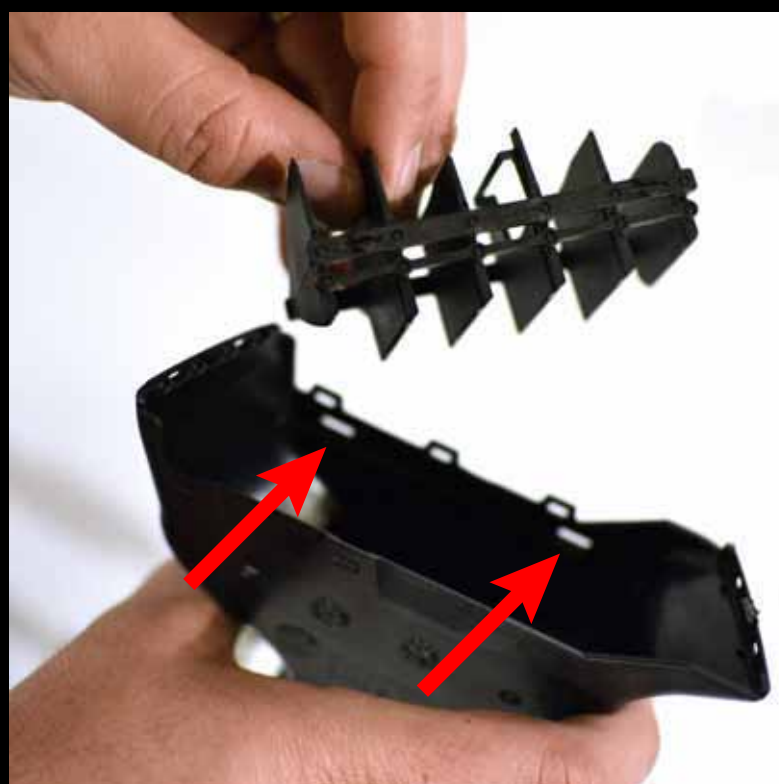


**5** Feed the cable from the display through the vent and out the rear left side.



The cable is flat as not to interfere with the vent functions and exit through the back of the vent without any cutting.



**6** Insert the display into the vent tube and secure its aluminum tabs into the 4 slots, 2 on each side. Feed the excess cable out the rear of the vent.

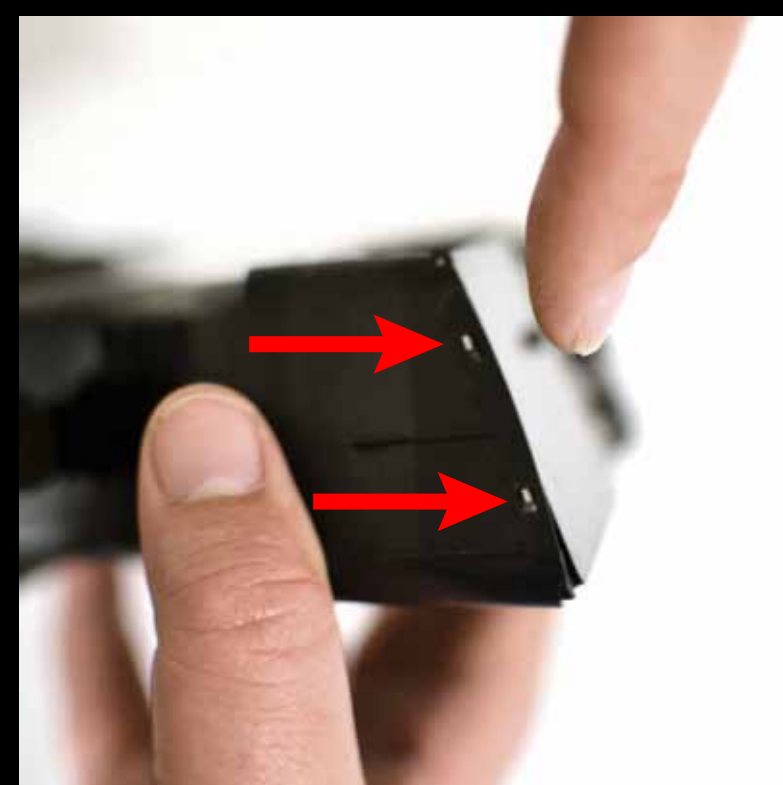



**7** Re-attach the vent face. **BOTTOM FIRST**, after clipping the bottom side, then clip in the top.



**8** **Installation complete!**  
Please refer to the [gauge usage and configuration guide](#) for an explanation of features.  
If you have additional questions, email us at [support@p3cars.com](mailto:support@p3cars.com)