


STRUCTURAL TUBE FRAME

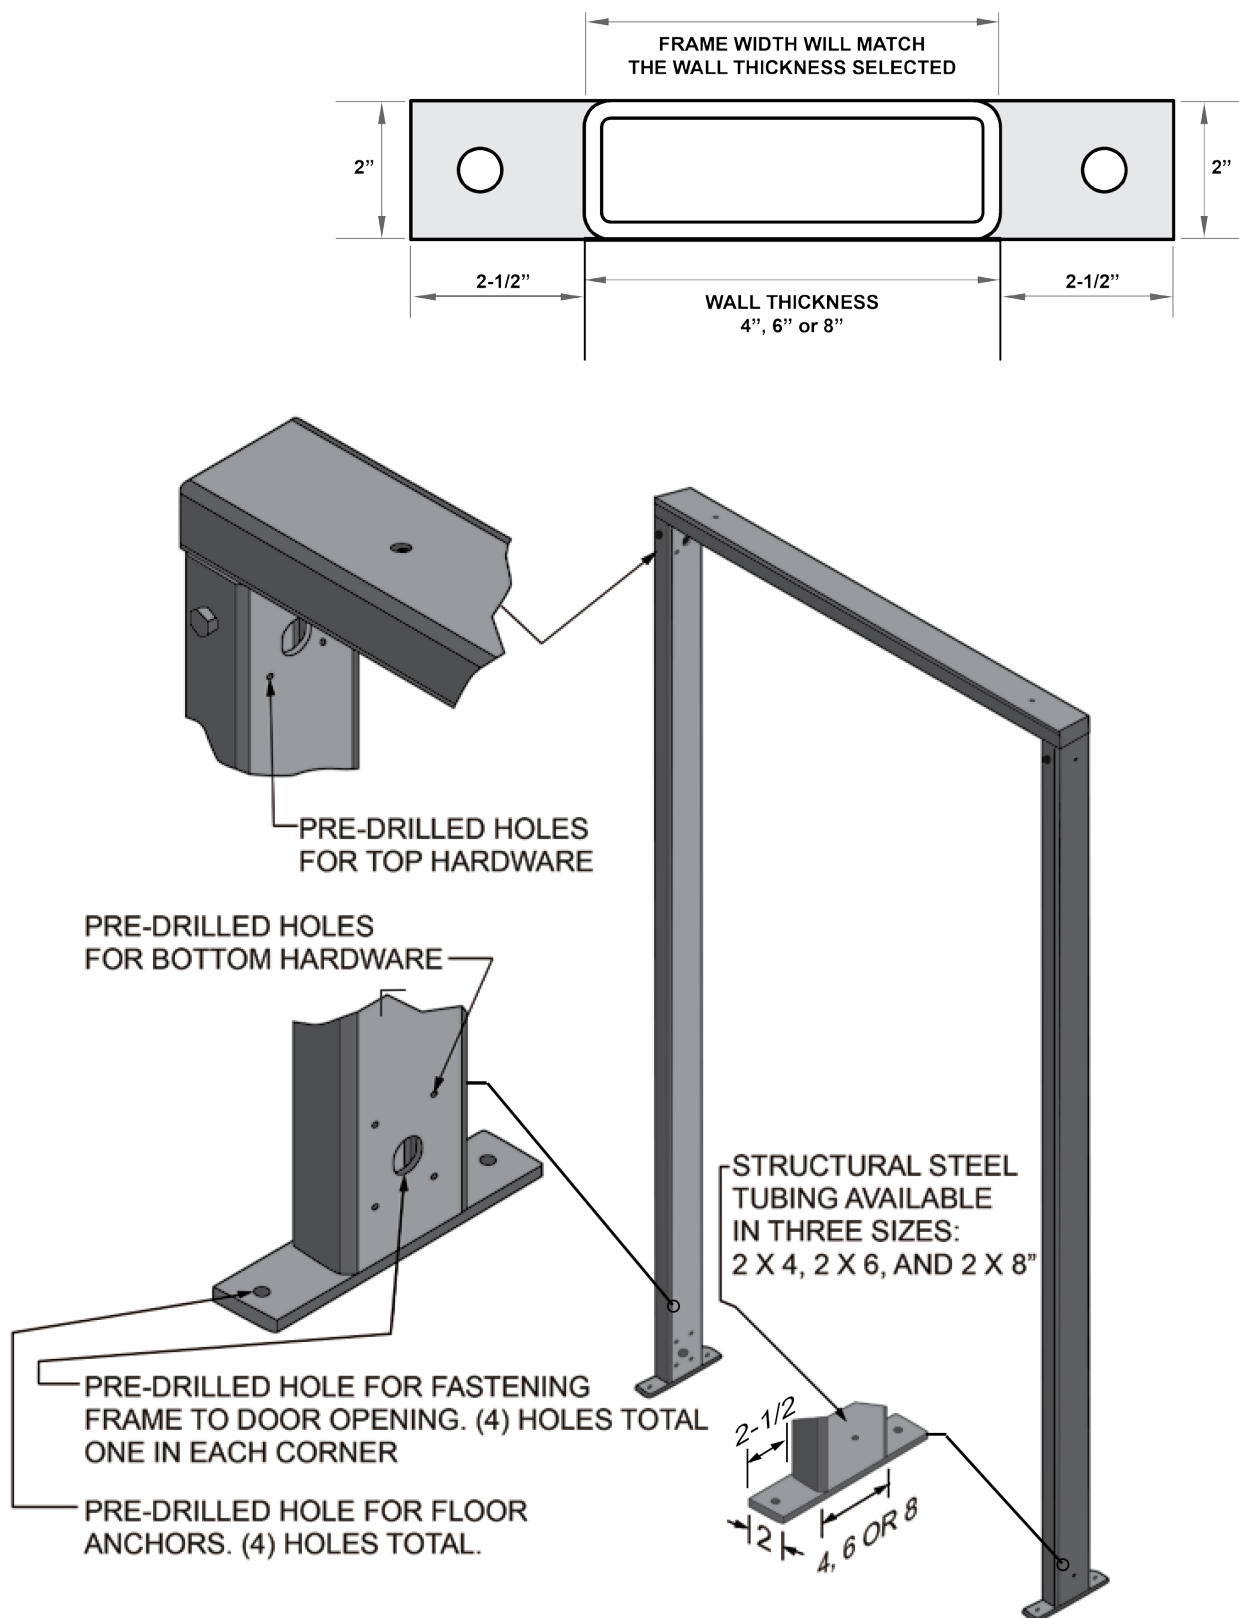

ROUGH OPENING WIDTH = FINISHED OPENING WIDTH + 4-1/4"
ROUGH OPENING HEIGHT = FINISHED OPENING HEIGHT + 2-3/16"