


EZ-TILT SNEEZE GUARD ASSEMBLY/INSTALLATION GUIDE

Kit Includes:

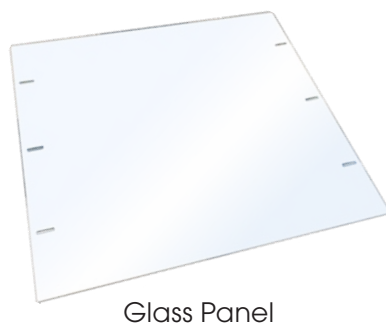

STEP 1

- Place Side Frames onto roller grill with flanges hanging over back of roller grill.



STEP 2

- Screw Back Panel into place with four thumb nuts making sure everything is aligned and properly tightened.




STEP 3

- Screw Brace Bar into place with four thumb nuts. This will attach to the back of the Side Frames, and the channel will face the front of the roller grill.



STEP 4

- Pivot top of EZ-Tilt Side Frames to front. It is recommended to have **TWO PEOPLE** to lift the Glass Panel on top of the side frames. Align glass with edge of side frames and screw on the six pucks tightly.

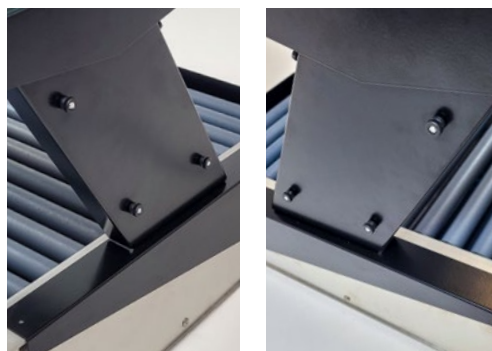

STEP 5

- Cover the bolts on the Side Frames with thumb nuts.



STEP 6

- Place the Tray Organizer on top of the EZ-Tilt sneeze guard glass making sure to align holes on the middle pucks. The slats are removable to provide changes to the width of each pocket as needed.