

KIT INCLUDES:

This instruction guide is for basic assembly steps for the PanelRak system. Steps are the same, but sizes and quantities of parts may vary.



Allen Wrench



Screws
(quantity varies)



Nuts
(quantity varies)



Back Panels



Left Fin



Right Fin

Step 1: Identify parts: Confirm all parts are ready for your assembly.

Step 2:

Align panels

Lay all panels face down on flat surface, in desired configuration. Make sure all slats are running horizontally. Repeat as needed depending on configuration.



Step 3:

Connect panels

Start by hand-tightening all screws on back panels. Once hand-tightened, use included Allen wrench to fully tighten screws until snug.



Step 4:

Align side fins to panels

Lay connected back panel face down with one edge overhanging off the countertop. Connect side fins to back panel by hand-tightening screws into place. *Note: Foot should sit under panel.



Step 5:

Connect fins to panels


Tilt unit upright and secure second fin by hand-tightening screws. Once hand tightened, use included Allen wrench to fully tighten screws until snug.



Step 6:

Insert baskets

Starting at the bottom, install baskets by inserting tabs into horizontal slots. Note that screws are not necessary to secure baskets into place.

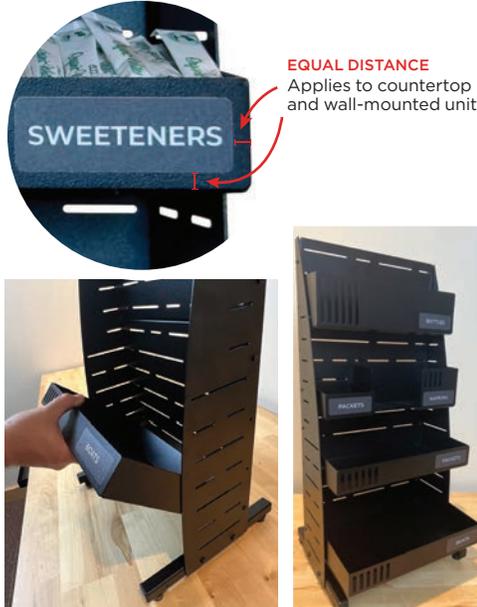

IF YOU HAVE A HEADER

Step 1:

Align header on top of back panels

Align screw holes on header with holes on PanelRak back panels. Once aligned, hand-tighten all screws.



Step 2:

Secure screws with Allen wrench

Once hand-tightened, use included Allen wrench to fully tighten screws until snug.



VISIT PANELRAK.COM
TO LEARN MORE