

KIT INCLUDES:

This instruction guide is for basic assembly steps for the PanelRak system. Steps are the same, but sizes and quantities of parts may vary.



RECOMMENDED TOOLS:



Step 1:

Identify parts

Confirm all parts are ready for your assembly.



Step 2:

Align panels


Lay all panels face down on flat surface, in desired configuration. Make sure all slats are running horizontally. Repeat as needed depending on configuration.



Step 3:

Connect panels

Start by hand-tightening all screws on back panels. Once hand-tightened, use included Allen wrench to fully tighten screws until snug.

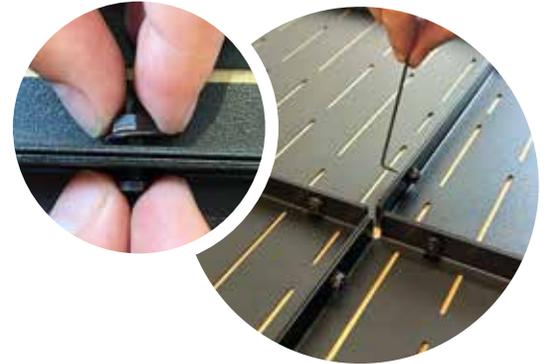

Step 4:

Ensure back panel is level

Adjust the left and right side height so that the overall back panel is level with counter. *It is recommended to have someone hold the panel in place for Step 5.



Step 5:

Drill pilot holes and secure to wall surface

Drill pilot holes in all 4 outside corners. Use provided screws to secure back panel into place.

After outside corners are secure, add additional screws near vertical seams (as desired). Screws should not be placed where basket tabs are needed.

*If screwing into wall, align screws with studs when possible.



Step 6:

Insert baskets, pegs and shelves

Place baskets, pegs and shelves per plan or to desired location. To insert, angle into slot and drop into place (as seen in photos above).



VISIT PANELRAK.COM
TO LEARN MORE



2551 Parmenter Street
Middleton WI 53562
1-800-419-9324