User's manual	Manual del usuario	Manuel de l'utilisateur
Customer Service US: 1-800-645-2986	Servicio de atención al Cliente US: 1-800-645-2986	Service à la clientèle Canada: 888-645-2986

Electric Workbench Upright Clamp Assembly Instructions

Model: B3260456

For use with electric workbench models: **800577, 800578, 800579, 800580**

When combined with upright kits: **433260, 433261, 606971, 606972**
Or upright model: **606940**

NOTE: Ensure that the length of the purchased upright kit matches the workbench length.

Tools Required:

- Electric drill
- M4 allen key drill attachment
- 1/4" drillbit (included)
- #2 Phillips head screwdriver

For the Upright:


- M6 allen key
- M13 wrench (or adjustable wrench)

CAUTION:

- Two people are recommended to assemble and install this product.
- Personal protective equipment (PPE) should be used when assembling this product.
- This manual is meant to provide a general overview for attaching a generic upright kit to an electric workbench, so the images/parts of the uprights shown in this manual may differ from the purchased kit.

1 Assemble the Clamps


- Assembly the two clamps. Rotate the handle so that the dome washer is in the lowest position.

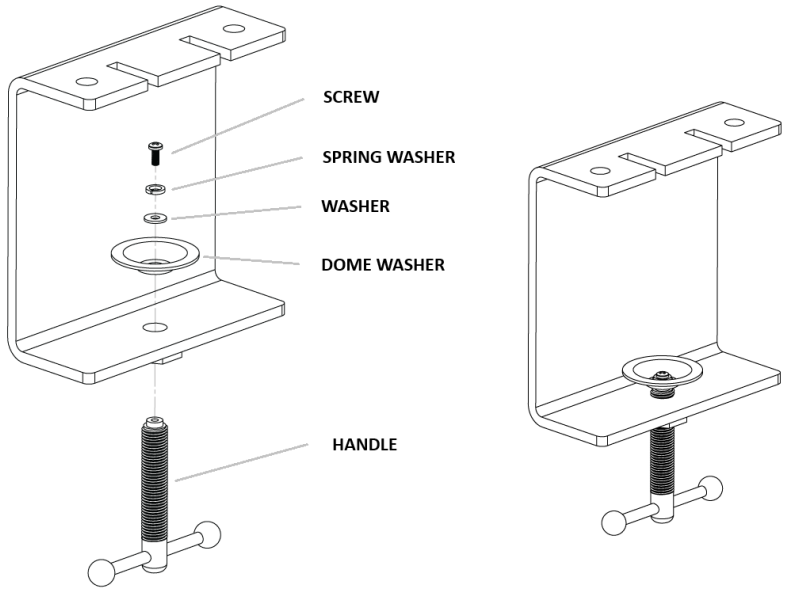

Product Description


2 Assemble the Workbench + Upright Frame

- Assemble the electric workbench following the instructions provided in the kit.
- Assemble the upright frame (the two uprights connected by two horizontal pieces) following the upright instructions. Note: The graphic shown below may different from the purchased product.
- Position the upright frame near the back of the workbench.

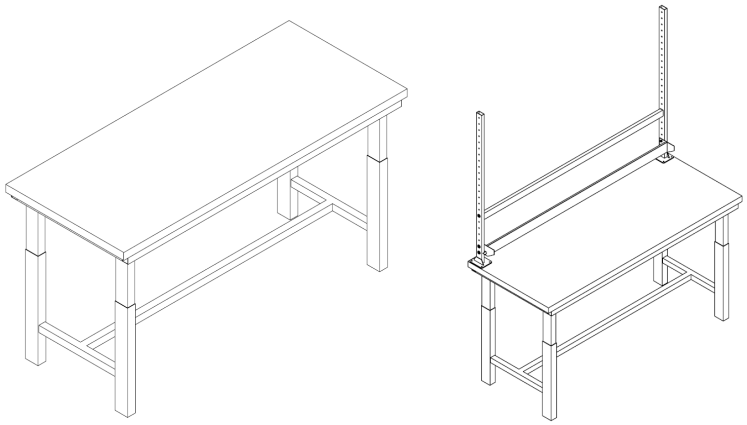


3 Install the Clamps

- Slide the clamp onto the base of the upright. The inside of the clamp should be as close to the edge of the workbench top as possible.
- The holes on the top of the clamp should be aligned with the rear-facing holes on the upright base.
- Tighten the handle on the clamp. Repeat for the other clamp on the other side.

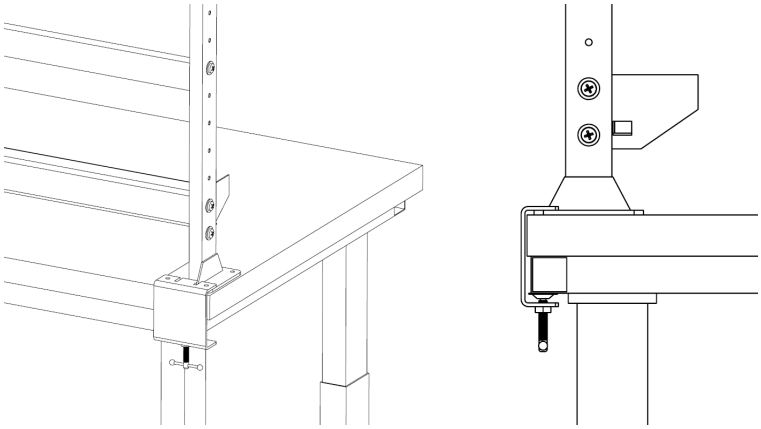

4 Drill Pilot Holes + Install Screws

- Use the provided 1/4" drillbit to drill pilot holes through the holes on the clamp, upright, and into the workbench top.
- Install the 4x provided wood screws on each upright to secure it to the top.

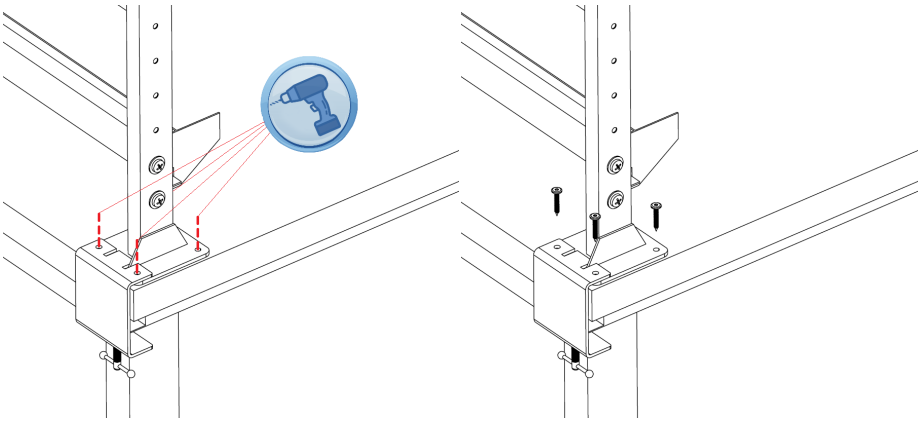

5 Complete upright assembly

- Complete the assembly of the upright kit following the part specific instructions.