

RS Door Pulls


VW - MK5

READ BEFORE INSTALLATION

The use of any Rennline product is the sole responsibility of the end user. Rennline Inc. accepts no responsibility for warranty voids or damage resulting from the use of these products. Due to the varying location of wiring harnesses and other components, carefully inspect any area prior to drilling. All Rennline products are intended for off road use only and should be installed by a qualified automotive technician.

Check to make sure you have all parts listed prior to installation.
If anything is missing contact us immediately.

- (1) Strap Assembly (left)
 - (1) 4.25" Strap
 - (1) Strap Lever
- (1) Strap Assembly (Right)
 - (1) 4.25" Strap
 - (1) Strap Lever
- (1) Facia Plate (left)
- (1) Facia Plate (Right)
- (6) #8 - 3/8" S/S Truss Head Screws - C93406A192

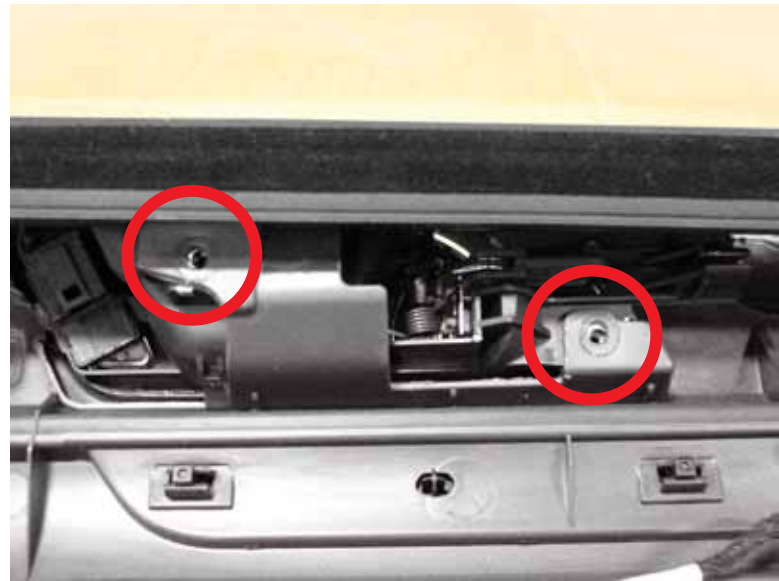

1. Remove the door card from the car door.
2. Remove the handle assembly from the door card by removing the 2 screws in photo 1.
3. Push the lever retaining pin out of the plastic handle assembly as show in photo 2 + 3. Note: you will only need the factory pins and the cable attachment for the strap install. The spring, spacer and factory lever will not be needed.

See next page.



4. Using a cut off wheel, hack saw blade, Jig saw or equivalent, cut the plastic assembly as shown in photo 5. This is just a clearance slot for the new strap lever so it does not need to be pretty.
5. Install the factory cable keeper to the strap lever using the factory pin and c-clip as shown in Photo 5.
6. Attach the strap assembly to the plastic housing using the factory pin as shown in photo 6.
7. Place the front facia plate into the plastic housing. Mark and drill the three mounting holes using a 3/16" drill bit as shown in photo 7. Secure the facia plate using the supplied truss head screws. Note: leave all three screws loose until desired facia position is achieved.
8. Actuate the handle a few times to make sure that there are no clearance issues, make adjustments as needed.
9. Re-install the handle assembly into door card and the door card into the car.
10. With the windows down, open and close the door a few times using the new handles to confirm that everything is working properly.
11. Enjoy your new Rennline product.

